


## Operating Instructions

2FC4...-1ST | 2FC4...-1PB | 2FC4...-1PN |  
2FC4...-1SC | 2FC4...-1CB

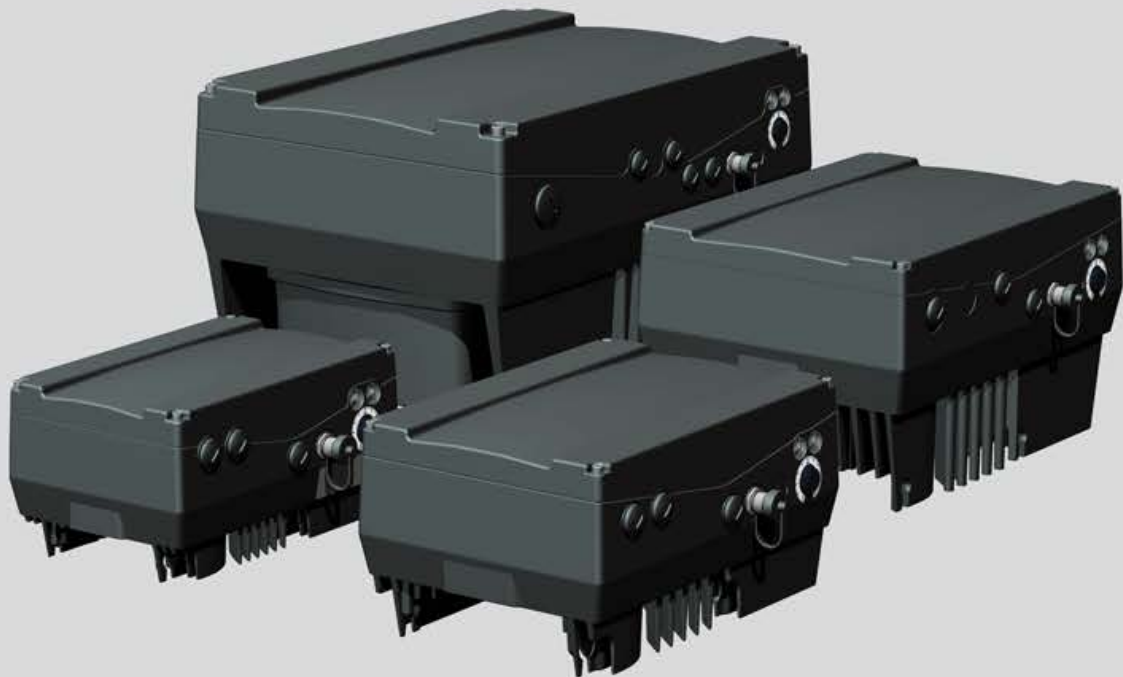

**G-Serie**  
**G-Series**

Seitenkanal  
Side Channel



**C-Serie**  
**C-Series**


Klaue  
Claw



<b>1</b>	<b>Overview of sizes .....</b>	<b>5</b>
<b>2</b>	<b>Further information .....</b>	<b>6</b>
2.1	Storing the documentation .....	6
2.2	Explanation of the terms and symbols .....	6
2.3	Changes in comparison to the previous version .....	7
2.4	Other valid documents .....	8
<b>3</b>	<b>Safety and responsibility .....</b>	<b>9</b>
3.1	Explanation of warning signs .....	9
3.2	Safety instructions .....	9
3.2.1	General information .....	9
3.2.2	Transport and Storage .....	10
3.2.3	Commissioning .....	11
3.2.4	Operation .....	12
3.2.5	Maintenance and inspection .....	12
3.2.6	Repairs .....	13
3.2.7	Disassembly and Disposal .....	14
3.3	Correct use of the equipment .....	14
3.4	Staff qualifications and training .....	14
3.5	Requirements of the operator .....	15
<b>4</b>	<b>Product identification .....</b>	<b>16</b>
4.1	Structure of the type description .....	16
4.2	PIN assignment MMI/ connection line (NEW) .....	16
4.3	Description of the drive control .....	17
4.4	CE marking .....	17
<b>5</b>	<b>Installation .....</b>	<b>18</b>
5.1	Safety instructions for installation .....	18
5.2	Installation requirements .....	18
5.2.1	Suitable ambient conditions .....	18
5.2.2	Suitable installation location for the motor-integrated drive control .....	19
5.2.3	Basic connection variations .....	19
5.2.4	Short-circuit and earth-fault protection .....	22
5.2.5	Wiring instructions .....	22
5.2.6	Preventing electromagnetic interference .....	24
5.3	Installation of the drive controller integrated in the motor .....	25
5.3.1	Mechanical installation of sizes A - C .....	25
5.3.2	Mechanical installation of size D .....	27
5.3.3	Power connection of sizes A - C .....	29
5.3.4	Power connection of size D .....	30
5.3.5	Connections for braking resistor .....	30
5.3.6	Control terminals .....	31
5.3.7	Wiring diagram .....	33
5.4	Installing the wall-mounted drive controller .....	34
5.4.1	Installation location that is suitable for wall mounting .....	34
5.4.2	Mechanical installation size A – C .....	35
5.4.3	Mechanical installation of size D .....	38
5.4.4	Power connection .....	43
5.4.5	Braking chopper .....	43
5.4.6	Control terminals .....	43

<b>6</b>	<b>Commissioning</b> .....	<b>44</b>
6.1	Safety information for commissioning .....	44
6.2	Communication .....	44
6.3	Block diagram .....	46
6.4	Commissioning steps .....	47
6.4.1	Start up the integrated drive control .....	47
6.4.2	Commission the drive control wall assembly and replacement .....	47
<b>7</b>	<b>Parameters</b> .....	<b>50</b>
7.1	Safety instructions for handling the parameters .....	50
7.2	General information on parameters .....	50
7.2.1	Explanation of operating modes .....	50
7.2.2	Structure of parameter tables .....	53
7.3	Application parameter .....	54
7.3.1	Basic parameters .....	54
7.3.2	Fixed frequency .....	59
7.3.3	Motor potentiometer .....	59
7.3.4	PID process controller .....	60
7.3.5	Analogue inputs .....	63
7.3.6	Digital inputs .....	65
7.3.7	Analogue output .....	65
7.3.8	Digital outputs .....	66
7.3.9	Relay .....	68
7.3.10	Virtual output .....	70
7.3.11	External error .....	71
7.3.12	Motor current limit .....	72
7.3.13	Blocking detection .....	73
7.4	Power parameters .....	75
7.4.1	Motor data .....	75
7.4.2	I <sup>2</sup> T .....	77
7.4.3	Switching frequency .....	78
7.4.4	Controller data .....	78
7.4.5	Square-law characteristic .....	79
7.4.6	Controller data for synchronous motor .....	80
7.4.7	Field bus .....	81
<b>8</b>	<b>Error detection and elimination</b> .....	<b>83</b>
8.1	Display of the LED flash codes for error detection .....	83
8.2	List of errors and system errors .....	84
<b>9</b>	<b>Disassembly and disposal</b> .....	<b>87</b>
9.1	Disassembly of the drive controller .....	87
9.2	Information on professional disposal .....	87
<b>10</b>	<b>Technical data</b> .....	<b>88</b>
10.1	General data .....	88
10.2	Derating of output power .....	89
10.2.1	Derating through increased ambient temperature .....	89
10.2.2	Derating due to installation altitude .....	90
10.2.3	Derating due to the clock frequency .....	91
<b>11</b>	<b>Optional accessories</b> .....	<b>92</b>
11.1	Wall-mounted adapter plate .....	92
11.2	Hand-held unit MMI, including 3m connection cable RJ9 to connector M12 .....	94
11.3	USB PC communication cable to connector M12/RS485 (integrated converted) .....	94

<b>12</b>	<b>Guidelines, norms and standards .....</b>	<b>95</b>
12.1	EMC limit classes .....	95
12.2	Classification acc. to IEC/EN 61800-3 .....	95
12.3	Standards and guidelines .....	95
12.4	Approval according to UL .....	96
12.4.1	UL Specification (English version) .....	96
12.4.2	Homologation CL (Version en française) .....	99

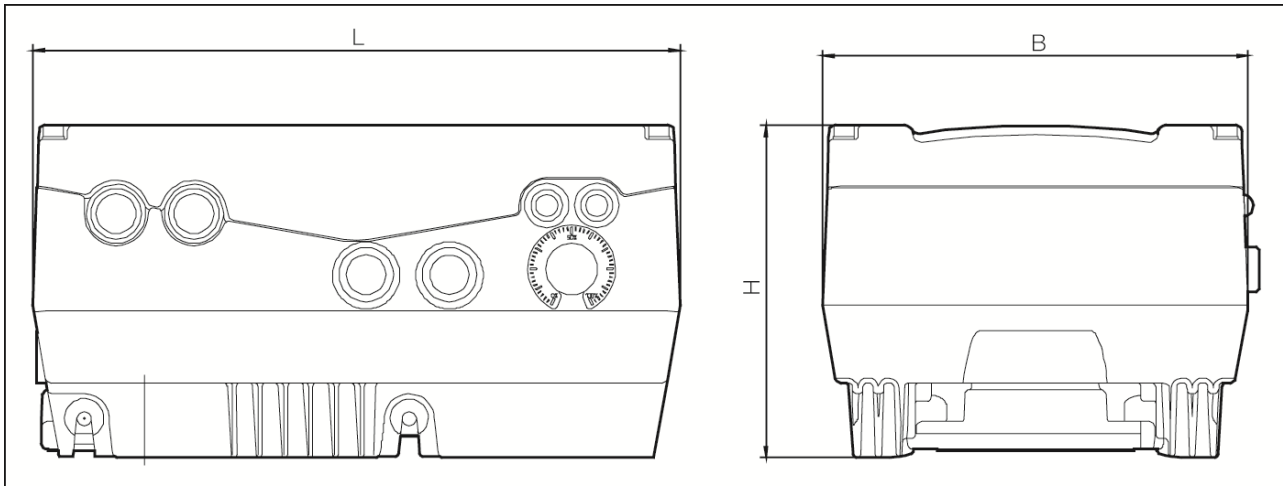

*Dimensional drawings*

The drive controllers are available in the following performance classes and use the size designations mentioned.

### Sizes

Size designation of integrated motor drive controller	MA	MB	MC	MD
Recommended motor power [kW]	1.5	2.2/3.0/4.0	5.5/7.5	11.0/15.0/ 18.5/22.0
Dimensions [L x W x H mm]	233 x 153 x 120	270 x 189 x 140	307 x 223 x 181	414 x 294 x 232





















### 2.1 Storing the documentation

Store this manual and all other applicable documents safely so they are available as and when required.

Provide the operator of the system with this manual so it is available as and when required.

### 2.2 Explanation of the terms and symbols

In these instructions symbols and terms will be used to mean the following.

Symbol	Explanation
	Requirement, pre-requisite
	One-step handling instructions
	Multi-step handling instructions
	Result
	Cross reference with page reference
	Additional information, tips
	Direction of rotation arrow
	Direction of conveyance arrow
	General warning sign (warning of risk of injury)
	Electrical voltage warning
	Danger of electric shock and electric discharge. After switching off, wait two minutes (discharge time of capacitors).
	Hot surface warning
	Disconnect prior to maintenance or repair
	Earth prior to use
	Observe the instructions
	Use foot protection
	Use hand protection
	Use eye protection
	Use head protection
	Use ear protection

Term	Explanation
Plant	Part provided by the user in which the vacuum pump/compressor is installed.
Vacuum pump/compressor	Ready to connect machine for the generation of a vacuum and/or overpressure. The vacuum pump/compressor consists of a compressor part and motor, as well as other accessories where applicable.
Motor	Asynchronous motor for driving the vacuum pump/compressor.
Compressor	Mechanical part of side-channel compressor without motor.
Assembly environment	Space in which the side-channel compressor is set up and operated (this may differ from the suction environment).
Drive control	Device for rotation speed control of the vacuum pump/compressor. The drive control can be mounted close to the motor (wall assembly) or integrated into the vacuum pump/compressor

### 2.3 Changes in comparison to the previous version

Changes compared with version 10.2014

- Graphics updated
- Error correction RJ11 (wrong) on RJ9 (correct)
- 4.2 PIN assignment MMI/connection line (NEW)
- 5.3.6 Control terminals
- 5.4.2 Mechanical installation size A – C
- 5.4.3 Mechanical installation size D (NEW)
- 6.2 Communication  
MMI in the cover (NEW)
- 6.4.2 Commission the drive control wall assembly and replacement  
Commissioning using PC and MMI in cover (NEW)
- 7.3.1 Basic parameters  
Parameter updated: 1,020; 1,054; 1,131; 1,132; 1,150; 1,180
- 7.3.2 Fixed frequency  
Parameter updated: 2,050
- 7.3.4 PID process controller  
Parameter updated: 3,060  
Parameter NEW: 3,072; 3,073; 3,074; 3,080
- 7.3.5 Analogue inputs  
Parameter NEW: 4,036/4,066; 4,037/4,067
- 7.3.8 Digital outputs  
Parameter updated: 4,150/4,170
- 7.3.9 Relays  
Parameter updated: 4,190/4,210
- 7.3.10 Virtual output (NEW)  
Parameter NEW: 4,230; 4,231; 4,232; 4,233; 4,234
- 7.3.11 External errors  
Parameter updated: 5,010/5,011
- 7.3.13 Blocking detection  
Parameter NEW: 5,082; 5,083; 5,200; 5,201
- 7.4.1 Motor data  
Parameter NEW: 33,016
- 7.4.4 Controller data  
Parameter deleted: 34,011; 34,012; 34,013  
Parameter updated: 34,021  
Parameter NEW: 34,020
- 7.4.7 Field bus  
Parameter updated: 6,060; 6,061; 6,062  
Parameter NEW: 6,070/6,071

- 8.2 List of errors and system errors  
Table of error detection
- 9 Disassembly and disposal (NEW)
- 9.1 Disassembly of the drive controller (NEW)
- 9.2 Information on professional disposal (NEW)

### 2.4 Other valid documents

All instructions that describe the use of the drive control and if applicable, further instructions of all accessory parts used, e.g.

<b>Document number</b>	<b>Purpose</b>
—	Vacuum pump/compressor operating manual
610.00260.40.010 *	Operating manual 2FC4...-1PB <b>OR</b>
610.00260.40.020 *	Operating manual 2FC4...-1PN <b>OR</b>
610.00260.40.030 *	Operating manual 2FC4...-1SC <b>OR</b>
610.00260.40.040 *	Operating manual 2FC4...-1CB
610.00260.40.600 *	MMI hand-held unit operating manual

\*according to the model option or accessories




Download of 3D files (.stp) for drive control and adapter plates under [www.gd-elmorietschle.com](http://www.gd-elmorietschle.com).

To parameterise the drive control, the parameter description is ready to be downloaded ([www.gd-elmorietschle.com](http://www.gd-elmorietschle.com)). The download contains all necessary information for correct parameterisation.



The manufacturer is not liable for damage caused by the failure to observe these instructions and the related documents.

## 3.1 Explanation of warning signs

Warning sign	Explanation
 <b>DANGER</b>	Danger that failure to observe the measures could lead to death or serious physical injuries.
 <b>WARNING</b>	Danger that failure to observe the measures could lead to death or serious physical injuries.
 <b>CAUTION</b>	Danger that failure to observe the measures could lead to minor physical injuries.
<b>NOTICE</b>	Danger that failure to observe the measures could lead to material damage.

## 3.2 Safety instructions

The following warnings, precautionary measures and comments are provided for your safety and serve to prevent damage to the drive control and the components connected to it. This chapter contains warnings and information that are generally applicable when handling drive controls. They are split into general information, transport and storage, start-up, operation, repairs and dismantling & disposal.

Specific warnings and comments that apply to specific activities can be found at the start of the appropriate chapters and are repeated and added to at various critical points in these chapters.

Please read this information carefully as it is provided for your personal safety and will also prolong the life of the drive control and connected devices.

### 3.2.1 General information



#### **WARNING**

**This drive controller carries dangerous voltages and controls rotating mechanical parts which may be dangerous!**  
**Disregarding the warnings or failure to follow the instructions contained in this manual may lead to death, serious bodily injury or substantial property damage.**

- ① Only qualified personnel should work on this drive controller. These personnel must be thoroughly familiar with all safety instructions, installation, operation and maintenance procedures contained in this manual. The smooth and safe operation of the drive controller depends on proper handling, installation, operation and maintenance.



#### **WARNING**

**Risk of fire or electric shock!**  
**Improper use, modifications and the use of spare parts and accessories that are not sold or recommended by the manufacturer of the drive controller can cause fire, electric shock and bodily injury.**

- ① The cooling element of the drive controller and motor can reach temperatures of above **70°C** [158 °F]. During installation, sufficient spacing between adjacent components should be maintained. Before working on the drive controller or motor, required cooling time must be ensured. If necessary, a protection against accidental contact should be installed.

### *NOTICE*

The drive controller may be operated safely only if the required ambient conditions are met, see Suitable ambient conditions [→ 18].

### *NOTICE*

This operating manual must be kept in the vicinity of the equipment, so as to be readily accessible to all users.

### *NOTICE*

Please read these safety instructions and warnings carefully and all the warning labels attached to the equipment before installing and commissioning. Make sure that the warning labels are kept in a legible condition and replace missing or damaged labels.

### 3.2.2 Transport and Storage

#### *NOTICE*

**Risk of damage to the drive controller!**

**The drive controller can be damaged in the case of non-compliance with the instructions and destroyed during subsequent handling.**

- ① The smooth and safe operation of this drive controller requires proper mounting, installation and assembly as well as careful operation and maintenance. The drive controller must be protected during transport and storage against mechanical shocks and vibration. The protection against excessive temperatures (see Technical data [→ 88]) must be guaranteed.

### 3.2.3 Commissioning



 **DANGER**

**Risk of injury due to electric shock!**

**The non-observance of warnings can result in severe bodily injury or substantial property damage.**

1. Only hard-wired grid connections are permitted. The device must be earthed (DIN EN 61140; VDE 0140-1).
  2. The drive controls may have contact currents > 3.5mA. According to DIN EN 61800-5-1 chapter 4.3.5.5.2, an additional protective earth conductor with the same cross section as the original earth conductor must be attached. The possibility of connecting a second protective earth conductor is located underneath the power supply (with marked ground symbol) on the outside of the device. For the connection, a suitable M6x15 screw (torque: **4.0 Nm** [2.95 ft lbs]) is included in the scope of delivery of the adapter plates.
  3. When using alternating current drive controls, conventional FI circuit breakers of type A, also known as RCDs (residual current-operated protective devices) are not permitted for the protection of direct or indirect contact! As per DIN VDE 0160, section 5.5.2 and EN 50178, section 5.2.11.1, the FI circuit breaker (RCD type B) must be suitable for all types of current.
  4. The following terminals can also lead to dangerous voltages when the engine is at a standstill:
    - ✓ the mains connection terminals X1: L1, L2, L3
    - ✓ the motor connection terminals X2: U, V, W
    - ✓ the connection terminals X6, X7: Relay contacts relays 1 and 2
    - ✓ the PTC connection terminals T1/T2
  5. When using different voltage levels (e.g. +24V/230V), always ensure that lines do not cross! Furthermore, the operator must ensure that the applicable regulations are adhered to (e.g. doubled or reinforced insulation according to DIN EN 61800-5-1).
  6. The drive control contains electrostatically sensitive assemblies. These assemblies can be destroyed due to improper handling, therefore safety measures against electrostatic loading must be adhered to when work must be done on these assemblies.
-

### 3.2.4 Operation



#### DANGER

**Risk of injury from electric shock or restarting motors!**

**The non-observance of warnings can result in severe bodily injury or substantial property damage.**

① Observe the following instructions during operation:

- ✓ The drive controller operates at high voltages.
- ✓ When operating electrical equipment, certain parts of the equipment carry dangerous voltage.
- ✓ Emergency stop devices according to EN 60204-1:2006 must remain operative in all operating modes of the control unit. Resetting the emergency stop device must not lead to uncontrolled or undefined restart.
- ✓ Safe disconnection from the mains requires synchronous and all-pole disconnection of the mains supply line to the drive controller.
- ✓ For devices with single-phase supply and for the BG D (11 to 22 kW), at least 1 to 2 min break should be kept between successive connections to the mains.
- ✓ Certain parameter settings may cause the drive controller to restart automatically after a power failure.

#### **NOTICE**

**Risk of damage to the drive controller!**

**The drive controller can be damaged in the case of non-compliance with the instructions and destroyed during subsequent handling.**

1. Observe the following instructions during operation:
2. For a functioning motor overload protection, the motor parameters must be configured correctly.
3. Ensure the motor overload protection via a PTC. In addition, the drive control provides an internal motor protection. See also parameter 33.100 and 33.101. According to the presetting, the I<sup>2</sup>T is OFF and must be activated during operation without PTC.
4. The drive controller must not be used as an 'emergency stop device' (see EN 60204-1:2006).

### 3.2.5 Maintenance and inspection

Maintenance and inspection of the drive controllers must be performed only by electrically certified, qualified person. Changes in hardware and software, unless explicitly described in this manual, may only be performed by the manufacturer.

#### **Cleaning the drive controllers**

The drive controllers are maintenance-free when operated properly. In a dusty environment, the cooling ribs on the motor and drive controller must be cleaned regularly. For equipment that is equipped with integrated fans, option for BG C, series in BG D, cleaning with compressed air is recommended.

#### **Measurement of insulation resistance on the control unit**


Insulation test at the input terminals of the control card is not permitted.

## Measurement of insulation resistance on the power unit

In the course of the series testing, the power unit of the drive controller is tested by applying 1.9 kV.

Should the measurement of insulation resistance be necessary in a system check, then this can be carried out under the following conditions:

- an insulation test can be performed only for the power unit,
- to avoid impermissible high voltages, all connecting cables of the drive controller must be disconnected prior to the test,
- a 500 V DC insulation tester is used.

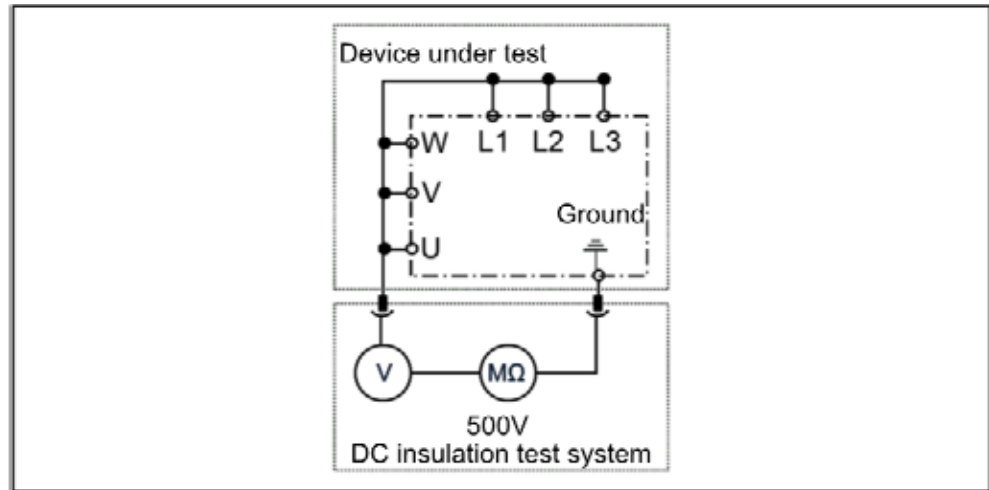

*Insulation test on the power unit*

## Pressure test on a drive controller

A pressure test of the drive controller is not allowed.

### 3.2.6 Repairs



**⚠ DANGER**

**Danger of injury through electric shock!**

**Non-observance of warnings may result in serious injury or damage.**

- ① When the drive control is disconnected from the mains voltage, live device parts and connections may not be touched immediately in case the condensers are still live.

**NOTICE**

**Risk of damage to the drive control!**

**If the information is not observed, the drive control could be damaged and destroyed during subsequent start-up.**

- ① Repairs to the drive control may only be performed by the manufacturer.

### 3.2.7 Disassembly and Disposal

---

**Screw and snap-on connections are easy to release and allow the drive control to be dismantled into its individual parts. These parts can be sorted for recycling. Please comply with local regulations during disposal.**

---

**Components with electronic parts may not be disposed of along with normal household waste. They have to be collected separately with used electrical and electronic equipment in accordance with applicable legislation.**

---

### 3.3 Correct use of the equipment

During installation in machinery, commissioning of the drive controller (i.e. starting of intended operation) is prohibited until it is proven that the machine complies with the regulations of the EC Directive 2006/42/EC (Machinery Directive); EN 60204-1:2006 is to be observed.

Commissioning (i.e. starting of intended operation) is only permitted if the EC Directive 2004/108/EC (EMC Directive) allows it.

The harmonised standards of the series EN 50178:1997 in conjunction with EN 60439-1/A1:2004 shall be applied to this drive controller.

This drive controller is not approved for operation in potentially explosive areas!

Repairs may only be carried out by authorised repair workshops. Unauthorised interventions can lead to death, bodily injury and property damage. The warranty provided by the manufacturer expires in this case.

External mechanical loads, such as stepping on the casing are not allowed!

---

**The use of the drive units in non-stationary equipment is considered as unusual environmental conditions, and is permitted only in accordance with the locally applicable standards and guidelines.**

---

### 3.4 Staff qualifications and training



All those who will work with the 2FC4 must have read and understood these instructions and the related documents.

Personnel in training may only work with the 2FC4 under supervision of personnel who have the **required knowledge**.

Only personnel with the following knowledge may carry out the work described in these instructions:

Qualified personnel, as understood in these operating instructions and product labels, are qualified electricians who are familiar with the installation, assembly, commissioning and operation of the drive controller, as well as the risks associated therewith and have the respective skills on account of their professional training and knowledge of the relevant standards.

### 3.5 Requirements of the operator

As a basic principle, electronic devices are not fail-proof. The operator and/or the contractor setting up the machine or system is responsible for ensuring that the drive switches to a safe state if the device fails.

The “Electrical equipment of machines” section in EN 60204-1, “Safety of machinery” describes the safety requirements for electrical control units. These are provided for the safety of people and machines and must be observed in order to retain the functional capability of the machine or system.

An emergency stop feature does not have to result in the power supply to the drive being switched off. To avoid dangerous situations, it may be useful for individual drives to remain operational or for specific safety procedures to be initiated. The effectiveness of emergency stop measures is evaluated by means of a risk assessment for the machine or system and its electrical equipment, and is determined by selecting a circuit category according to EN 13849 “Safety of machinery – Safety-related parts of control systems”.

The operator ensures that:

- All work on the 2FC4 is carried out by:
  - personnel that have the necessary Staff qualifications and training [→ 14]
  - personnel that have been sufficiently informed of these instructions and all related documents
- Assignment, responsibility and supervision of personnel is regulated.
- The content of these and locally applicable instructions are always available to personnel.
- All local and plant-specific safety measures are adhered to, such as:
  - Prevention of accidents
  - safety and operating regulations
  - Utility company regulations
  - Standards and laws
- Dangers due to electrical energy are not possible.

## 4.1 Structure of the type description


<b>2FC</b>	<b>4</b>	<b>152</b>	<b>-</b>	<b>1</b>	<b>ST</b>	<b>0</b>
1	2	3		4	5	6

Item designation

- |   |  |
|---|--|
| <p>1 <b>2FC</b> = drive control</p> <p>2 Connection voltage:<br/>4 = 400 V -15% – 480 V +10%</p> <p>3 Performance:<br/> <b>152</b> = 1.5 kW<br/>                 222 = 2.2 kW<br/>                 302 = 3.0 kW<br/>                 402 = 4.0 kW<br/>                 552 = 5.5 kW<br/>                 752 = 7.5 kW<br/>                 113 = 11.0 kW<br/>                 153 = 15.0 kW<br/>                 183 = 18.5 kW<br/>                 223 = 22.0 kW</p> | <p>4 Type of assembly:<br/>1 = integrated drive control</p> <p>5 Version:<br/> <b>ST</b> = Standard<br/>                 PB = Profibus<br/>                 PN = Profinet<br/>                 SC = Sercos III<br/>                 CB = CANopen</p> <p>6 reserved:<br/>0 = Standard</p> |
|---|--|

## 4.2 PIN assignment MMI/ connection line (NEW)


### Pin assignment M12 connector

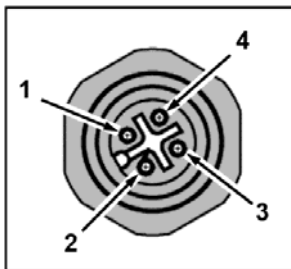

Coded circular connector 4-pole M12 A

Assignment M12 connector	Signal
1	24V DC
2	RS 485 - A
3	GND
4	RS 485 - B

### RJ9 connector

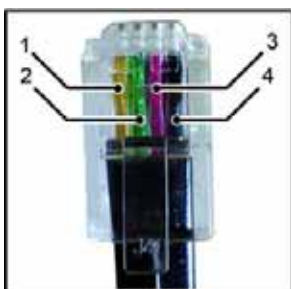

RJ9 connector

PIN	Signal
1	Yellow
2	Green
3	Red
4	Brown

**NOTICE! Colours can deviate**



### 4.3 Description of the drive control

The drive control is a device for speed control in three-phase AC motors.

The drive control can be integrated in the motor (with the standard adapter plate) or fitted close to the motor (with the wall installation adapter plate).

The permitted ambient temperatures specified in the technical data refer to operation at nominal load. In many cases, higher temperatures may be permitted after a detailed technical analysis. These have to be approved by manufacturer on a case-by-case basis.

### 4.4 CE marking

As a device manufacturer, we confirm with the CE label that the drive regulators meet the basic requirements of the following Directive:

- Directive relating to the electromagnetic compatibility (Directive 2004/108/EG)

The declaration of conformity can be downloaded at [www.gd-elmorietschle.com](http://www.gd-elmorietschle.com).

## 5.1 Safety instructions for installation

### ⚠ WARNING

1. Installation may only be performed by appropriately qualified employees who are trained in the set-up, installation, start-up and operation of the product. Work performed on the drive control by unqualified staff and non-observance of warnings may result in serious injury or damage.
2. The device must be grounded in accordance with EN 61140, NEC and other relevant standards. Mains connections must be hardwired.

## 5.2 Installation requirements

### 5.2.1 Suitable ambient conditions

#### Ambient conditions

Height of the installation place:	Up to <b>1000 m above NHN</b> [3280 ft above NHN]/above <b>1000 m</b> [3280 ft] at reduced performance (1% per <b>100 m</b> [328 ft]) max. <b>2000 m</b> [6560 ft], see Derating of output power [→ 89]
Ambient temperature:	<b>-25°C</b> [-13°F] up to <b>+50°C</b> [122°F] (deviating ambient temperatures are possible in individual cases), see Derating of output power [→ 89]
Relative humidity:	≤ 96%, condensing not permitted
Vibration- and shock resistance:	EN 60068-2-6 severity level 2 (vibration transport) EN 60068-2-27 (vertical impact test) 2...200 Hz for sinusoidal oscillation
Electromagnetic compatibility:	interference-resistant according to EN 61800-3
Cooling:	Surface cooling: sizes A to C: free convection; size D: with integrated fans

! Make sure that the housing design (protection type) is suitable for the operating environment:

1. Make sure that the seal between motor and adapter plate is inserted correctly.
2. All unused cable glands should be sealed.
3. Check that the cover of the drive controller is closed and bolted down tightly.

Subsequent varnishing of the drive controller is principally feasible, however, the operator must test the varnish to be used for material compatibility!

**NOTICE! Failure to comply may result in long term loss of protection type (in particular, for seals and light drawbars)!**


The drive controllers are available in the colour RAL 9005 (black).

The warranty claim expires in the event of dismantling circuit boards (also for the purpose of varnishing or coating the housing components)!

Mounting points and sealing surfaces must be basically kept varnish-free for EMC- and earthing reasons.


### 5.2.2 Suitable installation location for the motor-integrated drive control

- ① Ensure that the motor with a motor-integrated drive control is only installed and operated if aligned as shown in the following diagram.

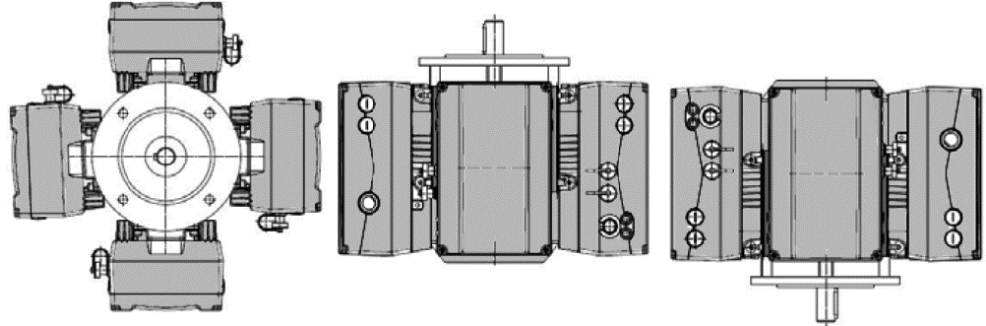


*Motor installation location/permitted alignments*

### 5.2.3 Basic connection variations

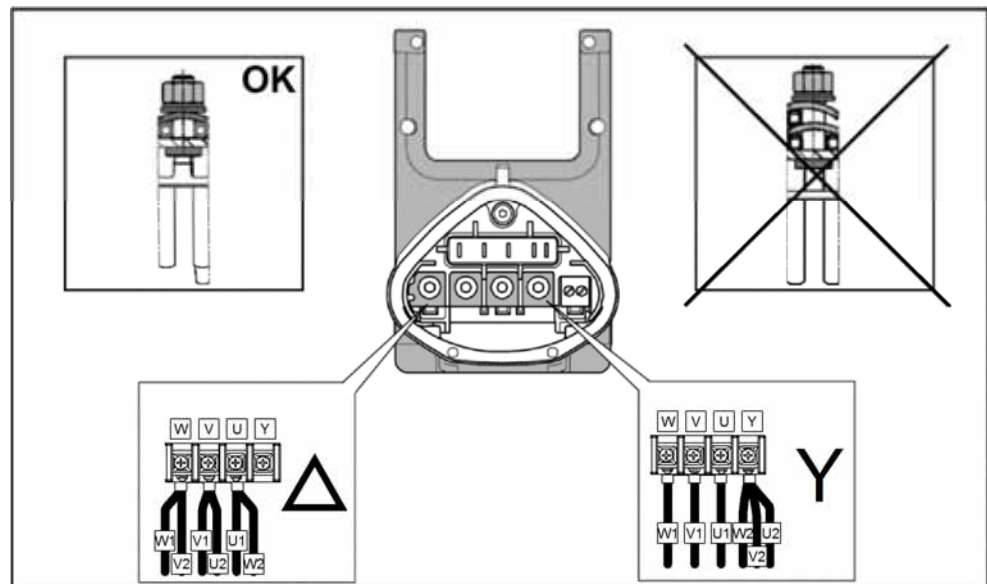

*Star or delta connection with the drive controller integrated in the motor*

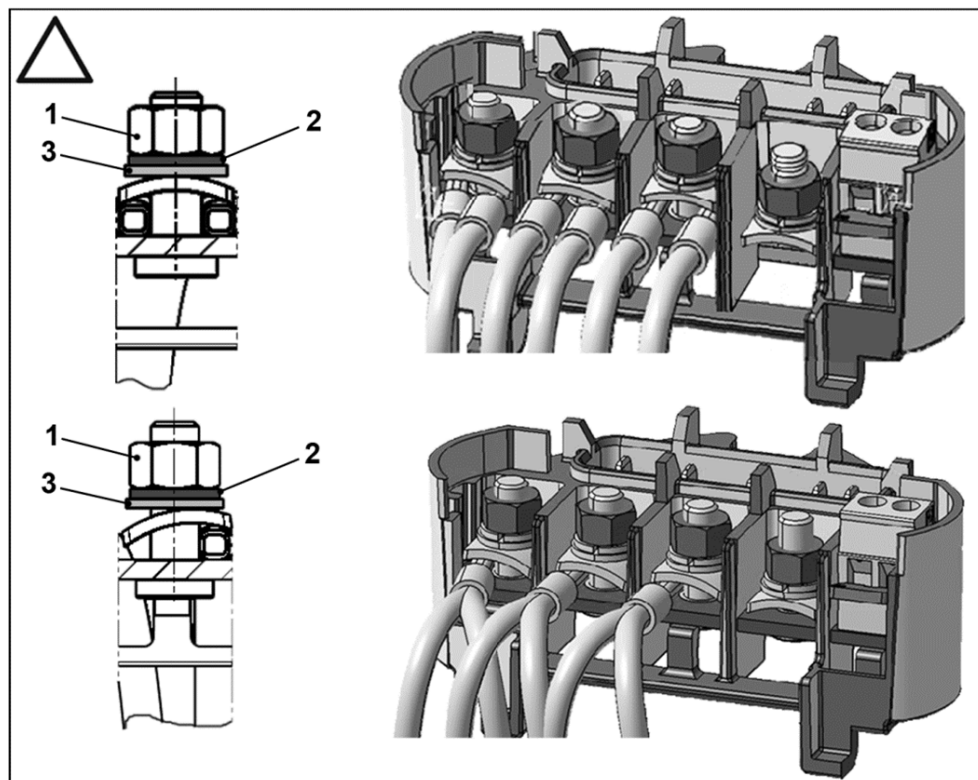

- 1 Nut  $M_A = 5 \text{ Nm}$  [3.70 ft lbs]      3 Shim
- 2 Spring ring




**⚠ DANGER**

**Risk of fatal injury from electric shock!  
Death or serious injuries.**

① Switch off drive controller and secure from switching back on.

① Check tightness of nuts (1) regularly.

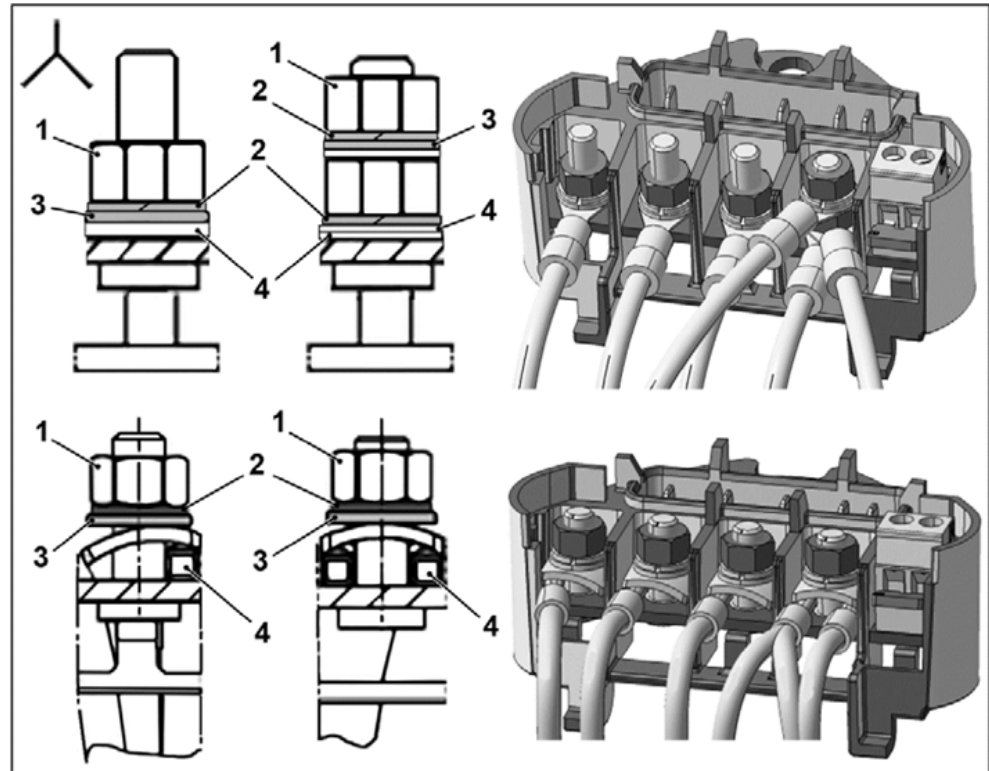

- |   |  |   |              |
|---|--|---|--------------|
| 1 | Nut $M_A = 5 \text{ Nm}$ [3.70 ft lbs] | 3 | Shim         |
| 2 | Spring ring                            | 4 | Terminal end |


**⚠ DANGER**

**Risk of fatal injury from electric shock!  
Death or serious injuries.**

① Switch off drive controller and secure from switching back on.

① Check tightness of nuts (1) regularly.

**NOTICE**

**Risk of damage to the drive controller!  
Motor overload.**

① When connecting the drive controller, the correct phase assignment must be observed.

With the supplied installation material, wire-end sleeves and cable lugs can be connected. For connection options, see figures.


**⚠ DANGER**

**Risk of fatal injury from electric shock!  
Death or serious injuries.**

1. Switch off drive controller and secure from switching back on.

2. Unused open cable ends in the motor connection box must be insulated.

**If a thermal resistance (PTC or bimetal switch) is used, the jumper placed in the connection terminal for the PTC in delivery condition, must be removed.**


The cross section of the mains supply line should be designed according to the type of wiring and the max. current allowed. The mains supply protection must be ensured by the system start-up engineer.

## 5.2.4 Short-circuit and earth-fault protection

The drive controller has an internal short-circuit and earth-fault protection.

## 5.2.5 Wiring instructions

### Drive controller 1.5 kW to 22 kW

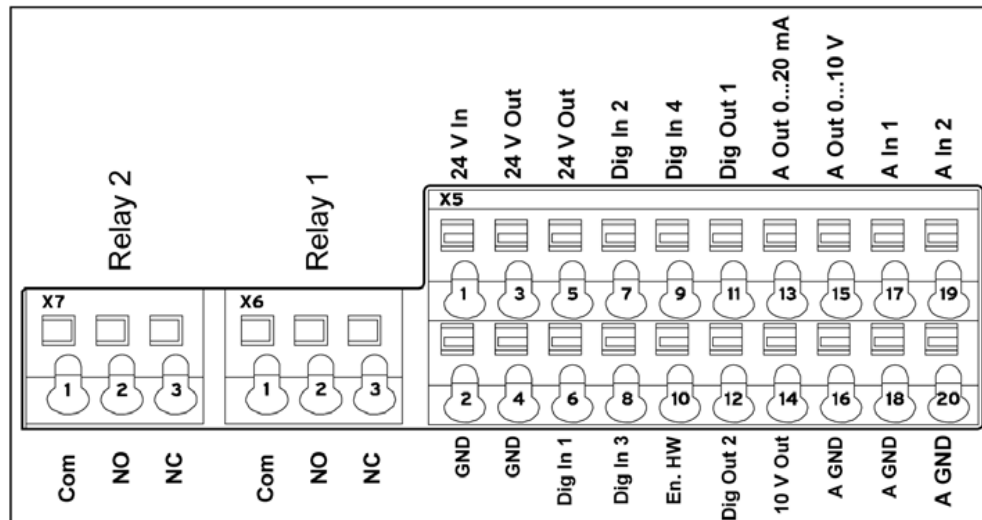

The control terminals of the application card are located inside the drive controller. Depending on the version, the pins may be allocated differently.

Connection terminals: Plug-in terminal connector with actuating pusher (slot-head screwdriver, max. width **2.5 mm** [0,098 in])


Connection cross-section: **0.5 to 1.5 mm<sup>2</sup>** (0.02 – 0.06 in<sup>2</sup>), single wire, AWG 20 to AWG 14

Connection cross-section: **0.75 to 1.5 mm<sup>2</sup>** (0.03 – 0.06 in<sup>2</sup>), fine-wired, AWG 18 to AWG 14

Connection cross-section: **0.5 to 1.0 mm<sup>2</sup>** (0.02 – 0.04 in<sup>2</sup>), fine-wired (wire-end sleeves with and without plastic collar)

Wire stripping length: **9 to 10 mm** (0.35 – 0.40 in)

### Drive controller 1.5 kW to 7.5 kW

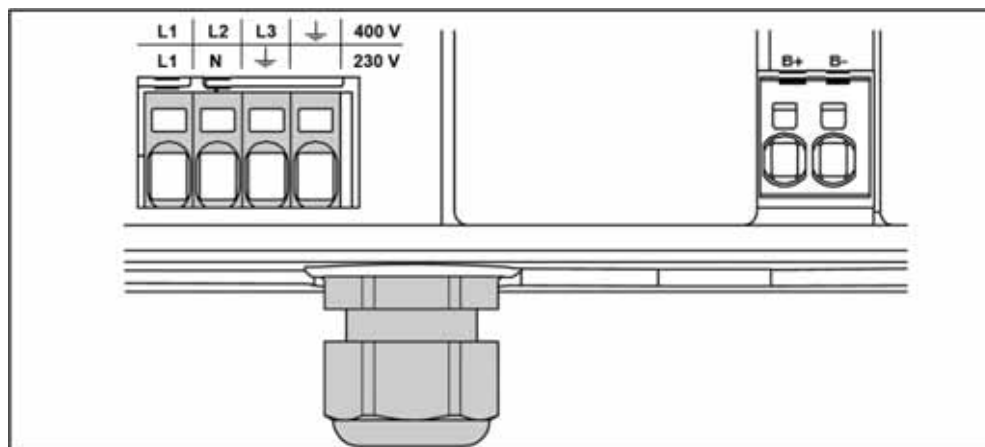


The terminals for the mains supply line are within the drive controller. The drive controller is fitted with terminals for connecting a braking resistor.

Depending on the version, the pins may be allocated differently.

Wire-end sleeves with plastic collar and lugs are recommended.

Connection terminals:	Spring-loaded contact Slot-head screwdriver, max. width <b>2.5 mm</b> (0,098 in)
Rigid wire cross-section:	min. <b>0.2<sup>2</sup></b> (0.00031 in <sup>2</sup> ) max. <b>10 mm<sup>2</sup></b> (0.0155 in <sup>2</sup> )
Flexible wire cross-section:	min. <b>0.2<sup>2</sup></b> (0.00031 in <sup>2</sup> ) max. <b>6 mm<sup>2</sup></b> (0.24 in <sup>2</sup> )
Flexible wire cross-section with wire end ferrule without plastic sleeve:	min. <b>0.25 mm<sup>2</sup></b> (0.00039 in <sup>2</sup> ) max. <b>6 mm<sup>2</sup></b> (0.24 in <sup>2</sup> )
Flexible wire cross-section with wire end ferrule with plastic sleeve:	min. <b>0.25 mm<sup>2</sup></b> (0.00039 in <sup>2</sup> ) max. <b>4 mm<sup>2</sup></b> [0.0062 in <sup>2</sup> ]
2 flexible conductors with same cross-section with TWIN AEH with plastic sleeve:	min. <b>0.25 mm<sup>2</sup></b> (0.00039 in <sup>2</sup> ) max. <b>1.5 mm<sup>2</sup></b> (0.0024 in <sup>2</sup> )
AWG wire cross-section/kcmil according to UL/CUL:	min. 24 max. 8
Wire stripping length:	<b>15 mm</b> (0.6 in)
Installation temperature:	<b>-5°C to +100°C</b> (+23°F – +212°F)

### Drive controller 11 kW to 22 kW

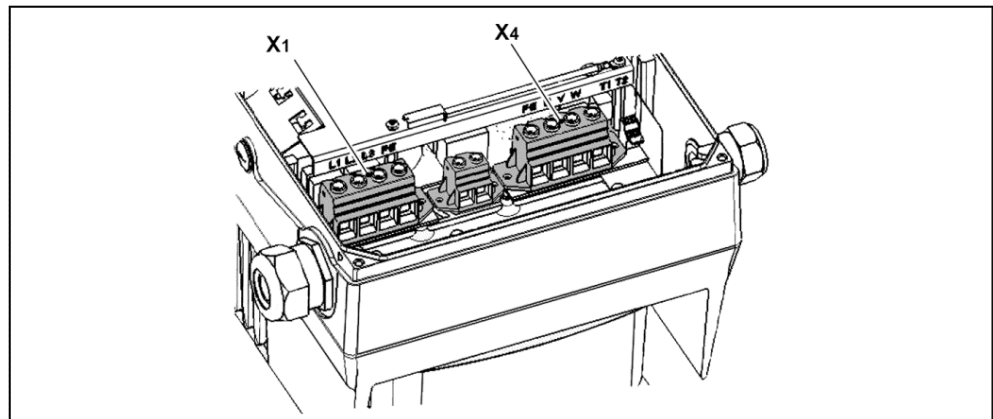

The terminals for the mains supply line are within the drive controller. The drive controller is optionally fitted with terminals for connecting a braking resistor. Depending on the version, the pins may be allocated differently.

Wire-end sleeves with plastic collar and lugs are recommended.

Tightening torque **2.5 Nm – 4.5 Nm** (1.85 ft lbs – 3.32 ft lbs)

Wire cross-section:	Rigid min. <b>0.5 mm<sup>2</sup></b> (0.0008 in <sup>2</sup> ) Rigid <b>max. 35 mm<sup>2</sup></b> (0.054 in <sup>2</sup> )
Flexible wire cross-section:	min. <b>0.5 mm<sup>2</sup></b> (0.0008 in <sup>2</sup> ) max. <b>25 mm<sup>2</sup></b> (0.0388 in <sup>2</sup> )
Flexible wire cross-section with wire end ferrule without plastic collar:	min. <b>1 mm<sup>2</sup></b> (0.0016 in <sup>2</sup> ) max. <b>25 mm<sup>2</sup></b> (0.0388 in <sup>2</sup> )
Flexible wire cross-section with wire end ferrules with plastic sleeve:	min. <b>1.5 mm<sup>2</sup></b> (0.0024 in <sup>2</sup> ) max. <b>25 mm<sup>2</sup></b> (0.0388 in <sup>2</sup> )
AWG wire cross-section/kcmil according to UL/CUL:	min. 20 max. 2
2 rigid conductors with same cross-section:	min. <b>0.5 mm<sup>2</sup></b> (0.0008 in <sup>2</sup> ) max. <b>6 mm<sup>2</sup></b> (0.0093 in <sup>2</sup> )
2 flexible conductors with same cross-section:	min. <b>0.5 mm<sup>2</sup></b> (0.0008 in <sup>2</sup> ) max. <b>6 mm<sup>2</sup></b> (0.0093 in <sup>2</sup> )
2 flexible conductors with same cross-section w. AEH without plastic sleeve:	min. <b>0.5 mm<sup>2</sup></b> (0.0008 in <sup>2</sup> ) max. <b>4 mm<sup>2</sup></b> (0.0062 in <sup>2</sup> )
2 flexible conductors with same cross-section w. TWIN AEH with plastic sleeve:	min. <b>0.5 mm<sup>2</sup></b> (0.0008 in <sup>2</sup> ) max. <b>6 mm<sup>2</sup></b> (0.0093 in <sup>2</sup> )
AWG according to UL/CUL	min. 20 max. 2

### 5.2.6 Preventing electromagnetic interference

For control circuits shielded cables must be used, where possible. At the cable end, the shield should be applied with due care without leaving the wires unshielded over longer distances.

The shielding of analogue setpoints should only be applied on one side of the drive controller.

Basically, the control wires should always be routed as far away as possible from power cables; separate cable ducts may have to be used, if required. If lines cross, an angle of 90° should be adhered to, where possible.

Upstream circuit elements, such as contactors and brake coils or circuit elements which are connected across the outputs of the drive controllers must be suppressed in terms of interference. In AC contactors, RC (resistor-capacitor) circuits can be used; suppressor diodes or varistors can be normally used for DC contactors. This interference suppressor is attached directly to the contactor coil. Basically, the power supply to a mechanical brake should not be routed in the same cable!

Power connections between the drive controller and motor should always be used in shielded or reinforced design and the shield must be earthed at both ends over a large area! The use of EMC cable glands is recommended. These are not included in the delivery.




## 5.3 Installation of the drive controller integrated in the motor

### 5.3.1 Mechanical installation of sizes A - C

For mechanical installation of the drive controller, proceed as follows:

1. Open the standard motor connection box.
2. Disconnect the wires to the terminals. Remember or write down the connection sequence.
3. If necessary, remove the motor terminal block.
4. Remove the fastening screws securing the housing and remove the housing. Be careful not to damage the gasket.

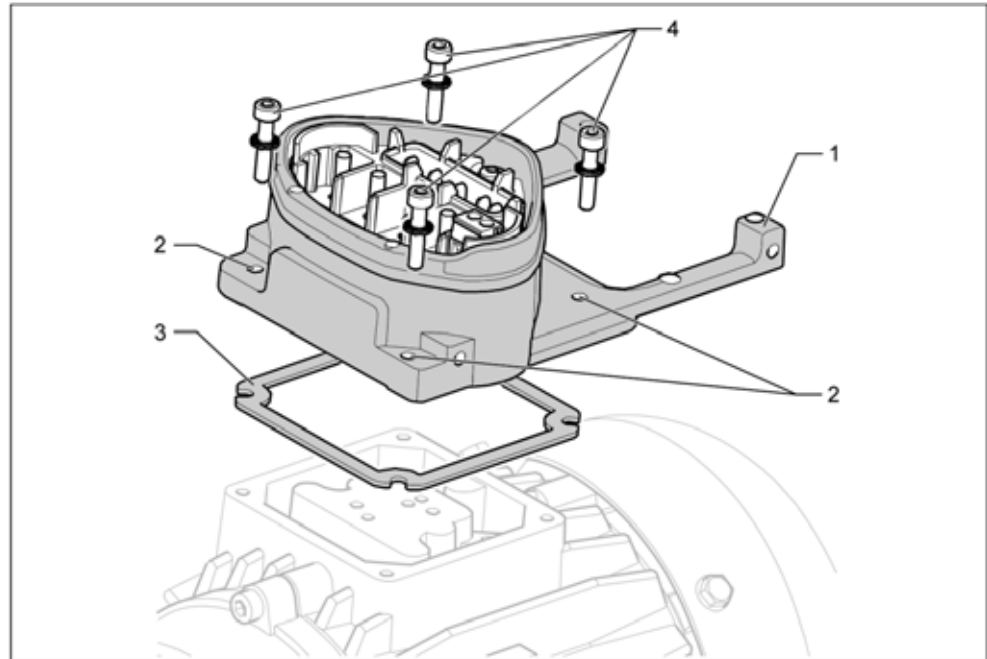

Assembly sequence: Junction box - adapter plate (size A - C)

**The standard adapter plate is an adapter plate whose lower part has not been refinished. No holes are drilled.**

① For the motors supplied, you can order adapter plates from the manufacturer.

5. Adjust them to the adapter plate (1) by drilling appropriate holes (2) in them for attachment to the motor.

**The system start-up engineer is responsible for maintaining the protection class for the gasket of the adapter plate on the motor.**


① For questions, contact your sales representative.

6. Insert the gasket (3).
7. Lead the motor connection cable through the adapter plate while bypassing the terminal (1) and screw it onto the motor using the four fastening screws and four spring elements (4) (torque: **2.0 Nm** [1.48 ft lbs]).

**When mounting the adapter plates, ensure that all four screws, including the spring elements, are tightened by applying the correct torque! All contact areas must be dirt/paint-free, as correct protective earth connection cannot be ensured otherwise.**

8. Connect the motor wires to the required interconnection, see also "Insulation test on the power unit [→ 13]" (Torque: **3.0 Nm** [2.21 ft lbs]). We recommend using insulated M5 ring terminals, with a connection cross-section of **4 to 6 mm<sup>2</sup>** [0.0062 - 0.0093 in<sup>2</sup>]


**When installing the motor wires make sure that all bolts on the adapter board are fitted with the enclosed nuts, even if the neutral point is not connected.**

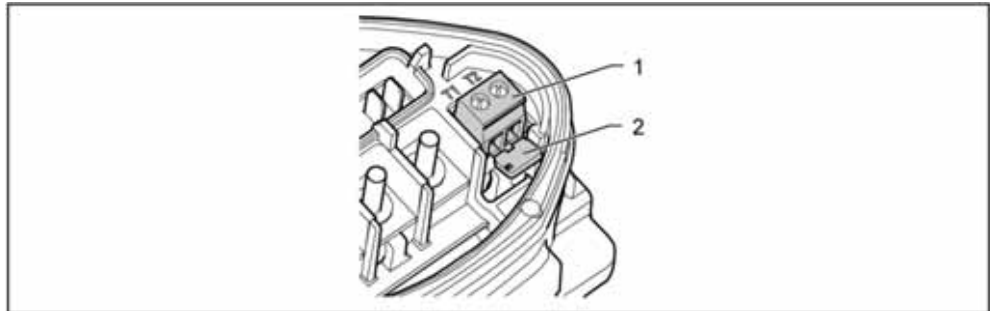

*Jumper*

9. Wire any available connection cables of the motor PTC/bimetal switch to the terminals T1 and T2 (1) (torque: **0.6 Nm** [0.44 ft lbs]).

**When installing, make sure that the connection cables are not pinched.**

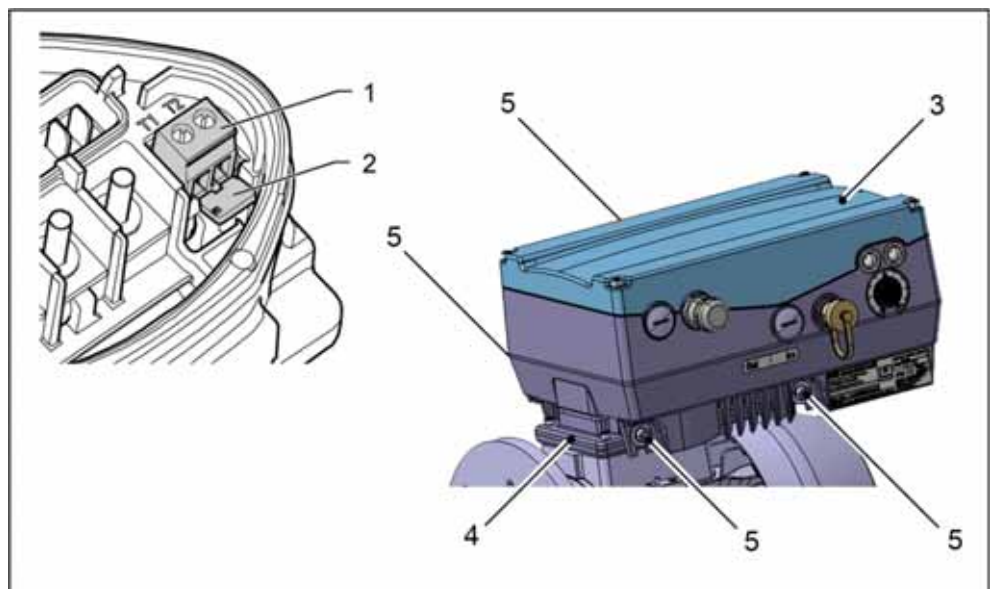


**If the motor is equipped with a temperature sensor, it is connected to terminals T1 and T2 (1) and the jumper (2) included in the delivery must be removed. If the jumper is used, there is no temperature monitoring of the motor!**

10. Plug the drive controller(3) to the adapter plate (4) and secure it evenly using the four screws (5) at the side (torque: **4.0 Nm** [0.3 ft lbs]).

## 5.3.2 Mechanical installation of size D

For mechanical installation of the drive controller, proceed as follows:

1. Open the standard motor connection box.
2. Remove the fastening screws securing the housing and remove the housing. Be careful not to damage the gasket.

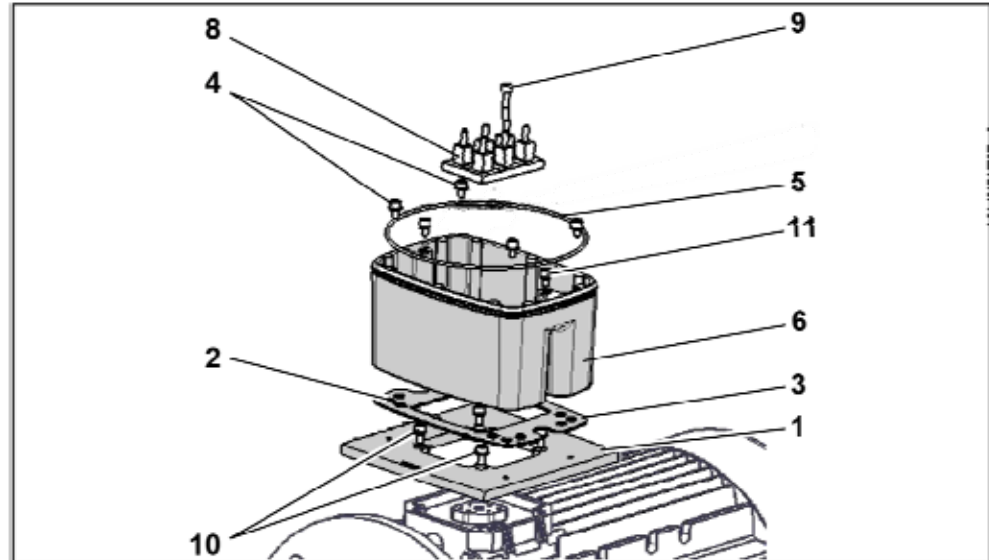

Assembly sequence: Junction box - adapter plate (BG D)

- |   |  |
|---|--|
| 1 Adapter plate                         | 6 Support the drive controller/adapter plate |
| 2 Motor-dependent holes                 | 8 Original terminal board                    |
| 3 Seal                                  | 9 Screw                                      |
| 4 Fastening screws with spring elements | 10 Fastening screws with spring elements     |
| 5 O-ring seal                           | 11 Fastening screws drive controller/support |

**The system start-up engineer is responsible for maintaining the protection class for the gasket of the adapter plate on the motor.**

① For questions, contact your sales representative.

3. Insert the gasket (3).
4. Screw the adapter plate (1) onto the motor using the four fastening screws (10) (torque: M4 with **2.4 Nm** [1.77 ft lbs], M5 with **5.0 Nm** [3.70 ft lbs], M6 with **8.5 Nm** [6.27 ft lbs]).

**When mounting the adapter plates (1), ensure that all four screws, including spring elements (10) are tightened by applying the correct torque! All contact areas must be dirt/paint-free, as correct protective earth connection cannot be ensured otherwise.**


5. Reattach the original terminal board (8) onto the motor with screws (9).
6. Connect the four wires (PE, U, V, W) with the appropriate cross section (depending on the output of the drive controller used) to the original terminal board.

**The connecting wires required for wiring the motor terminal board/drive controller are not included in the delivery in case of spare parts.**


**Ensure proper fitting of the O-ring seal (5).**

7. Screw the support (6) onto the adapter plate (1) using the four fastening screws with spring elements (4).
8. Insert the four wires (PE, U, V, W) into the support of the drive controller.

**Ensure proper fitting of the O-ring seal (5).**

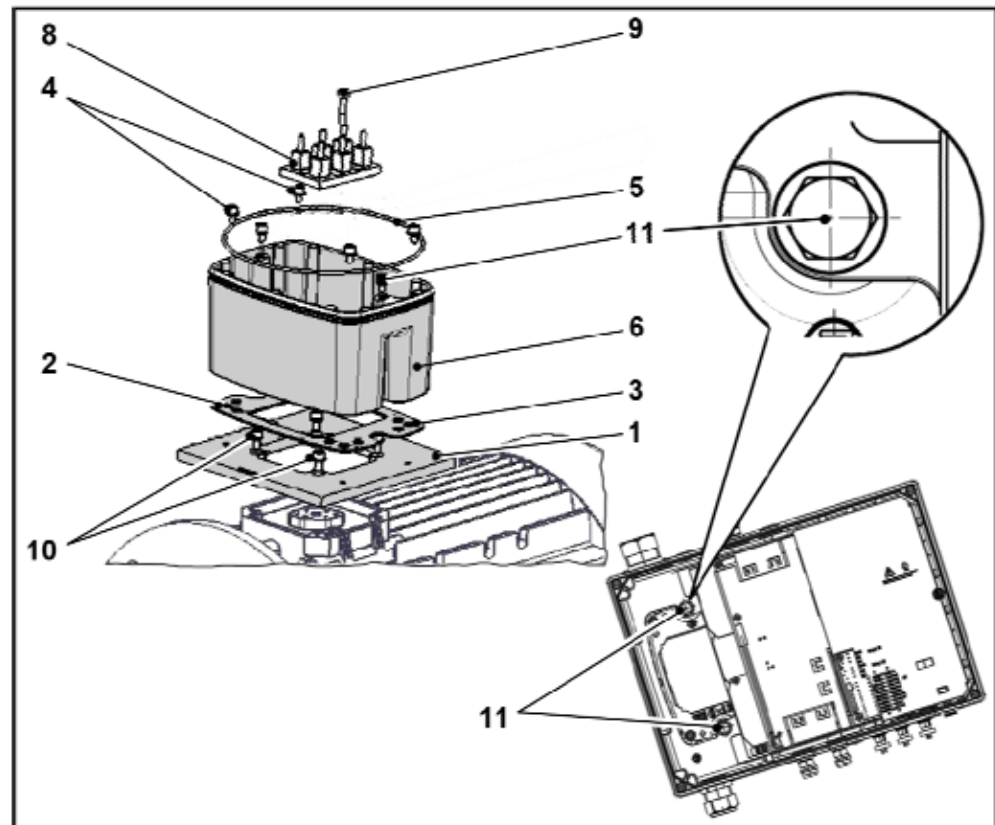

9. Plug the drive controller onto the support (6) and secure it evenly using the two M8 screws (11) (torque: max. **21.0 Nm** [15.5 ft lbs]).

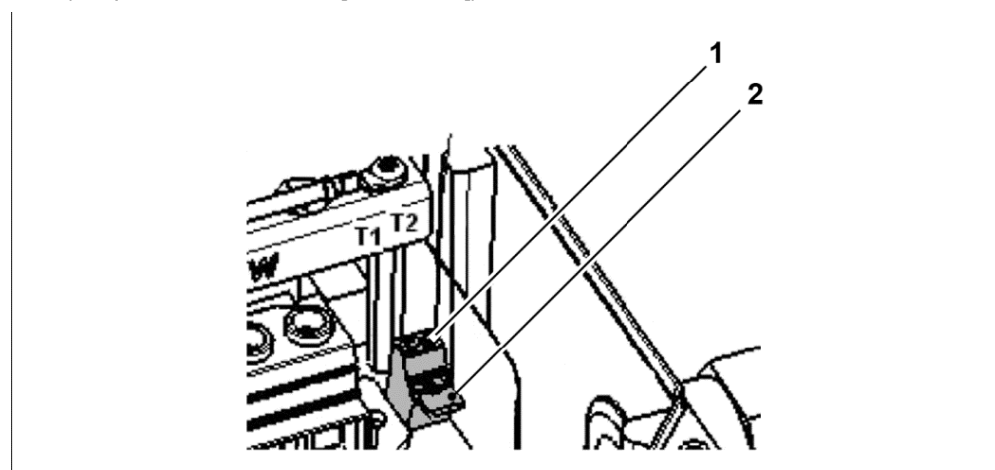


*Jumper*

**When installing, make sure that the connection cables are not pinched.**

10. Wire any available connection cables of the motor PTC/bimetal switch to the terminals T1 and T2 (1) (torque: **0.6 Nm** [0.44 ft lbs]).

If the motor is equipped with a temperature sensor, it is connected to terminals T1 and T2 (1) and the jumper (2) included in the delivery must be removed. If the jumper is used, there is no temperature monitoring of the motor!

### 5.3.3 Power connection of sizes A - C

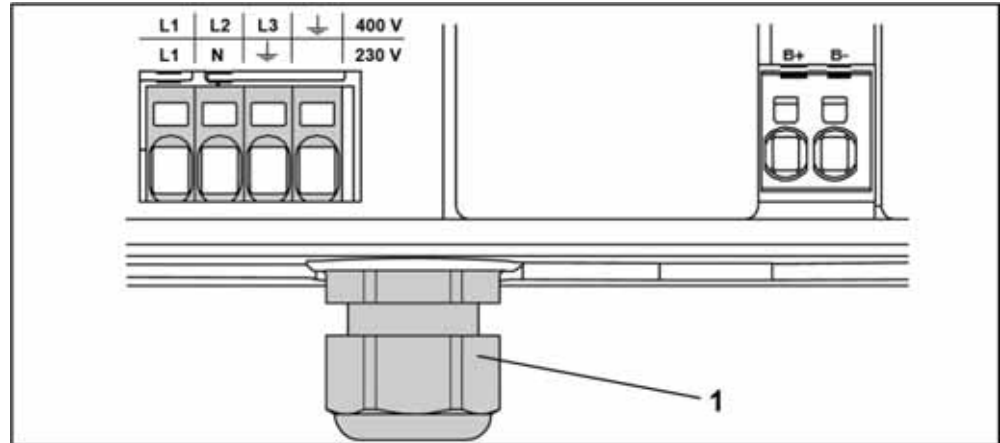

Power connection of size A - C


1. Unscrew the four screws from the housing cover of the drive controller and remove the cover.
2. Run the mains cable through the cable gland (1) and connect the phases with the contacts L1, L2, L3 for 400 V and the earth conductor with the PE contact on the terminal. The cable gland provides cable relief, the PE connection line must be connected as a leading contact (significantly longer)!

**When connecting a braking resistor to an optional brake module, shielded and double-insulated cables must be used.**

#### 3 ~ 400 V terminal assignment X1

Terminal no.	Designation	(Terminal) assignment
1	L1	Mains phase 1
2	L2	Mains phase 2
3	L3	Mains phase 3
4	PE	Earth conductor

### 5.3.4 Power connection of size D

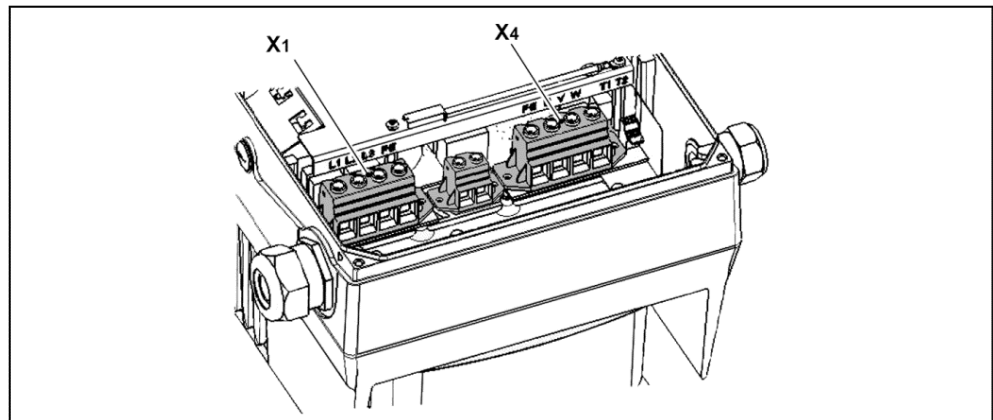

Power connection BG D

1. Unscrew the four screws from the housing cover of the drive controller and remove the cover.
2. Run the mains cable through the cable gland and connect the phases with the contacts L1, L2, L3 for 400 V and the earth conductor with the PE contact on the terminal. The cable gland provides cable relief, the PE connection line must be connected as a leading contact (significantly longer)!

**When connecting a braking resistor to an optional brake module, shielded and double-insulated cables must be used.**

#### 3 ~ 400 V terminal assignment X1

Terminal no.	Designation	(Terminal) assignment
1	L1	Mains phase 1
2	L2	Mains phase 2
3	L3	Mains phase 3
4	PE	Earth conductor

#### Motor terminal assignment X4

Terminal no.	Designation	(Terminal) assignment
1	PE	Earth conductor
2	U	Motor phase 1
3	V	Motor phase 2
4	W	Motor phase 3


### 5.3.5 Connections for braking resistor

#### Terminal assignment for braking chopper

Terminal no.	Designation	(Terminal) assignment
1	B+	Connection of braking resistor (+)
2	B-	Connection of braking resistor (-)

## 5.3.6 Control terminals

### Control terminals of the standard application card

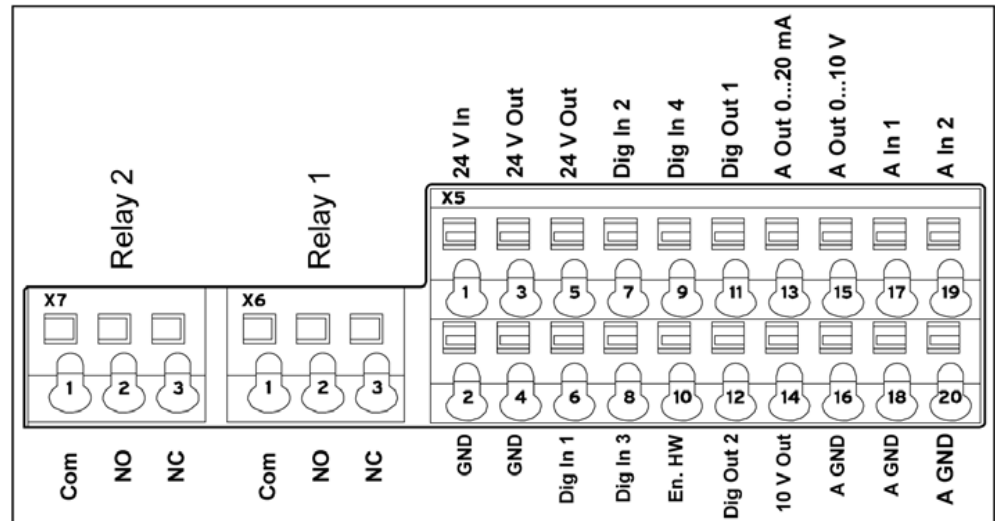

Control terminals of the standard application card


### NOTICE

#### Risk of coupling of external signals!

① Use shielded control wires.

1. Pass the required control wires through the cable glands into the housing.
2. Connect the control wires according to the picture and/or table. To do this, use shielded control wires.
3. Put the lid on the housing of the drive controller and screw it in place.


Size	Tightening torque
A – C	2 Nm (1.48 ft lbs) 4 x M4 x 28
D	4 Nm (2.95 ft lbs) 4 x M6 x 28

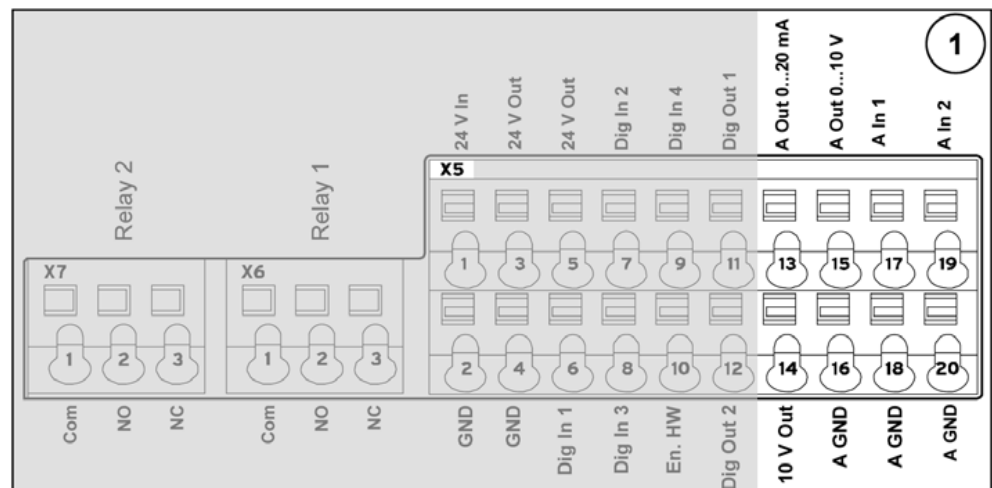

#### Terminal assignment X5 of the standard application card


Terminal no.	Designation	(Terminal) assignment
13	A. Out 0 ... 20 mA	Actual frequency value (parameter 4,100)
14	10 V Out	For external voltage divider

Terminal no.	Designation	(Terminal) assignment
15	A. Out 0 ... 10 V	Actual frequency value (parameter 4,100)
16	A GND (Ground 10 V)	Ground
17	A. In 1	External Setpoint source (parameter 1,130)
18	A GND (Ground 10 V)	Ground
19	A. In 2	Actual PID value (parameter 3,060)
20	A GND (Ground 10 V)	Ground

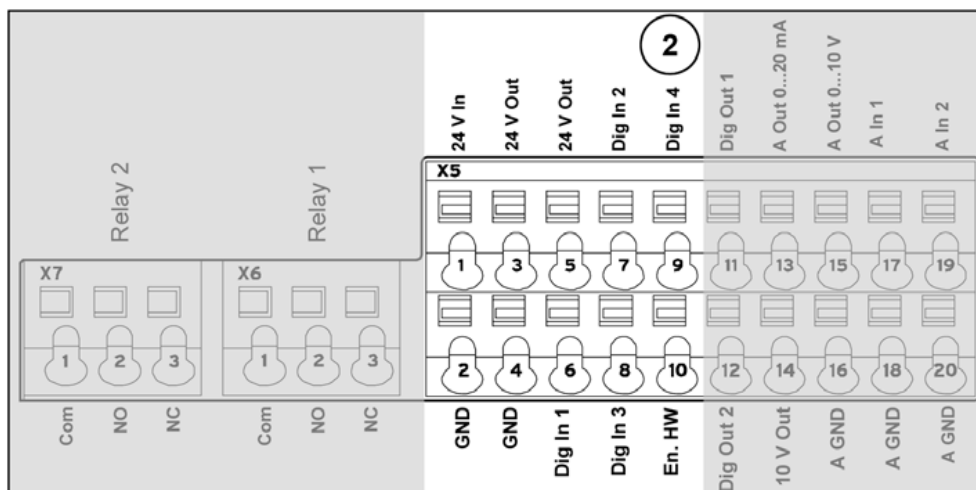

Terminal assignment X5 of the standard application card

Terminal no.	Designation	(Terminal) assignment
1	24 V In	External power supply
2	GND (Ground)	Ground
3	24 V Out	Internal power supply
4	GND (Ground)	Ground
5	24 V Out	Internal power supply
6	Dig. In 1	fixed frequency 1/3 (parameter 1,100) Software release (parameter 1,131)
7	Dig. In 2	fixed frequency 2/3 (parameter 1,100)
8	Dig. In 3	Fault reset (parameter 1,180)
9	Dig. In 4	External error (parameter 5,010)
10	En-HW (release)	Hardware release

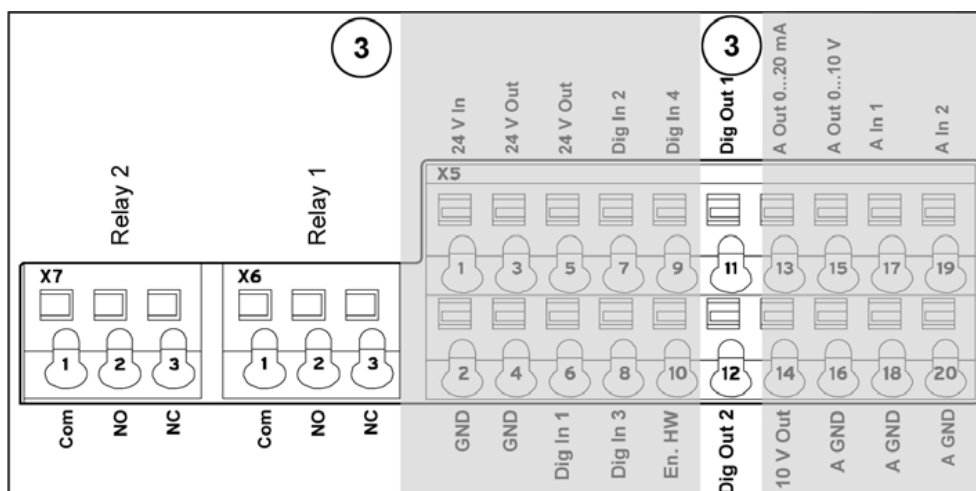



### Terminal assignment X5 of the standard application card

Terminal no.	Designation	(Terminal) assignment
11	Dig. Out 1	Ready (parameter 4,150)
12	Dig. Out 2	Operation (parameter 4,170)

### Terminal assignment X6 (relay 1)

Terminal no.	Designation	(Terminal) assignment
1	COM	Centre contact relay 1
2	NO	Normally open contact relay 1
3	NC	Normally closed contact relay 1


Relay 1 is programmed by default as "fault inverted" (NC) (parameter 4,190).

### Terminal assignment X7 (relay 2)

Terminal no.	Designation	(Terminal) assignment
1	COM	Centre contact relay 2
2	NO	Normally open contact relay 2
3	NC	Normally closed contact relay 2

Relay 2 is programmed by default as "not assigned" (parameter 4,210).

## 5.3.7 Wiring diagram

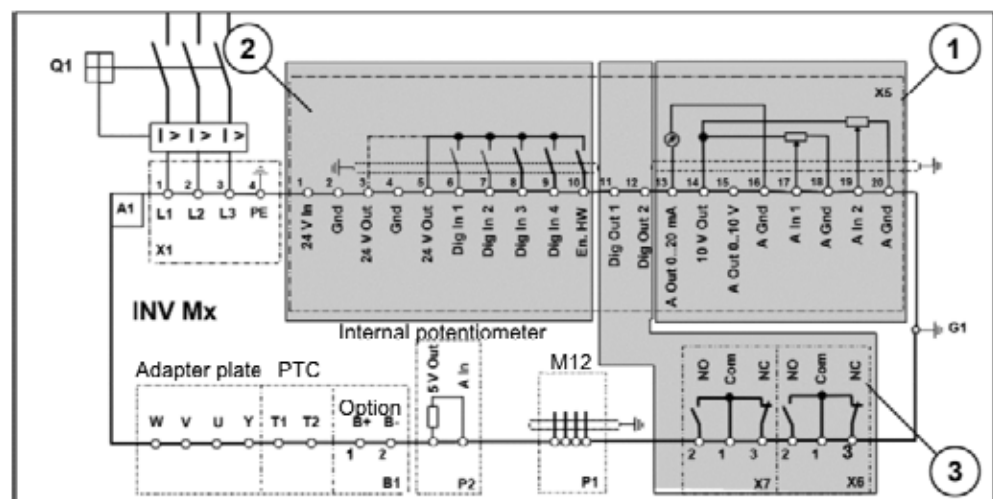

#### Control terminals

The drive controller is ready for operation after connection to a 400 V AC power supply (to the terminals L1 to L3).

Alternately, there is the option to put the drive controller in operation by connecting an external 24 V voltage.


## 5.4 Installing the wall-mounted drive controller

### 5.4.1 Installation location that is suitable for wall mounting

! Please make sure that the installation location for wall mounting meets the following conditions:

1. The drive controller must be mounted on a flat, solid surface.
2. The drive controllers may only be mounted on non-combustible surfaces.
3. There must be at least a 20-cm-wide clearance all around the drive controller to ensure free convection.

The following figure gives you the mounting dimensions and the necessary clearance for the installation of the drive controller.

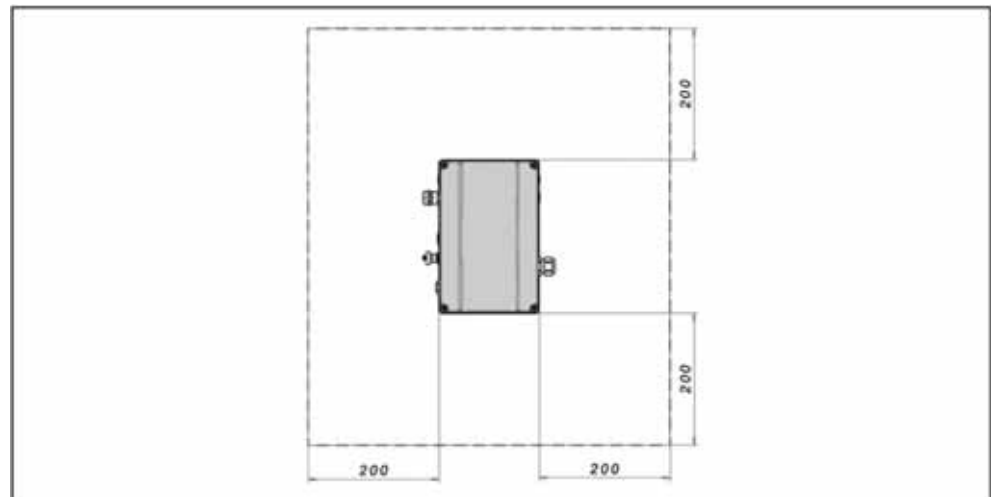

*Minimum distances*

For wall mounting, a maximum line length of 5 m is permitted between the motor and the drive controller. A shielded cable with the cross section required in each case should be used. A PE connection should be established (below the terminal board the wall adapter)!

### 5.4.2 Mechanical installation size A – C




*Wiring at the motor connection box*

1. Open the motor connection box.

***NOTICE***

**Depending on the desired motor voltage, star or delta connection should be made in the motor connection box.**

2. When connecting the shielded motor cable to the motor connection box, use suitable EMC fittings and ensure proper (large surface) contact with the shield.
3. Connecting a PE connection to the motor connection box is mandatory.
4. Close the motor connection box.

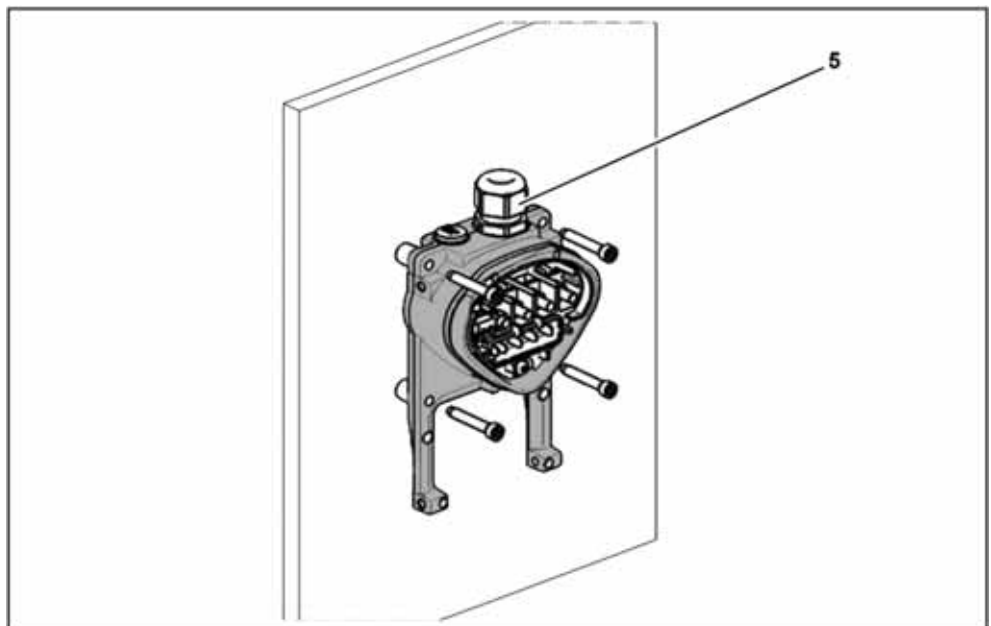


*Mounting the adapter plate to a wall*

**⚠ WARNING**

**Risk of injury due to incorrect assembly!**

- ① The drive controller may not be installed without an adapter plate.
- Find a location that corresponds to the required ambient conditions, as described in the "Installation requirements" section „Installation requirements [→ 18]“.
  - In order to achieve optimum self-convexion of the drive controller, it must be ensured during assembly that the (EMC) screw connection (5) points upward.
  - Without additional ventilation of the drive controller, only vertical mounting is allowed.

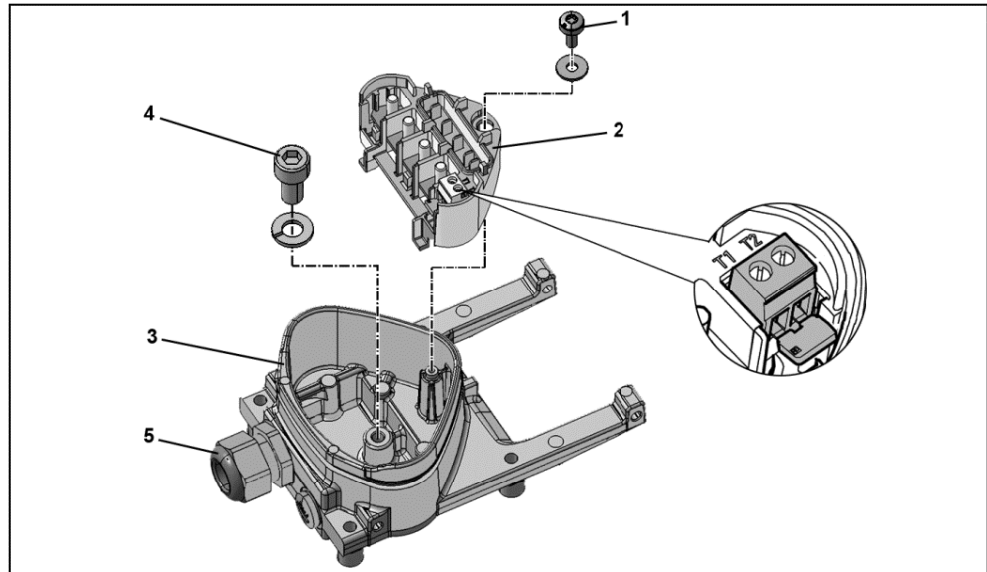


*Wiring*

1. Loosen the screw (1) to remove the contact plate (2) from the adapter plate (3). Below the contact plate is the (M6x15) PE connection (4).
2. Lead the connection cable from the motor via the integrated EMC screw connection (5) into the adapter plate (3).
3. This PE connection (torque: **4.0 Nm** [2.95 ft lbs]) must be connected to the same earth potential of the motor. The cross section of the equipotential bonding conductor must correspond to at least the cross-section of the mains cable.
4. Reinsert the contact plate (2) into the adapter plate (3).
5. Attach the contact plate (2) with the screw (1) (torque: **1.2 Nm** [0.88 ft lbs]).

**NOTICE**

**Make sure that, after mounting the contact plate (2), it is floating.**

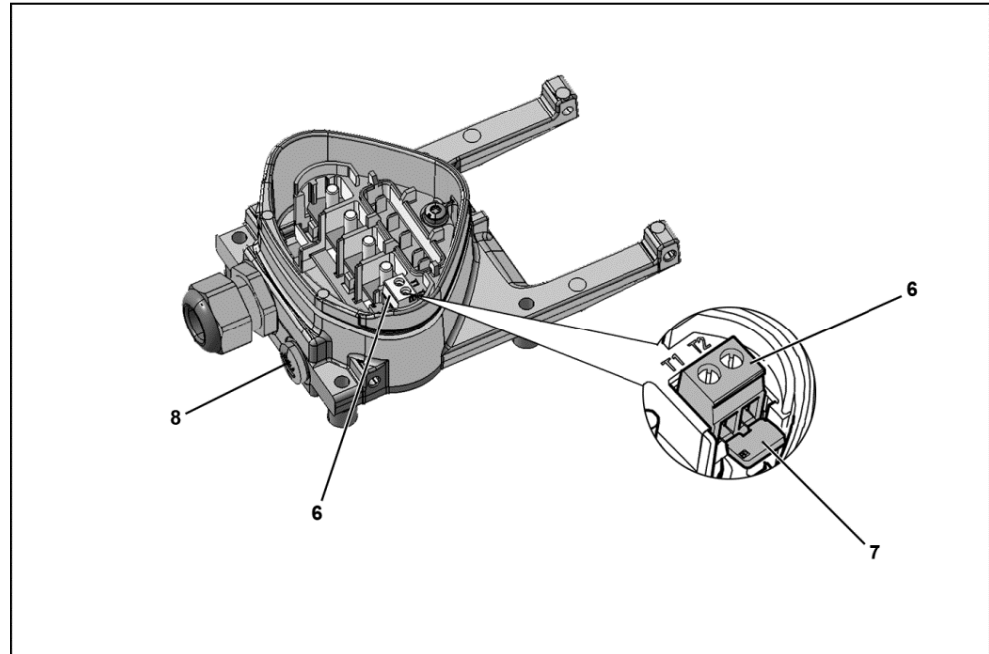


*Wiring*

6. Wire the motor cable to the contacts U, V and W (possibly also the neutral point) in the terminal, as described in "Basic connection variations" section „Basic connection variations [→ 19]“. Use the cable lugs (M5) for this.
7. Before connecting a possibly existing motor PTC to the terminals T1 and T2 (6), please remove the pre-assembled jumper (7).

**NOTICE**

**The PTC motor is not electrically isolated following connection of the drive controller. Thus the connection must be made with an isolated, separate line according to the motor cable! Only motor PTCs may be connected according to the DIN 44081/44082!**

8. To this end, replace the dummy plug (8) with a suitable standard screw connection and lead the two ends to T1 and T2 (6).

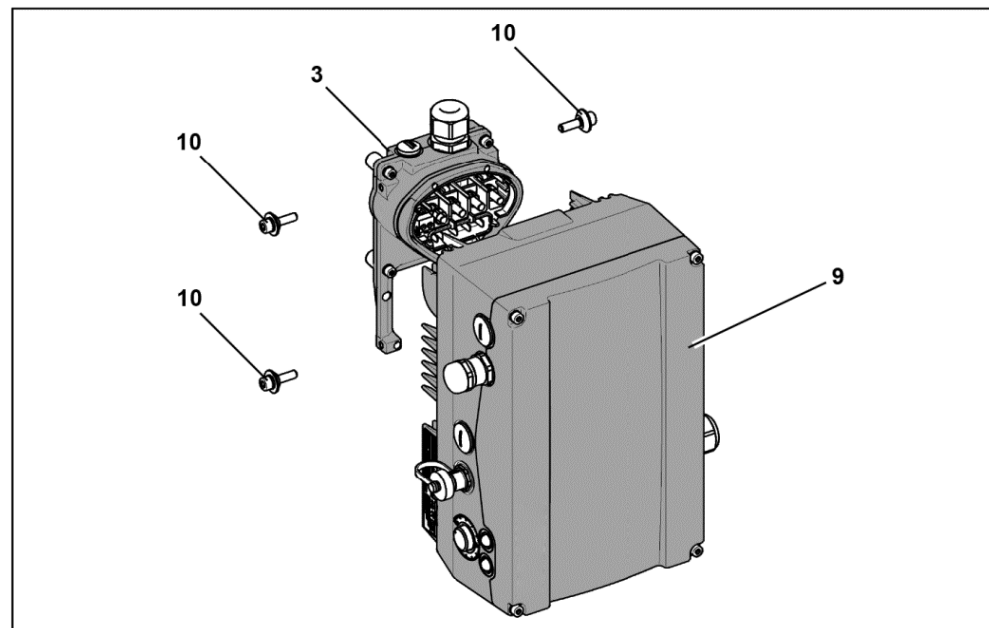

*Mount the drive controller*

9. Place the drive controller (9) on the adapter plate (3) such that the collar of the adapter dips into the opening at the bottom of the cooling element.
10. Secure the drive controller (9) to the adapter plate (3) using the supplied screws (10) (torque: **4.0 Nm** [2.95 ft lbs]).

### 5.4.3 Mechanical installation of size D




*Wiring at the motor connection box*

1. Open the motor connection box.

#### ***NOTICE***

**Depending on the desired motor voltage, star or delta connection should be made in the motor connection box.**

2. When connecting the shielded motor cable to the motor connection box, use suitable EMC fittings and ensure proper (large surface) contact with the shield.
3. Connecting a PE connection to the motor connection box is mandatory.
4. Close the motor connection box.

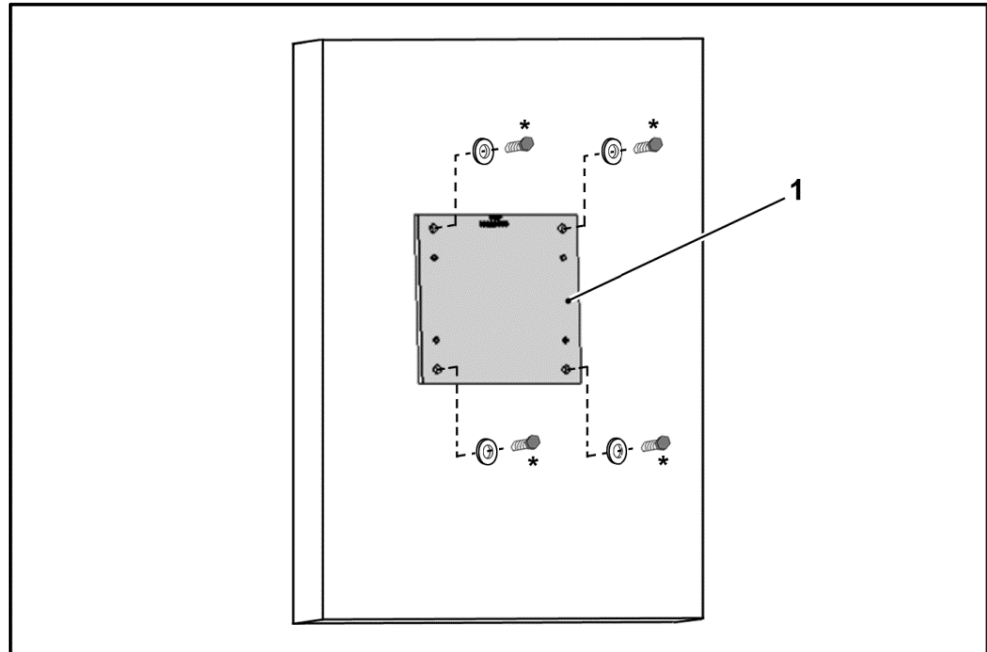

Mounting the adapter plate size D to the wall


**⚠ WARNING**

**Risk of injury due to incorrect assembly!**

① The drive controller may not be installed without adapter plate (1).

- Find a location that corresponds to the required ambient conditions, as described in the "Installation requirements" section „Installation requirements [→ 18]“.

1. Mount the adapter plate (1) to the wall by using four screws\*.  
\*Screws are not included in the delivery).

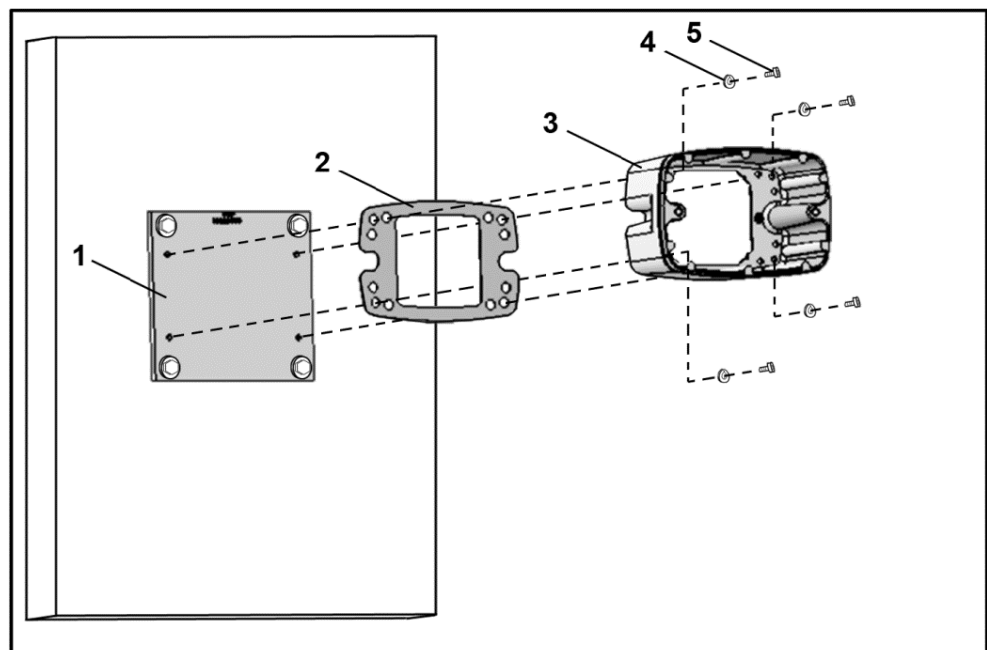


Mounting the support size D onto the adapter plate

2. Mount the seal (2), together with support (3), onto the adapter plate (1). To do so, use the fastening screws (5), including the spring elements (4), included in the scope of delivery (torque **8.5 Nm** [6.27 ft lbs]).

**NOTICE**

**Ensure proper fitting of the seal (2)!**

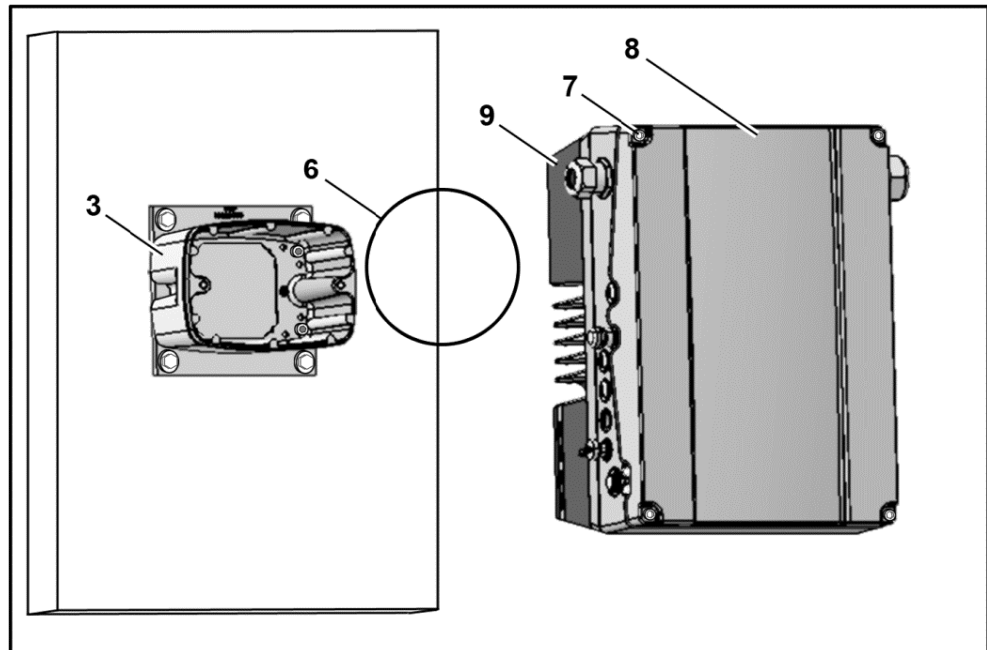


*Insert the O-ring seal size D*

3. Insert the O-ring seal (6) into the groove of the support (3).

**NOTICE**

**Pleas ensure proper fitting of the O-ring seal (6)!**


4. Unscrew the four screws (7) from the cover (8) of the drive controller (9).
5. Remove the cover (8).

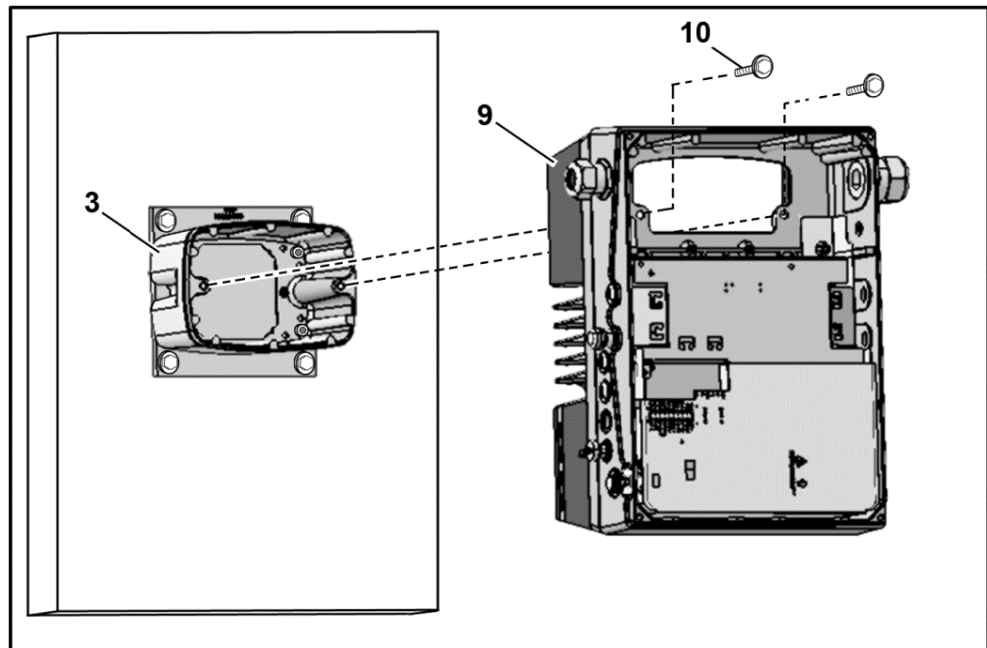

*Mounting the drive controller onto support size D*

6. Plug the drive controller (9) carefully onto the support (3).
7. Screw both parts evenly with both M8 screws (10) (torque: max. **25.0 Nm** [18.4 ft lbs]).



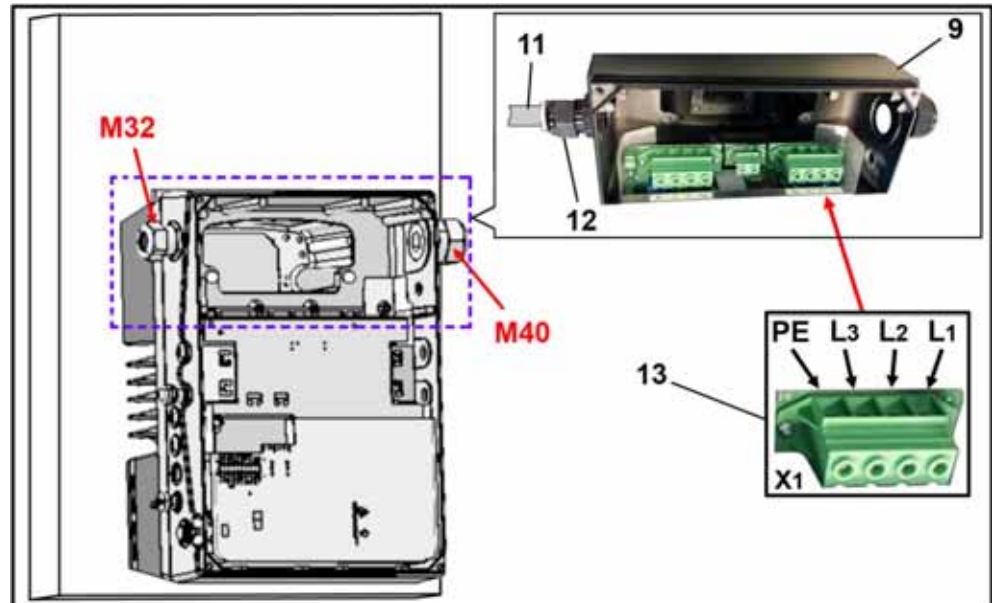

Mains connection size D

8. Lead the mains connection (11) through the cable gland (12) [M32] to the drive controller (9).

### **NOTICE**

**The cable gland provides cable relief, the PE connection line must be connected as a leading contact (significantly longer)!**

9. Connect the lines with the connection terminals [X1] (13) as follows:


#### **3 ~ 400 V terminal assignment X1**

Terminal no.	Designation	(Terminal) assignment
1	L1	Mains phase 1
2	L2	Mains phase 2
3	L3	Mains phase 3
4	PE	Earth conductor

#### **DC supply 250 to 750 V terminal assignment X1**

Terminal no.	Designation	(Terminal) assignment
1	L1	DC network (+) (565V)
2	L2	Not assigned.
3	L3	DC network (-)
4	PE	Earth conductor

The earth connector must be connected to the "PE" contact.

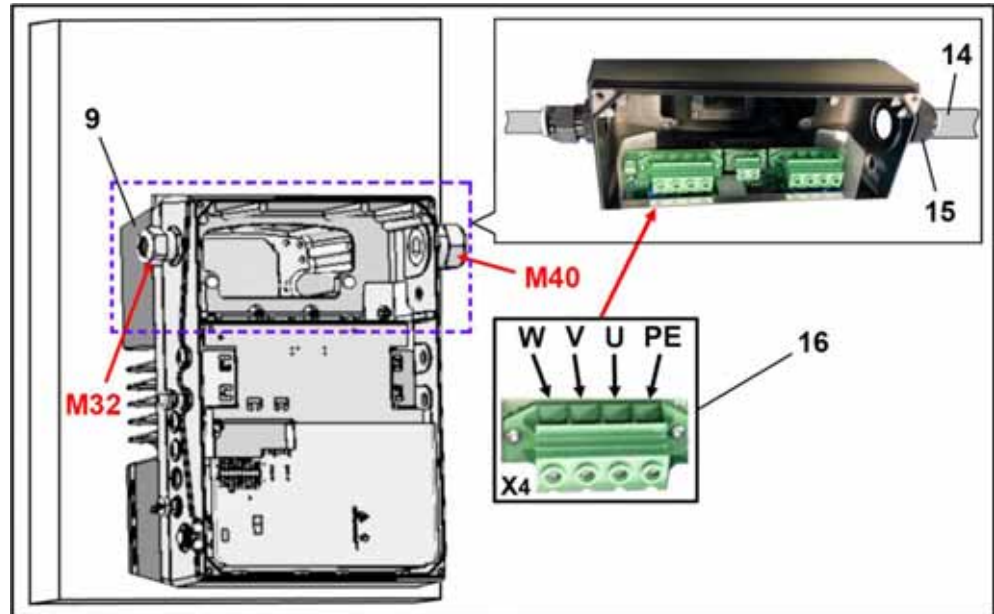

Motor connection size D

1. Lead the motor connection box (14) through the cable gland (15) [M40] to the drive controller (9).


### NOTICE

The cable gland provides cable relief, the PE connection line must be connected as a leading contact (significantly longer)!

2. Connect the lines with the connection terminals [X4] (16) as follows:

#### Motor terminal assignment X4

Terminal no.	Designation	(Terminal) assignment
1	PE	Earth conductor
2	U	Motor phase 1
3	V	Motor phase 2
4	W	Motor phase 3

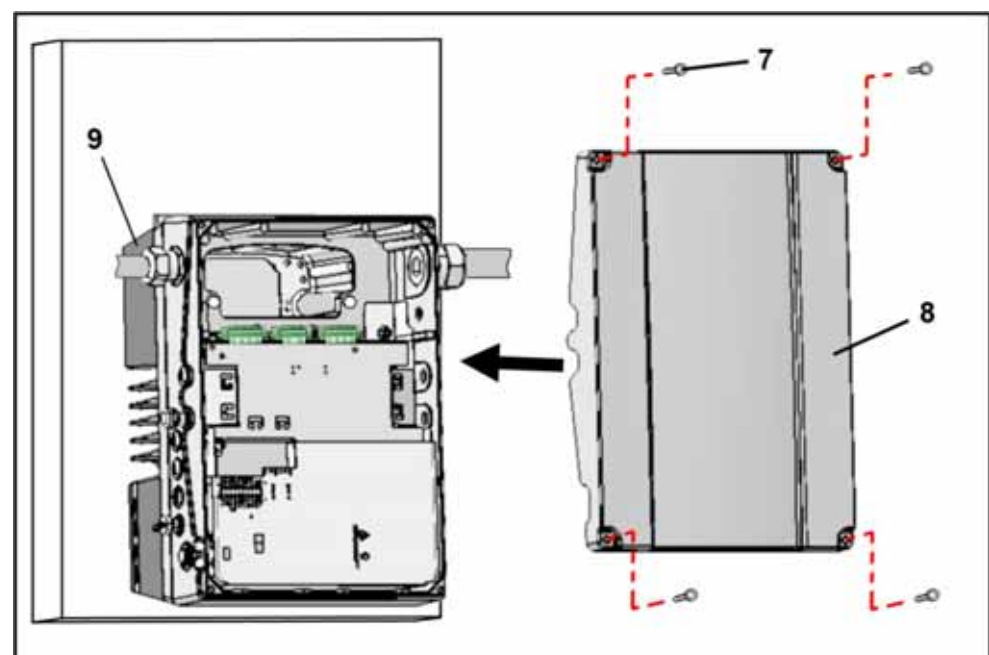

Closing of the housing size D

1. Place the cover (8) onto the housing of the drive controller (9).
2. Screw both parts together with the four screws (7) (torque: **4 Nm** [2.95 ft lbs]).

#### **5.4.4 Power connection**

The power connections are made as described in the sections Power connection of sizes A - C [→ 29] and Power connection of size D [→ 30].

#### **5.4.5 Braking chopper**

The braking connections are made as described in the section Connections for braking resistor [→ 30].

#### **5.4.6 Control terminals**

The control terminals are provided as described in the section Control terminals [→ 31].

### 6.1 Safety information for commissioning

#### WARNING

##### **Risk of injury!**

**The non-observance of warnings can result in severe bodily injury or substantial property damage.**

1. Make sure that the power supply provides the correct voltage and is designed for the necessary current.
2. Use suitable circuit breaker with the specified nominal current between the mains supply and drive controller.
3. Use appropriate fuses with the corresponding current values between the mains supply and the drive controller (see Technical data [→ 88]).
4. The drive controller must be correctly earthed to the motor. Not doing so may result in serious injury.

#### *NOTICE*

##### **Risk of damage!**

**The drive controller can be damaged in the case of non-compliance with the instructions and destroyed during subsequent handling.**

- ① Commissioning may only be carried out by qualified personnel. Safety precautions and warnings must always be observed.

### 6.2 Communication

The drive controller can be put into operation in the following ways:

- using the PC software



*PC software - start screen*

- via the hand-held unit MMI\*



*Manual control unit MMI*


- via the MMI\* in the cover (option)



*MMI in the cover*

\* Human Machine Interface

## 6.3 Block diagram

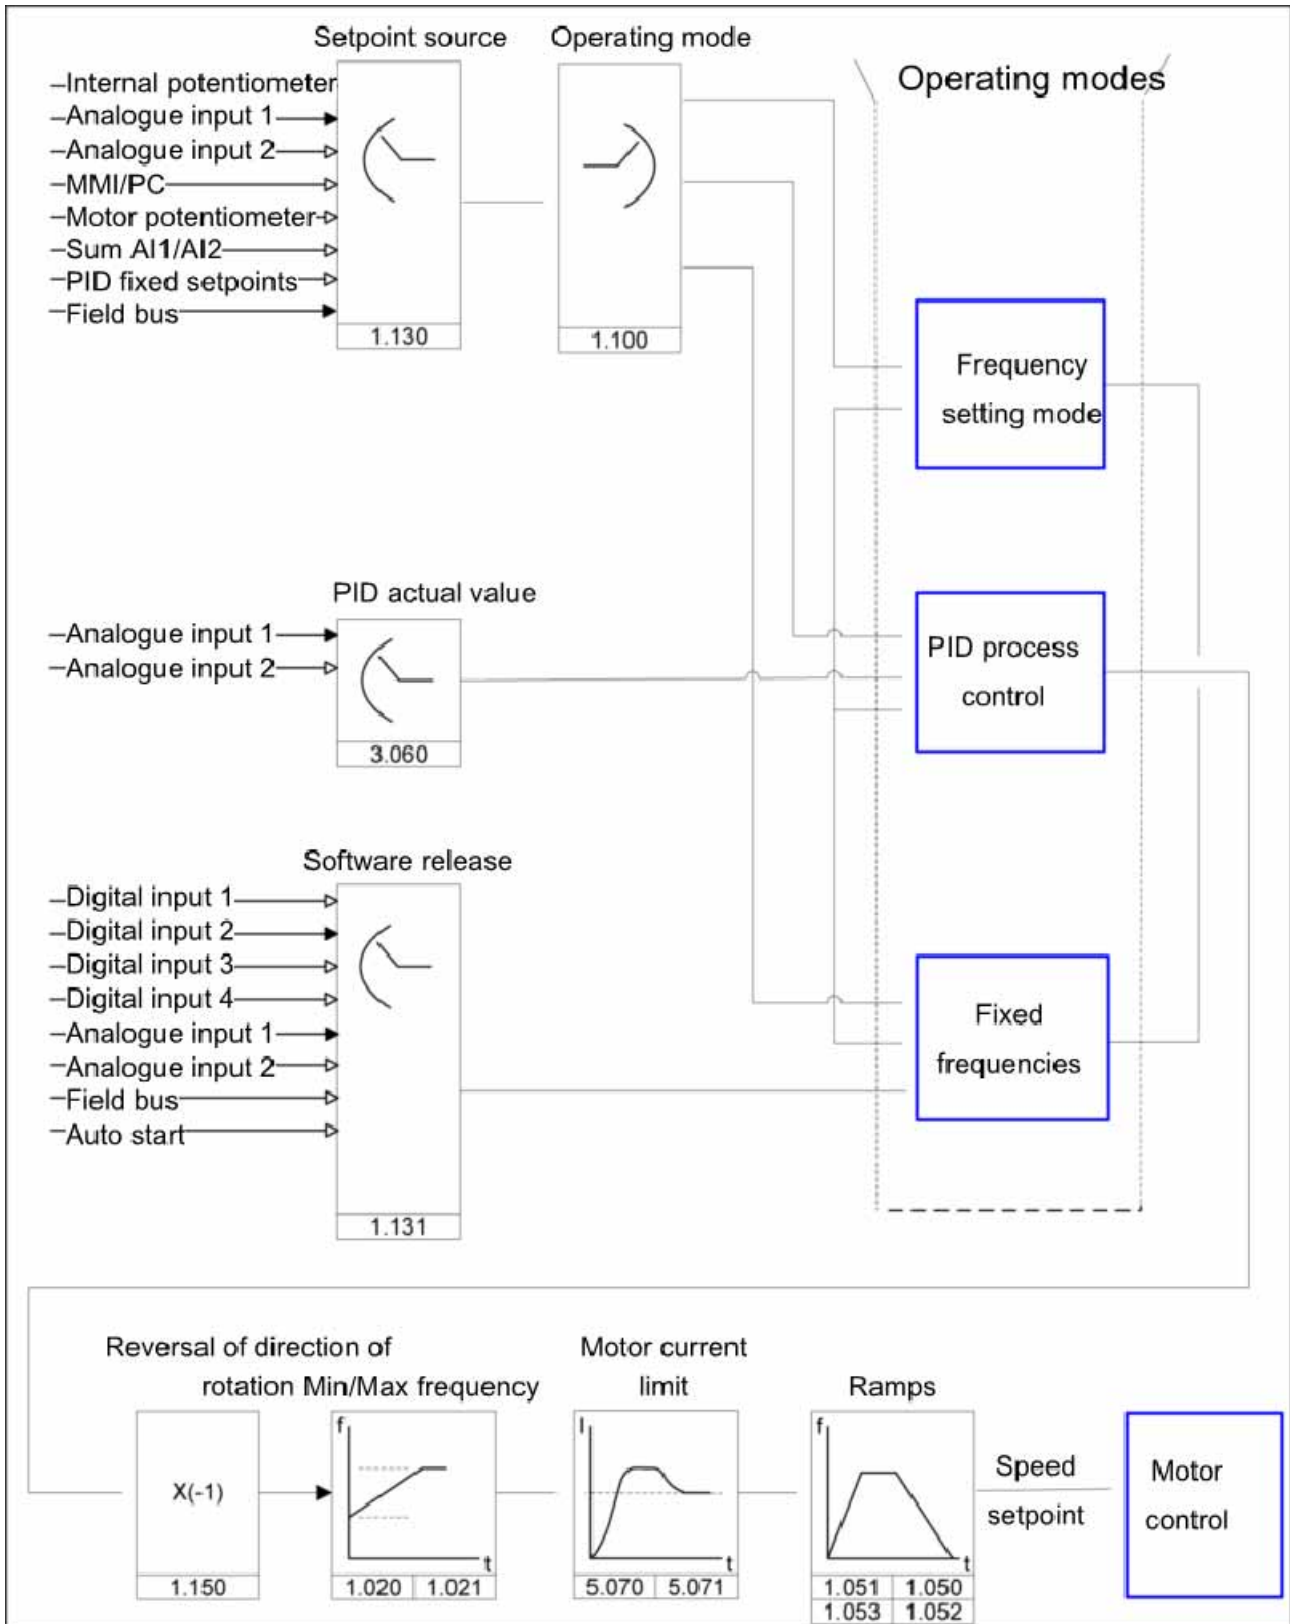

General structure setpoint generation

## 6.4 Commissioning steps

**The drive control can be parameterised on the motor prior to installation.**

- ① To this end, the drive controller has a 24 V low-voltage input, which powers the electronic parts, and without which a mains voltage must be supplied.

Commissioning can be done with a USB PC communication cable to connector M12 with integrated RS485/RS232 interface converter (2FC4521-0ER00) or via the MMI hand-held unit, including connection cable RJ9 to connector M12 (2FX4520-0ER00).

### 6.4.1 Start up the integrated drive control

Prior to delivery, the motor data set was installed on the drive control and requires no further settings.

With a high signal on terminal strip X5 through the hardware release (En-HW) on terminal no. 10 and software release on terminal no. 6 (digital input 1), the drive control can be put into operation (e.g. control via analogue input 1 with 0-10 V).


### 6.4.2 Commission the drive control wall assembly and replacement

#### Commissioning with PC


1. Install PC software (you can obtain program software free of charge from the manufacturer or at [www.gd-elmorietschle.de](http://www.gd-elmorietschle.de)).  
Required operating system Windows XP or Windows 7 (32/64 bit). It is recommended to carry out the installation as the administrator.
2. Connect the PC via connection cable to the M12 connector M1.
3. Load the motor data set and continue further application settings.

**OR**

determine the motor data set (parameters 33,030 to 33,050). If necessary, optimise the speed controller (parameter 34,100 to 34,101).

<b>Gardner Denver</b> compressor / vacuum pump		G-BH. 2BH..... No. BN XXXXXXXX XXX /MMYY IEC/EN 60034 3~ Motor IP55 TH.CL.F S9	
motor data	rated data with converter		
④ Hz ⑤ . V ① . . A	.. Hz . . . V / . . . A	.. Hz -xxx xxx mbar	
② kW P.F. . ⑥	.. kW . . . . rpm	.. Hz -xxx xxx mbar	④
③ . . rpm		.. Hz -xxx xxx mbar	
xxxxxxxxxxxxxxxxxxxxxxxx		.. Hz -xxx xxx mbar	
xxxxxxxxxxxxxxxxxxxxxxxx			<b>Made in Germany</b>

*Motor data rating plate (example)*

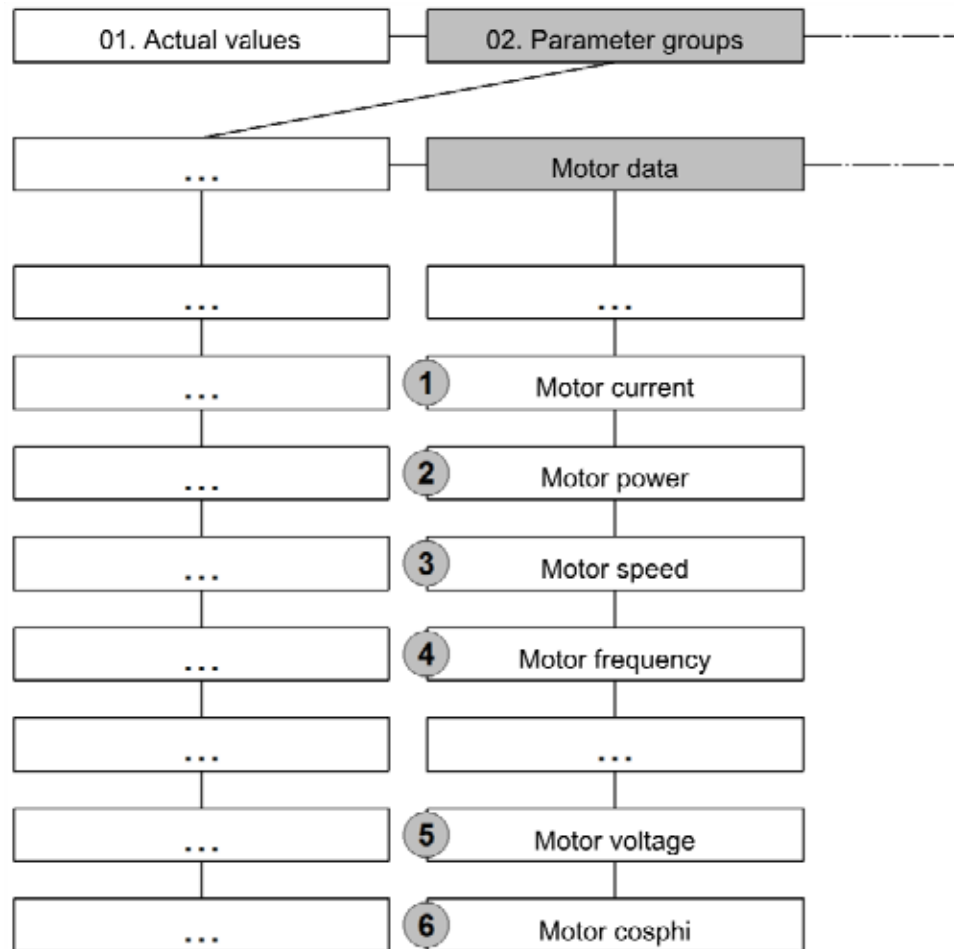

4. Perform motor identification.
5. Implement application settings (ramps, inputs, outputs, setpoints, etc.).
6. Optional: Define access level (1 - HAND-HELD UNIT MMI, 2 - user 3 - manufacturer).
7. Once all settings have been implemented, with a high signal on terminal strip X5 through the hardware release (En-HW) on terminal no. 10 and software release on terminal no. 6 (digital input 1), the drive control can be put into operation (e.g. control via analogue input 1 with 0-10 V).

For an optimum operating structure of the PC software, the parameters are divided into access levels. A distinction is made between:

1. Hand-held unit - the drive controller is programmed using the hand-held unit.
2. User - the drive control can be programmed with the basic parameters using the PC software.
3. Manufacturer - the drive control can be programmed with an advanced selection of parameters using the PC software.

### Commissioning with the MMI hand-held unit

For commissioning with the MMI hand-held unit, see MMI hand-held unit operating manual.



## Commissioning using PC and MMI in cover

1. Install PC software (program software can be obtained free of cost from the manufacturer or under [www.gd-elmorietschle.de](http://www.gd-elmorietschle.de)). Required operating system Windows XP or Windows 7 (32/64 bit). It is recommended to carry out the installation as the administrator.
2. Connect PC via connection cable to M12 connector.

### *NOTICE*

**After a "Power on" of the drive controller, the diagnostic interface (M12 PC/MMI) is initially disabled.**



3. For the activation of the diagnostic interface, it is necessary to set the "MMI in the cover" into standby.
4. To do so, press the keys (1) and (2) simultaneously for approx. 1.5 sec.
5. The MMI display shows "Standby" and the internal communication is interrupted for 25 sec.
6. If communication for the PC is established within 25 sec., the MMI remains in standby mode.
7. If communication is aborted or a communication setup is not possible within the 25 sec., the "MMI in the cover" changes from standby mode to normal operation.

## Rotating the notification by 180°

1. It may be necessary, due to the installation position of the controller, to rotate the notification in the display by 180°.
2. The notification in the display can be rotated by 180° via parameter 5,200. To do so, the parameter value has to be set on "1".

### *NOTICE*

**The display only shows the notification after pressing the button "Disconnect" rotated by 180° in the PC software.**



3. It is also possible to rotate the display by 180° with the "MMI in the cover".
4. To do so, press the keys (3) and (4) simultaneously for approx. 1.5 sec.
5. The notification in the display, as well as the functionality of the keyboard layout, is rotated by 180°.

In this chapter, you will find

- an introduction to the parameters
- an overview of the most important commissioning and operating parameters

## 7.1 Safety instructions for handling the parameters

### WARNING

**Risk of injury from restarting motors!**

**The non-observance of warnings can result in severe bodily injury or substantial property damage.**

- ① Certain parameter settings and the changing of parameter settings during operation can cause the drive controller to restart automatically after a power failure, or cause undesirable changes in the operating characteristics.

---

**If parameters are changed during operation, it may take a few seconds before the effect becomes apparent.**

---

## 7.2 General information on parameters

### 7.2.1 Explanation of operating modes

The operating mode is the instance in which the actual setpoint is generated. This is a simple conversion of the raw input setpoint value into a speed setpoint in case of the frequency setting mode and control of a specific process variable by comparing the setpoint and actual values in case of the PID process control.

#### Frequency setting mode:

The setpoints from the "setpoint source" (1,130) are rescaled into frequency setpoints. 0% corresponds to the "Minimum frequency" (1,020), 100% corresponds to the "Maximum frequency" (1,021).

The prefix of the setpoint is the decisive factor in rescaling.

#### PID process control:

The setpoint for the PID process controller is read as percentage in the "Frequency setting mode" operating mode. 100% corresponds to the working range of the connected sensor, which is read from the actual value input (selected by the "PID actual value").

Depending on the control deviation, a speed controller output is issued at the controller output, based on the amplification factors for the P component (3,050), I component (3,051) and D component (3,052). In order to prevent the increase of the integral component to infinity in case of uncontrollable control deviations, it is also limited to the controller output threshold when reaching the same (corresponds to "Maximum frequency" (1,021).


#### PID inverse:

Inversion of the PID feedback can be done with the help of parameter 3,061. The actual value is read invertedly, i.e. 0V...10V correspond internally to 100% ... 0%.

Please bear in mind that the setpoint should also be specified inversely!

An example:

A sensor with an analogue output signal (0V...10V) is to be operated as the actual value source (at AIx). At an output quantity of 7V (70%), it should be regulated inversely. The internal actual value then corresponds to 100% - 70% = 30%. That is, the setpoint to be specified is 30%.

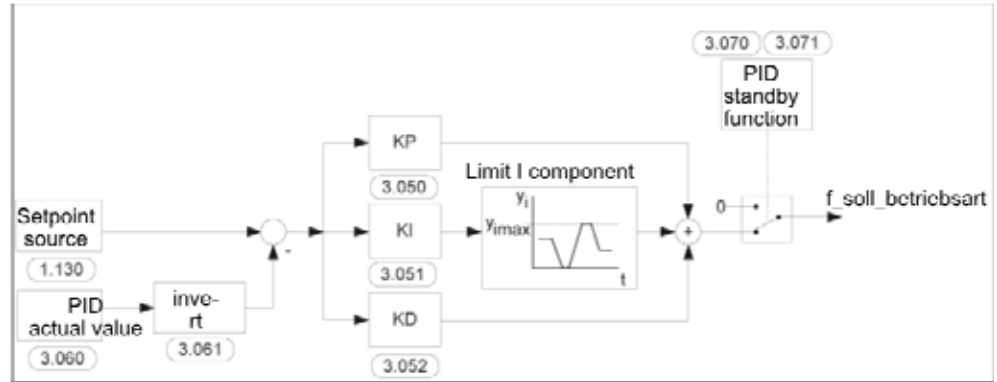


*PID process control*

### Standby function PID process control:

This function can be used in applications, such as pressure boosting systems, in which it is controlled to a specific process variable using the PID process control and the pump should run at a "Minimum frequency" (1020) to lead to energy savings. Since the drive controller reduces the pump speed with decreasing process variable during normal operation, but can never go below the "Minimum frequency" (1,020), it is possible to stop the motor when it runs at the "Minimum frequency" (1,020) for a wait time, the "PID standby time" (3,070).

After the actual value deviates from the setpoint by the set % value, the "PID standby hysteresis" (3,071), the (motor) control is restarted.

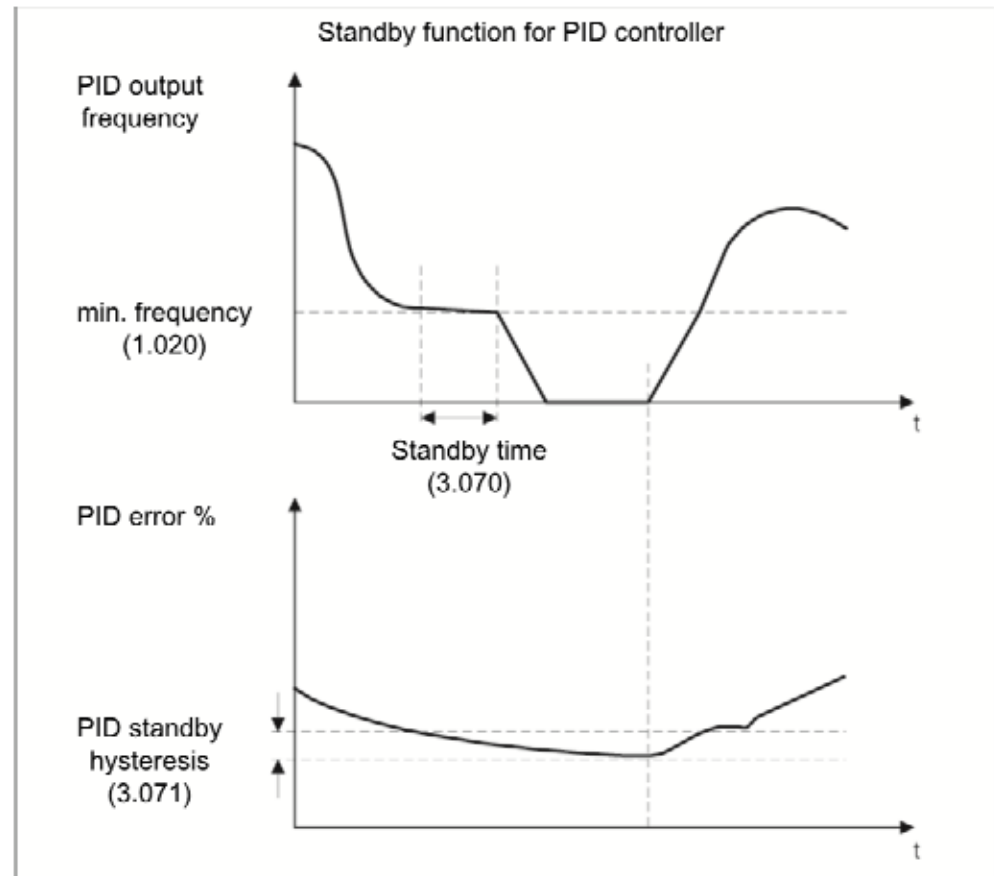

*Standby function PID process control*

### Fixed frequency

In this operating mode, fixed frequency setpoints are passed on to the motor control. There are 7 fixed frequencies (2,051 - 2,057) which are linked in BCD format to the digital inputs 1 to 3. These seven fixed frequencies can be enabled via the parameter "Auswahl\_Festfrequenz" (2,050) into three groups:

- 0 = Fixed frequency 1
- 1 = Fixed frequency 1 to 3
- 2 = Fixed frequency 1 to 7

### Logic table of fixed frequencies

DI 3	DI 2	DI 1	Selection	Parameters	Presetting
0	0	1	Fixed frequency 1	2,051	34 Hz
0	1	0	Fixed frequency 2	2,052	67 Hz
0	1	1	Fixed frequency 3	2,053	50 Hz
1	0	0	Fixed frequency 4	2,054	0 Hz
1	0	1	Fixed frequency 5	2,055	0 Hz
1	1	0	Fixed frequency 6	2,056	0 Hz
1	1	1	Fixed frequency 7	2,057	0 Hz

### Fixed setpoints

In this operating mode, PID setpoints are passed on to the motor control. There are 7 fixed setpoints (3,062 - 3,068) which are linked in BCD format to the digital inputs 1 to 3. These 7 fixed setpoints can be activated via the parameter "PID setpoint mode" (3,069) into three groups:

- 0 = fixed setpoint 1
- 1 = fixed setpoint 1 bis 3
- 2 = fixed setpoint 1 to 7

### Logic table of fixed setpoints

DI 3	DI 2	DI 1	Selection	Parameters	Presetting
0	0	1	PID fixed setp. 1	3,062	0%
0	1	0	PID fixed setp. 2	3,063	0%
0	1	1	PID fixed setp. 3	3,064	0%
1	0	0	PID fixed setp. 4	3,065	0%
1	0	1	PID fixed setp. 5	3,066	0%
1	1	0	PID fixed setp. 6	3,067	0%
1	1	1	PID fixed setp. 7	3,068	0%

### 7.2.2 Structure of parameter tables

1	2	3	4	5	6
<b>1.100</b>	<b>Operating mode</b>			<b>Unit: Integer</b>	
Relationship to parameter: 1.130 1.131 2.051 – 2.057 3.050 – 3.071	Parameter HB:  S. xy	Transfer status:  2		min: 0 max: 3 Def: 0	Intrinsic value <b>(to be entered!)</b>
	Selection of operating mode. Following the software release (1,131) and hardware release, the drive controller runs with the setpoint of the selected setpoint source (1,130) at 0 = frequency setting mode, with the setpoint of the PID process controller (3,050 - 3,071) at 1 = PID process controller, with the frequencies specified in the parameters 2,051 - 2,057 at 2 = fixed frequencies, and via integrated soft PLC at 3 = selection				
9			8		7

Example of parameter table

- |  |  |
|--|--|
| 1 Parameter number<br><br>2 Description in the parameters manual on page...<br><br>3 Parameter name<br><br>Transfer status<br>0 = turn on and off to take over the drive controller<br>1 = at speed 0<br>2 = in operation<br><br>5 Range of values (from - to - factory setting) | 6 Unit<br><br>7 Box for entering the inherent value<br><br>8 Explanation of the parameters<br><br>9 Other parameters related to this parameter |
|--|--|

## 7.3 Application parameter

## 7.3.1 Basic parameters

1,020	Minimum frequency		Unit: Hz	
Relationship to parameter: 1,150 3,070 3,080	Parameter manual:  S. xy	Transfer status:  2	min: 0 max: 400 Def: 25	Intrinsic value <b>(to be entered!)</b>
<p>The minimum frequency is the frequency that is supplied by the drive controller as soon as it is released and no additional set-point is pending.</p> <p>This frequency is not reached if</p> <p>a) it is accelerated from the stationary drive.</p> <p>b) the FI is locked. The frequency is then reduced to 0 Hz before it is locked.</p> <p>c) the FI reverses (1.150). Reversing the field of rotation occurs at 0 Hz.</p> <p>d) the standby function (3,070) is active.</p>				
1,021	Maximum frequency		Unit: Hz	
Relationship to parameter: 1.050 1.051	Parameter manual:  S. xy	Transfer status:  2	min: 5 max: 400 Def: see data plate	Intrinsic value <b>(to be entered!)</b>
<p>The maximum frequency is the highest frequency issued by the converter as a function of the setpoint.</p>				
1,050	Braking time		Unit: s	
Relationship to parameter: 1.021 1.054	Parameter manual:  S. xy	Transfer status:  2	min: 0.1 max: 1000 Def: Type-specific	Intrinsic value <b>(to be entered!)</b>
<p>The braking time 1 is the time it takes for the inverter to decelerate from the max. frequency (1,021) to 0 Hz.</p> <p>If the set braking time cannot be met, the fastest possible braking time is implemented.</p>				
1,051	Power-up time 1		Unit: s	
Relationship to parameter: 1.021 1.054	Parameter manual:  S. xy	Transfer status:  2	min: 0.1 max: 1000 Def: Type-specific	Intrinsic value <b>(to be entered!)</b>
<p>The power-up time 1 is the time it takes the inverter to accelerate from 0 Hz to the max. frequency.</p> <p>The power-up time can be extended under certain circumstances, e.g. overload of the drive controller.</p>				

1,052	Braking time 2		Unit: s	
Relationship to parameter: 1.021 1.054	Parameter manual:	Transfer status:	min: 0.1	Intrinsic value <b>(to be entered!)</b>
			max: 1000	
	S. xy	2	Def: 10	
<p>The braking time 2 is the time it takes for the inverter to decelerate from the max. frequency (1,021) to 0 Hz. If the set braking time cannot be met, the fastest possible braking time is implemented.</p>				

1,053	Power-up time 2		Unit: s	
Relationship to parameter: 1.021 1.054	Parameter manual:	Transfer status:	min: 0.1	Intrinsic value <b>(to be entered!)</b>
			max: 1000	
	S. xy	2	Def: 10	
<p>The power-up time 2 is the time it takes the inverter to accelerate from 0 Hz to the max. frequency. The power-up time can be extended under certain circumstances, e.g. overload of the drive controller.</p>				

1,054	Ramp selection		Unit: integer	
Relationship to parameter: 1,050 – 1,053	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
			max: 9	
	S. xy	2	Def: 0	
<p>Selection of the used pair of ramps.            0 = braking time 1 (1,050)/power-up time 1 (1,051)            1 = braking time 2 (1,052)/power-up time 2 (1,053)            2 = digital input 1 (false = pair of ramps 1/true = pair of ramps 2)            3 = digital input 2 (false = pair of ramps 1/true = pair of ramps 2)            4 = digital input 3 (false = pair of ramps 1/true = pair of ramps 2)            5 = digital input 4 (false = pair of ramps 1/true = pair of ramps 2)            6 = customer PLC            7 = analogue input 1 (must be selected in parameter 4,030)            8 = analogue input 2 (must be selected n parameter 4,060)            9 = virtual output 1 (4,230)</p>				

1,100	Operating mode		Unit: integer	
Relationship to parameter: 1,130 1,131 2,051 - 2,057 3,050 - 3,071	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
			max: 3	
	S. xy	2	Def: 0	
<p>Selection of operating mode. Following the software release (1,131) and hardware release, the drive controller runs at            0 = frequency setting mode with the setpoint of the selected setpoint source (1,130)            1 = PID process controller, with the setpoint of the PID process controller (3,050 - 3,071)            2 = fixed frequencies, with the frequencies specified in the parameters 2,051 - 2,057            3 = selection via integrated soft PLC</p>				

1,130	Setpoint source		Unit: integer	
Relationship to parameter: 3,062 – 3,069	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
			max: 10	
	S. xy	2	Def: 1	
<p>Specifies the source from which the setpoint should be read.</p> <p>0 = internal potentiometer            1 = analogue input 1            2 = analogue input 2            3 = MMI/PC            4 = SAS            6 = motor potentiometer            7 = total analogue inputs 1 and 2            8 = PID fixed setpoints (3,062 to 3,069)            9 = field bus            10 = integrated soft PLC</p>				

1,131	Software release		Unit: integer	
Relationship to parameter: 1,132 1,150 2,050 4,030 4,060	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
			max: 16	
	S. xy	2	Def: 0	
<p><b>⚠ WARNING! Depending on the change made, the motor may start to run directly.</b></p> <p>Selection of the source for the control release.</p> <p>0 = digital input 1            1 = digital input 2            2 = digital input 3            3 = digital input 4            4 = analogue input 1 (must be selected in parameter 4,030)            5 = analogue input 2 (must be selected in parameter 4,060)            6 = field bus            7 = SAS/Modbus (as of 03.80)            8 = digital input 1 right/digital input 2 left            1,150 must be set to "0"            9 = auto start            10 = integrated soft PLC            11 = fixed frequency inputs (all inputs that have been selected in parameter 2,050)            12 = internal potentiometer            13 = membrane keyboard (start &amp; stop keys)            14 = MMI/PC            15 = virtual output 1            16 = membrane keyboard retentive</p> <p>If the hardware release and a setpoint are applied, the motor may start to run directly!            This cannot be prevented even with parameter 1.132.</p>				



1,132	Start-up protection		Unit: integer	
Relationship to parameter: 1,131	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
			max: 6	
	S. xy	2	Def: 0	
<p>Selection of characteristics on the control release (parameter 1,131).            No effect if auto start was selected.            0 = immediate start at high signal at the start input of the control release            1 = start only with increasing slope at the start input of the control release            2 = digital input 1 (function active at high signal)            3 = digital input 2 (function active at high signal)            4 = digital input 3 (function active at high signal)            5 = digital input 4 (function active at high signal)            6 = integrated soft PLC            7 = analogue input 1 (must be selected in parameter 4,030)            8 = analogue input 2 (must be selected in parameter 4,060)</p>				

1,150	Direction of rotation		Unit: integer	
Relationship to parameter: 1,131 4,030 4,060	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
			max: 16	
	S. xy	2	Def: 1	
<p>Selection of the specified direction of rotation.            0 = setpoint-dependent (depending on the prefix of the setpoint: positive: forward; negative: reverse)            1 = forward only (change in the direction of rotation not possible)            2 = reverse only (change in the direction of rotation not possible)            3 = digital input 1 (0V = forward, 24V = reverse)            4 = digital input 2 (0V = forward, 24V = reverse)            5 = digital input 3 (0V = forward, 24V = reverse)            6 = digital input 4 (0V = forward, 24V = reverse)            7 = integrated soft PLC            8 = analogue input 1 (must be selected in parameter 4,030)            9 = analogue input 2 (must be selected in parameter 4,060)            10 = membrane keyboard with key for reversal of the direction of rotation (only with running motor)            11 = membrane keyboard with key 1 for forward/2 for reverse (reverse is always possible)            12 = membrane keyboard with key 1 for forward/2 for backward (reverse only possible when motor is not running)            13 = virtual output (4,230)            14 = membrane keyboard key for direction of rotation (only in operational state) retentive            15 = membrane keyboard key I + II retentive            16 = membrane keyboard key I + II (only when motor is at standstill) ) retentive</p>				

1,180	Acknowledgement function		Unit: integer	
Relationship to parameter: 1.181 1.182	Parameter manual: S. xy	Transfer status: 2	min: 0	Intrinsic value <b>(to be entered!)</b>
			max: 7	
Def: 3				
<p>Selects the source for the error acknowledgement. Errors can only be acknowledged if the error is no longer present. Certain errors can only be acknowledged by switching the controller on and off, see list of errors. Automatic acknowledgement via parameter 1,181. 0 = no manual acknowledgement possible 1 = increasing slope at the digital input 1 2 = increasing slope at the digital input 2 3 = increasing slope at the digital input 3 4 = increasing slope at the digital input 4 5 = membrane keyboard (acknowledgement key) 6 = analogue input 1 (must be selected in parameter 4,030) 7 = analogue input 2 (must be selected in parameter 4,060)</p>				
1,181	Automatic acknowledgement function		Unit: s	
Relationship to parameter: 1.180 1.182	Parameter manual: S. xy	Transfer status: 2	min: 0	Intrinsic value <b>(to be entered!)</b>
			max: 1000000	
Def: 0				
<p>Besides the acknowledgement function (1.180), automatic fault acknowledgement can also be selected. 0 = no automatic acknowledgement &gt; 0 = time for the automatic reset of the error in seconds</p>				
1,182	Automatic acknowledgement number		Unit:	
Relationship to parameter: 1.180 1.181	Parameter manual: S. xy	Transfer status: 2	min: 0	Intrinsic value <b>(to be entered!)</b>
			max: 500	
Def: 5				
<p>In addition to the automatic acknowledgement function (1,181), the maximum number of automatic acknowledgements can be limited here. 0 = no limit of the automatic acknowledgements &gt; 0 = number of maximum automatic acknowledgements allowed</p>				

### Information

The internal counter for automatic acknowledgement already made is reset when the motor is operated for the period "Maximum number of acknowledgements x automatic acknowledgement time" Without error occurrence (motor current > 0.2A).

### Example of resetting counter automatic acknowledgement

Max. number of acknowledgements = 8  
Automatic acknowledgement time = 20 sec. } 8 x 20 sec. = 160 sec.

After operating the motor for 160 sec. without error, the internal counter for "Automatic acknowledgements" carried out is reset to "0". The example accepted 8 "Automatic acknowledgements". If an error occurs within those 160 secs., "Error 22" is triggered during the 9th acknowledgement attempt. This error must be acknowledged manually by switching off the network.

## 7.3.2 Fixed frequency

This mode must be selected in parameter 1.100, see also selection of the operating mode.

2,050	Fixed frequency mode		Unit: integer	
Relationship to parameter: 1,100 2,051 – 2,057	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
			max: 4	
			Def: 1	
Selection of the digital inputs used for the fixed frequencies. 0 = digital In 1 (fixed frequency 1)(2,051) 1 = digital In 1, 2 (fixed frequencies 1 - 3) (2,051 - 2,053) 2 = digital In 1, 2, 3 (fixed frequencies 1 - 7) (2,051 - 2,057) 3 = membrane keyboard (key 1 = fixed frequency 1/key 2 = fixed frequency 2) 4 = fixed frequency (key I = fixed frequency 1/Taste II = fixed frequency 2) retentive				
2.051 – 2.057	Fixed frequency		Unit: Hz	
Relationship to parameter: 1.020 1.021 1.100 1.150 2.050	Parameter HB:	Transfer status:	min: -400	Intrinsic value <b>(to be entered!)</b>
			max: +400	
			Def:	
			2.051: 34 2.052: 67 2.053: 50	
The frequencies that should be output depending on the switching pattern on the digital inputs 1 - 3 set in parameter 2.050. See fixed frequency, Explanation of operating modes [→ 50].				

## 7.3.3 Motor potentiometer

This mode must be selected in parameter 1.130. This function can be used both as a setpoint source for the frequency setting mode, as well as for the PID process controller.

2,150	MOP digital input		Unit: integer	
Relationship to parameter: 1,130 4,030 4,060	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
			max: 8	
			Def: 0	
Selection of the source to increase and decrease the setpoint. 0 = digital input 1 +/digital input 2 - 1 = digital input 1 +/digital input 3 - 2 = digital input 1 + digital input 4 - 3 = digital input 2 +/digital input 3 - 4 = digital input 2 +/digital input 4 - 5 = digital input 3 + digital input 4 - 6 = analogue Input 1 +/analogue Input 2 - (must be selected in parameter 4,030/4,060) 7 = Integrated soft PLC 8 = membrane keyboard (key 1 -/key 2 +)				

2.151	MOP increment		Unit: %	
Relationship to parameter: 1.020 1.021	Parameter HB:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 100	
			Def: 1	
Increment at which the setpoint value is to be changed per key-stroke.				

2.152	MOP increment time		Unit: s	
Relationship to parameter:	Parameter HB:	Transfer status:	min: 0.02	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 1000	
			Def: 0.04	
Specifies the time in which the setpoint is summed up with permanently present signal.				

2.153	MOP response time		Unit: s	
Relationship to parameter:	Parameter HB:	Transfer status:	min: 0.02	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 1000	
			Def: 0.3	
Specifies the time until the present signal is considered to be permanent.				

2.154	MOP retentive		Unit: integer	
Relationship to parameter:	Parameter HB:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 1	
			Def: 0	
Determines whether the setpoint of the motor potentiometer is retained even after power failure. 0 = deactivated 1 = activated				

### 7.3.4 PID process controller

This mode must be selected in parameter 1,100, the setpoint source must be selected in parameter 1,130, see also fixed frequency, Explanation of operating modes [→ 50].

3,050	PID-P gain		Unit:	
Relationship to parameter: 1.100 1.130	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 100	
			Def: 0.25	
Gain factor proportional component of the PID controller.				

3,051	PID-I gain		Unit: s <sup>-1</sup>	
Relationship to parameter: 1.100 1.130	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 100	
			Def: 0.25	
Gain factor integral component of the PID controller.				

3,052	PID-D gain		Unit: s	
Relationship to parameter: 1,100 1,130	Parameter manual:  S. xy	Transfer status:  2	min: 0 max: 100 Def: 0	Intrinsic value <b>(to be entered!)</b>
Gain factor differential component of the PID controller.				
3,060	PID actual value		Unit: integer	
Relationship to parameter: 1,100 1,130 3,061	Parameter manual:  S. xy	Transfer status:  2	min: 0 max: 3 Def: 1	Intrinsic value <b>(to be entered!)</b>
Selection of the input source, from which the actual value for the PID process controller is read. 0 = analogue input 1 1 = analogue input 2 2 = integrated soft PLC 3 = field bus (fixed customer-specific input value 2)				
3,061	PID inverse		Unit: integer	
Relationship to parameter: 3,060	Parameter manual:  S. xy	Transfer status:  2	min: 0 max: 1 Def: 0	Intrinsic value <b>(to be entered!)</b>
The actual value source (parameter 3,060) is inverted. 0 = deactivated 1 = activated				
3,062 – 3,068	PID fixed setpoints		Unit: %	
Relationship to parameter: 1,100 1,130	Parameter manual:  S. xy	Transfer status:  2	min: 0 max: 100 Def: 0	Intrinsic value <b>(to be entered!)</b>
PID fixed setpoint values that should be output at the digital inputs 1 – 3 set in parameter 3,069, depending on the switching pattern (must be selected in parameter 1,130).				
3,069	PID fixed setpoint mode		Unit: integer	
Relationship to parameter: 1,100 3,062 – 3,068	Parameter manual:  S. xy	Transfer status:  2	min: 0 max: 2 Def: 0	Intrinsic value <b>(to be entered!)</b>
Selection of the digital inputs used for the fixed frequencies. 0 = digital In 1 (PID fixed setpoint 1) (3,062) 1 = digital In 1, 2 (PID fixed setpoint 1 - 3) (3,062 to 3,064) 2 = digital In 1, 2, 3 (PID fixed setpoint 1 - 7) (3,062 - 3,068)				
3,070	PID standby time		Unit: s	
Relationship to parameter: 1,020	Parameter manual:  S. xy	Transfer status:  2	min: 0 max: 10000 Def: 0	Intrinsic value <b>(to be entered!)</b>
If the drive controller runs the set time at its minimum frequency (parameter 1,020), the motor is stopped (0 Hz), see also PID process control, Explanation of operating modes [→ 50]. 0 = deactivated >0 = wait time until the activation of the standby function				

3,071	PID standby hysteresis		Unit: %	
Relationship to parameter: 3,060	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
	S. xy	2	max: 50	
			Def: 0	
<p>Wake-up condition of the PID controller from the standby function.                      If the control deviation is greater than the set value in %, the control restarts, see also operating modes of PID controller.</p>				
3,072	PID dry run time		Unit: s	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
	S. xy	2	max: 32767	
			Def: 0	
<p>If the PID actual value has not reached at least 5% after this set time and the drive controller runs at max. limit, the controller switches off with error no. 16 "PID dry run".</p>				
3,073	PID setpoint min		Unit: %	
Relationship to parameter: 3,074	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
	S. xy	2	max: 100	
			Def: 0	
<p>The PID setpoint can be limited via 2 parameters.                      Example: 0 - 10 V setpoint potentiometer                      Para. Min PID setpoint = 20%                      Para. Max PID setpoint = 80%                      Setpoint at &lt; 2 V = 20%                      Setpoint at 2 V - 8 V = 20% - 80%                      Setpoint at &gt; 8 V = 80%</p>				
3,074	PID setpoint max		Unit: %	
Relationship to parameter: 3,073	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
	S. xy	2	max: 10000	
			Def: 0	
<p>The PID setpoint can be limited via 2 parameters.                      Example: 0 - 10 V setpoint potentiometer                      Para. Min PID setpoint = 20%                      Para. Max PID setpoint = 80%                      Setpoint at &lt; 2 V = 20%                      Setpoint at 2 V - 8 V = 20% - 80%                      Setpoint at &gt; 8 V = 80%</p>				

3,080	PID minimum frequency 2		Unit: Hz	
Relationship to parameter: 1,020	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 400	
			Def: 0	
<p>The minimum frequency is calculated depending on the PID setpoint            Example:            1,020 minimum frequency = 10 Hz            3,080 PID minimum frequency 2 = 20Hz</p> <p>Minimum frequency at PID setpoint 0% = 10 Hz            Minimum frequency at PID setpoint 50% = 15 Hz            Minimum frequency at PID setpoint 100% = 20 Hz</p>				

### 7.3.5 Analogue inputs

For analogue inputs 1 and 2 (Alx - illustration AI1/AI2)

4,020/4,050	Alx input type		Unit: integer	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 1	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 2	
			Def: 4.020 1 4.050 2	
<p>Function of the analogue inputs 1/2.            1 = voltage input            2 = current input</p>				

4.021/4.051	Alx standard. Low		Unit: %	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 100	
			Def: 0	
<p>Specifies the minimum value of the analogue inputs as a percentage of the final range value.            Example:            0... 10V or 0... 20 mA = 0 %... 100%            2... 10V or 4... 20mA = 20%... 100%</p>				

4.022/4.052	Alx standard. High		Unit: %	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 100	
			Def: 100	
<p>Specifies the maximum value of the analogue inputs as a percentage of the final range value.            Example            0...10V or 0...20mA = 0%...100%            2...10V or 4...20mA = 20%...100%</p>				

4.023/4.053	Alx backlash		Unit: %	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 100	
			Def: 0	
<p>Backlash as percentage of final range value of the analogue inputs.</p>				

4.024/4.054	Alx filtering time		Unit: s	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0.02	Intrinsic value (to be entered!)
			max: 1.00	
	S. xy	2	Def: 0	
Filtering time of the analogue inputs in seconds.				
4.030/4.060	Alx function		Unit: integer	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 1	
	S. xy	2	Def: 0	
Function of the analogue inputs 1/2. 0 = analogue input 1 = digital input				
4.033/4.063	Alx physical unit		Unit:	
Relationship to parameter: 4.034/4.064 4.035/4.065	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 10	
	S. xy	2	Def: 0	
Selection of the different physical variables to be displayed. 0 = % 1 = bar 2 = mbar 3 = psi 4 = Pa 5 = m <sup>3</sup> /h 6 = l/min 7 = °C 8 = °F 9 = m 10 = mm				
4.034/4.064	Alx physical minimum		Unit:	
Relationship to parameter: 4.033/4.063 4.035/4.065	Parameter manual:	Transfer status:	min: -10000	Intrinsic value (to be entered!)
			max: +10000	
	S. xy	2	Def: 0	
Selection of the lower limit of a physical quantity to be displayed.				
4.035/4.065	Alx physical maximum		Unit:	
Relationship to parameter: 4.033/4.063 4.035/4.065	Parameter manual:	Transfer status:	min: -10000	Intrinsic value (to be entered!)
			max: +10000	
	S. xy	2	Def: 100	
Selection of the upper limit of a physical quantity to be displayed.				
4.036/4.066	Alx time wire breakage		Unit:	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 32767	
	S. xy	2	Def: 0	
After connecting to the mains, the line break connection is only activated after this set time.				



4,037/4,067	AIx inverse		Unit: integer	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 1	
	S. xy	2	Def: 0	
<p>The signal of the analogue input can be inverted here.            0 = Inactive (ex. 0 V = 0% 10 V = 100%)            1 = active (ex. 0 V = 100% 10V = 0%)</p>				

### 7.3.6 Digital inputs

4.110 – 4.113	DIx inverse		Unit: integer	
Relationship to parameter:	Parameter HB:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 1	
	S. xy	2	Def: 0	
<p>Using this parameter, the digital input can be inverted.            0 = inactive            1 = active</p>				

### 7.3.7 Analogue output

4,100	AO1 function		Unit: integer	
Relationship to parameter: 4.101 4.102	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 40	
	S. xy	2	Def: 5	
<p>Selection of the process value that is output at the analogue output.            Depending on the process value selected, the standard (4,101/4,102) must be adapted.            0 = not assigned/drive controller soft PLC            1 = intermediate circuit voltage            2 = mains voltage            3 = motor voltage            4 = motor current            5 = actual frequency            6 = speed measured externally by speed sensor (if available)            7 = current angle or position (if available)            8 = IGBT temperature            9 = inner temperature            10 = analogue input 1            11 = analogue input 2            12 = rated frequency            13 = motor power            14 = torque            15 = field bus            16 = PID setpoint            17 = PID actual value</p>				

4.101	AO1 standard Low		Unit:	
Relationship to parameter: 4.100	Parameter HB:	Transfer status:	min: -10000	Intrinsic value (to be entered!)
			max: +10000	
	S. xy	2	Def: 0	
<p>Describes the range to be resolved to the output voltage 0 - 10 V or output current 0 - 20mA.</p>				

4.102	AO1 standard High		Unit:	
Relationship to parameter: 4.100	Parameter HB:	Transfer status:	min: -10000	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: +10000	
Describes the range to be resolved to the output voltage 0 - 10 V or output current 0 - 20mA.			Def: Type-specific	

### 7.3.8 Digital outputs

For the digital outputs 1 and 2 (DOx - illustration DO1/DO2)

4,150/4,170	DOx function		Unit: integer	
Relationship to parameter: 4.151/4.171 4.152/4.172	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 51	
Selection of the process variable to which the output should switch. 0= not assigned/integrated soft PLC 1= intermediate circuit voltage 2= mains voltage 3= motor voltage 4= motor current 5= actual frequency value 6= - 7= - 8= IGBT temperature 9= inner temperature 10= error (NO) 11= error inverted (NC) 12= output stage release 13= digital input 1 14= digital input 2 15= digital input 3 16= digital input 4 17= ready for operation (power supply on, hw release is missing, motor at standstill) 18= ready (power supply on, hw release set, motor at standstill) 19= operation (power supply on, hw release set, motor rotates) 20= ready for operation + ready 21= ready for operation + ready + operation 22= ready + operation 23 = motor power 24 = torque 25 = field bus 26 = analogue input 1 27 = analogue input 2 28 = PID setpoint 29 = PID actual value 50 = motor current limit active 51 = setpoint-actual value (parameters 6,070 - 6,071)			Def: 4.150: 18 4.170: 19	

4.151/4.171	DOx On		Unit:	
Relationship to parameter: 4.150/4.170	Parameter HB:	Transfer status:	min: -10000	<b>Intrinsic value (to be entered!)</b>
	S. xy	2	max: 10000	
			Def: 0	
If the set process variable exceeds the switch-on limit, the output is set to 1.				

4.152/4.172	DOx Off		Unit:	
Relationship to parameter: 4.150/4.170	Parameter HB:	Transfer status:	min: -10000	<b>Intrinsic value (to be entered!)</b>
	S. xy	2	max: 10000	
			Def: 0	
If the set process variable falls below the switch-on limit, the output is set to 0.				

## 7.3.9 Relay

For the relays 1 and 2 (rel.x - illustration rel. 1/rel. 2)

4,190/4,210	Rel.x function		Unit: integer	
Relationship to parameter: 4.191/4.211 4.192/4.212	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 50	
			Def: 4.190: 11 4.210: 0	
<p>Selection of the process variable to which the output should switch.</p> <p>0= not assigned/integrated soft SPS            1= intermediate circuit voltage            2= mains voltage            3= motor voltage            4= motor current            5= actual frequency value            6= –            7= –            8= IGBT temperature            9= inner temperature            10= error (NO)            11= error inverted (NC)            12= output stage release            13= digital input 1            14= digital input 2            15= digital input 3            16= digital input 4            17= ready for operation (power supply on, HW release set, motor at standstill)            18= operation (power supply on, HW release set, motor rotates)            19= ready (power supply on, HW release set, motor rotates)            20= ready for operation + ready            21= ready for operation + ready + operation            22= ready + operation            23 = motor power            24 = torque            25 = field bus            26 = analogue input 1            27 = analogue input 2            28 = PID setpoint            29 = PID actual value            30 = STO channel 1            31 = STO channel 2            32 = frequency setpoint after ramp            33 = frequency setpoint            34 = actual speed value            35 = actual frequency value magnitude            36 = torque magnitude            37 =frequency setpoint after ramp magnitude            38 = frequency setpoint magnitude            39 = actual speed value magnitude            50 = active motor current limit            51 = setpoint-actual comparison (parameters 6,070 - 6,071)</p>				

4,191/4,211	Rel.x on		Unit:	
Relationship to parameter: 4.190/4.210	Parameter manual:	Transfer status:	min: -10000	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 10000	
			Def: 0	
If the set process variable exceeds the switch-on limit, the output is set to 1.				
4.192/4.212	Rel.x off		Unit:	
Relationship to parameter: 4.190/4.210	Parameter manual:	Transfer status:	min: -10000	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 10000	
			Def: 0	
If the set process variable falls below the switch-on limit, the output is set to 0.				
4.193/4.213	Rel.x on delay		Unit: s	
Relationship to parameter: 4.194/4.214	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 10000	
			Def: 0	
Specifies the duration of the closing delay.				
4.194/4.214	Rel.x off delay		Unit: s	
Relationship to parameter: 4.193/4.213	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 10000	
			Def: 0	
Specifies the duration of the turn-off delay.				

## 7.3.10 Virtual output

The virtual output can be configured as a relay and can be selected from the following parameters: 1,131 software - release/1,150 direction of rotation/1,054 ramp selection/5,090 parameter set change/5,010 + 5,011 external error 1 + 2

4,230	VO function		Unit: integer	
Relationship to parameter: 1,054 1,131 1,150 4,231 4,232 5,010/5,011 5,090	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 51	
			Def: 0	
	Selection of the process variable to which the output should switch. 0= not assigned/integrated soft SPS 1= intermediate circuit voltage 2= mains voltage 3= motor voltage 4= motor current 5= actual frequency value 6= - 7= - 8= IGBT temperature 9= inner temperature 10= error (NO) 11= error inverted (NC) 12= output stage release 13= digital input 1 14= digital input 2 15= digital input 3 16= digital input 4 17= ready for operation (power supply on, HW release set, motor at standstill) 18= operation (power supply on, HW release set, motor rotates) 19= ready (power supply on, HW release set, motor rotates) 20= ready for operation + ready 21= ready for operation + ready + operation 22= ready + operation 23 = motor power 24 = torque 25 = field bus 26 = analogue input 1 27 = analogue input 2 28 = PID setpoint 29 = PID actual value 30 = STO channel 1 31 = STO channel 2 32 = frequency setpoint after ramp 33 = frequency setpoint 34 = actual speed value 35 = actual frequency value magnitude 36 = torque magnitude 37 =frequency setpoint after ramp magnitude 38 = frequency setpoint magnitude 39 = actual speed value magnitude 50 = active motor current limit 51 = Actual setpoint comparison (para. 6,070 - 6,071)			

4,231	VO on		Unit:	
Relationship to parameter: 4,230	Parameter manual:	Transfer status:	min: 32767	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 32767	
			Def: 0	
If the set process variable exceeds the setting limit, the output is then set to 1.				

4,232	VO off		Unit: s	
Relationship to parameter: 4,230	Parameter manual:	Transfer status:	min: 32767	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 32767	
			Def: 0	
If the set process variable falls below the setting limit, the output is then set to 0.				

4,233	VO on delay		Unit: s	
Relationship to parameter: 4,234	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 10000	
			Def: 0	
Specifies the duration of the closing delay.				

4,234	VO off delay		Unit:	
Relationship to parameter: 4.1233	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 10000	
			Def: 0	
Specifies the duration of the turn-off delay.				

### 7.3.11 External error

5.010/5.011	External error 1/2		Unit: integer	
Relationship to parameter: 4,110 to 4,113 4,230	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 7	
			Def: 5.010: 4 5.011: 0	
Selection of source via which an external error can be reported. 0 = not assigned/integrated soft PLC 1 = digital input 1 2 = digital input 2 3 = digital input 3 4 = digital input 4 5 = virtual output (parameter 4,230) 6 = analogue input 1 (must be selected in parameter 4,030) 7 = analogue input 2 (must be selected in parameter 4,060) When a high signal exists at the selected digital input, the drive controller with error no. 23/24 external error 1/2. By using the parameter 4,110 to 4,113 DIx inverse, the logic of the digital input can be inverted.				

## 7.3.12 Motor current limit

This function limits the motor current to a programmed maximum value, after reaching a parametrised current-time area.

This motor current limit is monitored at the application level and thus limited with relatively small dynamics. This has to be considered in the selection of this function.

The maximum value is determined by the parameter "motor current limit in %" (5.070). This is expressed in percentage and is based on the rated motor current from the type plate data "motor current" (33.031).

The maximum current-time area is calculated as the product of the parameter "motor current limit in s" (5.071) and the constant over current of 50% of the desired motor current limit.

As soon as this current-time area is exceeded, the motor current is limited by reducing the rotation speed to the limit value. Thus, if the output current of the drive controller exceeds the motor current (parameter 33.031) multiplied by the set limit in % (parameter 5.070) for the set time (parameter 5.071), the motor speed is reduced until the output current drops below the set limit.

The scaling down is done by a PI controller that works depending on the current difference.

The entire feature can be deactivated by setting the parameter "motor current limit in %" to zero (5.070).

5,070	Motor current limit		Unit: %	
Relationship to parameter: 5.071 33.031	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 250	
			Def: 0	
0 = deactivated See description Motor current limit [→ 72]				

5,071	Motor current limit		Unit: s	
Relationship to parameter: 5.070 33.031	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 100	
			Def: 1	
See description Motor current limit [→ 72]				

5.075	Transmission factor		Unit:	
Relationship to parameter: 33.034	Parameter HB:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 10000	
			Def: 1	
Here, a transmission factor can be set. With the help of the transmission factor, the display of the mechanical speed can be adapted.				



**7.3.13 Blocking detection**

<b>5,080</b>	<b>Blocking detection</b>		<b>Unit: integer</b>	
Relationship to parameter: 5,081	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 1	
			Def: 0	
Using this parameter can deactivate the blocking detection. 0 = inactive 1 = active				
<b>5,081</b>	<b>Blocking time</b>		<b>Unit: s</b>	
Relationship to parameter: 5,080	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 50	
			Def: 2	
Specifies the time after which a blocking is detected.				
<b>5,082</b>	<b>Active start-up error</b>		<b>Unit: integer</b>	
Relationship to parameter: 5,233	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 1	
			Def: 1	
Start-up error is defined as follows: Actual value reaches 10% of motor frequency after 30 seconds (if setpoint is < 10%, the error is not generated). If the power-up time is configured > 30 seconds, half power-up time is used instead of the 30 seconds. 0 = function deactivated 1 = function activated				
<b>5,083</b>	<b>Deactivation error log 11</b>		<b>Unit: integer</b>	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	2	max: 10	
			Def: 0	
(as of V 03.80) Logging the error no. 11 "Time Out Power" can be suppressed here, when supplied with external 24V. The error counter itself remains unaffected 0 = function deactivated 1 = function activated				

5,090		Change in the parameter set		Unit: integer	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)	
			max: 7		
			Def: 0		
	S. xy	2			
<p>Selection of the active record.                      0 = not assigned                      1 = record 1, active                      2 = record 2, active                      3 = digital input 1                      4 = digital input 2                      5 = digital input 3                      6 = digital input 4                      7 = integrated soft PLC                      8 = virtual output 1                      The 2nd record is only displayed on the PC software if this parameter is <math>\neq</math> 0. The values of the currently selected record are shown on the display of the hand-held unit.</p>					

5,200		Rotation MMI display		Unit: integer	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)	
			max: 1		
			Def: 0		
	S. xy	2			
<p>(as of V 03.80)                      Only for MMI in cover                      It can be determined here, whether the monitor or keyboard layout can be rotated by 180°.                      0 = function deactivated                      1 = function activated</p>					

5,201		Display MMI reten.		Unit: integer	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 1	Intrinsic value (to be entered!)	
			max: 5		
			Def: 1		
	S. xy	2			
<p>(as of V 03.80)                      The status screen shown in the MMI can be selected here.                      1 = status 01: Frequency setpoint/actual/motor current                      2 = status 02: Speed/motor current/process value 1                      3 = status 03: Speed/motor current/process value 2                      4 = status 04: Speed/PID setpoint/PID actual value                      5 = status 05: Customer PLC output quantity 1/2/3</p>					

## 7.4 Power parameters

### 7.4.1 Motor data

<b>33,001</b>	<b>Motor type</b>		<b>Unit: integer</b>	
Relationship to parameter: 33,010	Parameter manual:	Transfer status:	min: 1	Intrinsic value <b>(to be entered!)</b>
	S. xy	1	max: 2	
Selection of the motor type 1 = asynchronous motor 2 = synchronous motor Depending on the motor type selected, the corresponding parameters are displayed. The control mode (parameter 34,010) must also be chosen accordingly.			Def: 1	
<b>33,015</b>	<b>R optimisation</b>		<b>Unit: %</b>	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	1	max: 200	
If necessary, the start-up behaviour can be optimised using this parameter.			Def: 100	
<b>33,016</b>	<b>Motor phases monitoring</b>		<b>Unit: integer</b>	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	1	max: 1	
This parameter can deactivate the error monitoring "Motor connection interrupted" (error 45). 0 = monitoring deactivated 1 = monitoring activated			Def: 1	
<b>33,031</b>	<b>Motor current</b>		<b>Unit: A</b>	
Relationship to parameter: 5,070	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	1	max: 150	
Hereby, the rated motor current $I_{M,N}$ is set for either star or delta connection.			Def: Type-specific	
<b>33,032</b>	<b>Motor power</b>		<b>Unit: W</b>	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
	S. xy	1	max: 55000	
A power value [W] $P_{M,N}$ that is equal to the rated motor power must be set here.			Def: Type-specific	

33,034		Motor speed		Unit: rpm	
Relationship to parameter: 34.120 5.075	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>	
			max: 10000		
	S. xy	1	Def: Type-specific		
Here, the rated motor speed $n_{M,N}$ from the type plate data of the motor should be entered.					
33,035		Motor frequency		Unit: Hz	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 40	Intrinsic value <b>(to be entered!)</b>	
			max: 100		
	S. xy	1	Def: Type-specific		
The rated motor frequency $f_{M,N}$ is set here.					
33,050		Stator resistance		Unit: Ohm	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>	
			max: 30		
	S. xy	1	Def: Type-specific		
Here, the stator resistance can be optimised if the automatically determined value (on the motor identification) is not sufficient.					
33,105		Leakage inductance		Unit: H	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>	
			max: 100		
	S. xy	1	Def: 0		
Only for asynchronous motors. Here, the leakage inductance can be optimised if the automatically determined value (on the motor identification) is not sufficient.					
33,110		Motor voltage		Unit: V	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>	
			max: 680		
	S. xy	1	Def: Type-specific		
Only for asynchronous motors. Hereby, the rated motor voltage $U_{M,N}$ is set for either star or delta connection.					
33,111		Motor-cos phi		Unit: 1	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0.5	Intrinsic value <b>(to be entered!)</b>	
			max: 1		
	S. xy	1	Def: Type-specific		
Only for asynchronous motors. Here, the power factor $\cos\phi$ should be entered from the type plate data of the motor.					

33,200	Stator inductance		Unit: H	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 100	
			Def: 0	
	S. xy	1		
<p>Only for synchronous motors. Here, the stator inductance can be optimised if the automatically determined value (on the motor identification) is not sufficient.</p>				

33,201	Rated flow rate		Unit: mVs	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 5000	
			Def: 0	
	S. xy	1		
<p>Only for synchronous motors. Here, the rated flow rate can be optimised if the automatically determined value (on the motor identification) is not sufficient.</p>				

## 7.4.2 I<sup>2</sup>T

33,010	I <sup>2</sup> T factor of the motor		Unit: %	
Relationship to parameter: 33.031 33.101	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 1000	
			Def: 0	
	S. xy	2		
<p>Here, the percentage of current threshold (based on the motor current 33,031) can be adjusted at the start of integration. 0% = inactive</p>				

33,011	I <sup>2</sup> T time		Unit: s	
Relationship to parameter: 33.100	Parameter HB:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 1200	
			Def: 25	
	S. xy	2		
<p>Time after which the drive controller turns off with I<sup>2</sup>T.</p>				

33,138	Holding current time		Unit: s	
Relationship to parameter: 33.100	Parameter HB:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 128000	
			Def: 2	
	S. xy	2		
<p>Only for asynchronous motors. Is the time interval during which the drive is maintained with direct current after stoppage of the braking ramp.</p>				

## 7.4.3 Switching frequency

The internal switching frequency can be varied to control the power unit. A high setting value leads to noise reduction in the motor, but also to increased EMC emission and higher losses in the drive controller.

34,030	Switching frequency		Unit: Hz	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 1	Intrinsic value (to be entered!)
	S. xy	2	max: 4	
			Def: 2	
Selecting the switching frequency of the inverter. 1 = 16 kHz 2 = 8 kHz 4 = 4 kHz				

## 7.4.4 Controller data

34,010	Control mode		Unit: integer	
Relationship to parameter: 33.001 34.011	Parameter manual:	Transfer status:	min: 100	Intrinsic value (to be entered!)
	S. xy	2	max: 201	
			Def: 100	
Selection of the control mode. 100 = open loop asynchronous motor 200 = open loop synchronous motor				

34,020	Snap option		Unit: integer	
Relationship to parameter: 34,021	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
	S. xy	2	max: 1	
			Def: 1	
Using this parameter activates the snap option. 0 = inactive 1 = active				

34,021	Snap time		Unit: ms	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
	S. xy	2	max: 10,000	
			Def: 100	
Here, the snap time can be optimised if the automatically determined results (on the motor identification) are insufficient.				

34,090	n-controller K <sub>p</sub>		Unit: mA/rad/s	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
	S. xy	2	max: 10000	
			Def: 150	
Here, the controller gain of the speed controller can be optimised if the automatically determined results (on the motor identification) are not sufficient.				

34,091	n-controller T <sub>N</sub>		Unit: s	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 10	
			Def: 4	
	S. xy	2		
Here, the reset time of the speed controller can be optimised if the automatically determined results (on the motor identification) are not sufficient.				

34,110	Slip trimmer		Unit: integer	
Relationship to parameter: 33,034	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 1	
			Def: 0	
	S. xy	2		
Only for asynchronous motors. Using this parameter, the slip compensation can be optimised or deactivated. 0 = deactivated (behaviour as on the mains) 1 = the slip is compensated.				

34,130	Voltage control reserve		Unit:	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 2	
			Def: 0.95	
	S. xy	2		
Only for asynchronous motors. The voltage output can be adapted using this parameter.				

## 7.4.5 Square-law characteristic

34.120	Square-law characteristic		Unit: integer	
Relationship to parameter: 34.121	Parameter HB:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 1	
			Def: 0	
	S. xy	2		
Only for asynchronous motors. Here, the function of the square-law characteristic can be activated. 0 = inactive 1 = active				

34.121	Flow adjustment		Unit: %	
Relationship to parameter: 34.120	Parameter HB:	Transfer status:	min: 0	Intrinsic value (to be entered!)
			max: 100	
			Def: 50	
	S. xy	2		
Only for asynchronous motors. The percentage by which the flow should be reduced can be set here. Very large changes during operation may cause an overvoltage trip.				

## 7.4.6 Controller data for synchronous motor

34.225	Field weakening		Unit: integer	
Relationship to parameter:	Parameter HB: S. xy	Transfer status: 2	min: 0 max: 1 Def: 0	Intrinsic value <b>(to be entered!)</b>
<p>Only for synchronous motors. 0 = inactive, the motor cannot be run in the weakened field. 1 = active, the motor can be brought into the weakened field until the inverter has reached its current limit or the max. permissible EMC is achieved.</p>				
34.226	Starting current		Unit: %	
Relationship to parameter: 34.227	Parameter HB: S. xy	Transfer status: 2	min: 5 max: 1000 Def: 25	Intrinsic value <b>(to be entered!)</b>
<p>Only for synchronous motors. The flow which is set in the motor prior to its start can be adjusted here. Value in % of the rated motor current.</p>				
34.227	Initialisation time		Unit: s	
Relationship to parameter: 34.226	Parameter HB: S. xy	Transfer status: 2	min: 0 max: 100 Def: 0.25	Intrinsic value <b>(to be entered!)</b>
<p>Only for synchronous motors. The time in which the starting current 34.226 is applied can be set here.</p>				
34,228 – 34,230	Start-up behaviour		Unit: integer	
Relationship to parameter:	Parameter manual: S. xy	Transfer status: 2	min: 0 max: 1 Def: 0	Intrinsic value <b>(to be entered!)</b>
<p>Only for synchronous motors. Larger starting torques can be achieved by changing the start-up procedure to the "controlled" mode. 0 = regulated, the inverter switches directly to the control mode after the setting phase. 1 = controlled, following the setting phase, the field of rotation is increased to the starting frequency 34.230 controlled with the start-up ramp 34.229, then it is switched to the regulation mode.</p>				



### 7.4.7 Field bus

**NOTICE**

**Changing a parameter value via the field bus includes direct EEPROM writing access.**

6,060	Field bus address		Unit: integer	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
			max: 127	
S. xy	2		Def: 0	
<p>The address coding switches in the device must be set to 00 in order to use this address. The drive controller takes over a change of the field bus address only after a restart (as of V 03.80). Profibus devices are automatically set to the "Default 125" address for "00" address code switch position and parameter "0".</p>				

6,061	Field bus baud rate		Unit: integer	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
			max: 8	
S. xy	2		Def: 2	
<p>Only for CanOpen:            0 = 1 MBit,            2 = 500 kBit,            3 = 250 kBit,            4 = 125 kBit,            6 = 50 kBit,            7 = 20 kBit,            8 = 10 kBit</p>				

6,062	Bus timeout		Unit: s	
Relationship to parameter:	Parameter manual:	Transfer status:	min: 0	Intrinsic value <b>(to be entered!)</b>
			max: 100	
S. xy	2		Def: 5	
<p>Bus Timeout if no field bus telegram is received after expiry of the set time, the drive controller switches off with the "Bus Timeout" error.            The function is only activated after successfully receiving a telegram.            0 = monitoring deactivated.</p>				

6,070/6,071	Deviation of setpoint/actual value		Unit: %	
Relationship to parameter: 4,150 4,170 4,190 4,210 4,230	Parameter manual:  S. xy	Transfer status:  2	min: 0%/0 sec. max: 100%/32767 sec. Def: 0%/0 sec.	Intrinsic value (to be entered!)
<p>This function enables a setpoint/actual value comparison. The result is issued via a field bus status word or a digital output. The tolerance range of the setpoint can be determined by using parameter 6,070. Time can be set via parameter 6,071 of which the actual value must be outside the tolerance range, before resetting the output.</p> <p>Example:            Operating mode = PID control            PID setpoint = 50%            6,070 = 10%            6,071 = 1 sec.</p> <p>As soon as the actual value is between 40% and 60%, the output is set.            If the actual value lies 1 sec. outside 40% to 60%, the output is set back.</p>				

In this chapter, you will find

- A display of the LED flash codes for error detection
- Description of error detection using PC tools
- List of errors and system errors
- Notes on error detection using the hand-held unit MMI

 **WARNING**

**Risk of injury and danger of electric shock!**

**The non-observance of warnings can result in severe bodily injury or substantial property damage.**





















1. Repairs on the device may only be carried out by the manufacturer.
2. Any defective parts or components must be replaced using parts included in the relevant spare parts list.
3. Prior to opening, assembly or disassembly, the drive controller must be unlocked.



## 8.1 Display of the LED flash codes for error detection



When an error occurs, the LEDs on the drive controller display a flash code via which the error can be diagnosed.

The following table gives an overview.

### LED flash codes

Red LED	Green LED	Status
		Bootloader active (flashing alternately)
		Ready for operation (enable En_HW for operation)
		Operation
		Warning
		Error
		Motor data label
		Initialisation
		Firmware update
		Bus error operation
		Bus error ready for operation

 LED off  
 LED flashes

 LED on  
 LED flashes quickly

## 8.2 List of errors and system errors

When an error occurs, the drive controller switches off; for the corresponding error numbers, refer to the flash code table or the PC tool.

**Error messages can only be acknowledged when the error is no longer present.**

! Error messages can be acknowledged as follows:

1. Digital input (programmable)
2. Via the hand-held unit MMI
3. Automatic acknowledgement function (parameter 1,181)
4. Switching the device on and off
5. Via field bus (CANOpen, Profibus DP, EtherCAD)

Below is a list of possible error messages. For errors not listed here, please contact the manufacturer.

### Error detection

No.	Error name	Error description	Possible cause/remedy
1	Low voltage 24 V application	Supply voltage of the application is less than 15 V	Overload of the 24 V supply
2	Over-voltage 24 V application	Supply voltage of the application is greater than 31 V	Internal 24 V supply is not OK or external power supply is not OK
6	Version error of client PLC	The version of the client PLC does not match the device firmware	Check the version numbers of the customer PLC and device firmware
8	Communication application<>performance	The internal communication between the application and power printed circuit board is out of order	EMC faults
10	Parameters distributor	The internal distribution of the parameters during the initialisation has failed	Parameter set is incomplete
11	Time Out Power	The power unit does not respond	Operation with 24 V without power supply
13	Cable breakage analogue input 1 (4 - 20 mA / 2 - 10 V)	Current or voltage is less than the lower limit of the analogue input 1 (this error monitoring is activated by setting the parameter 4,021 to 20%)	Cable breakage, defective external sensor
14	Cable breakage analogue input 2 (4 - 20 mA / 2 - 10 V)	Current or voltage is less than the lower limit of the analogue input 2 (this error monitoring is activated by setting the parameter 4,021 to 20%)	Cable breakage, defective external sensor
15	Blocking detection	The drive shaft of the motor is blocked. 5,080	Remove blockage
16	PID dry run	No PID actual value despite of maximum revolutions	Defective PID actual value sensor. Extend dry run of parameter 3,072
17	Start-up error	Motor does not run/or starts incorrectly. 5,082	Check motor connections/check motor and control parameter; or deactivate error (5,082).
18	Overtemperature of drive controller application	Internal temperature too high	Insufficient cooling, low speed and high torque, clock frequency too high
21	Bus time-out	No response from the bus device or hand-held unit MMI/PC	Check bus wiring

No.	Error name	Error description	Possible cause/remedy
22	Confirmation error	The number of max. automatic acknowledgements (1,182) has been exceeded	Check error history and eliminate errors
23	External error 1	The parametrised error input is active. 5,010	Eliminate external error
24	External error 2	The parametrised error input is active. 5,011	Eliminate external error
25	Motor recognition	Motor identification errors	Check the connections to the drive controller/motor and PC/MMI hand-held unit/drive controller! Restart of the motor identification!
26	STO inputs plausibility	The conditions of the two STO inputs were not identical for more than 2 seconds.	Incorrect connection of the STO inputs. Check appropriate external wiring.
32	IGBT trip	Protection of the IGBT module from overcurrent has been triggered	Short circuit in motor or motor cable/controller settings
33	Intermediate circuit over-voltage	The maximum intermediate circuit voltage has been exceeded	Recovery through motor in regenerative operation/mains voltage too high/incorrect setting of the speed controller/braking resistor is not connected or defective/ramp times too short
34	Intermediate circuit undervoltage	The minimum intermediate circuit voltage was not reached	Mains voltage too low/mains defective/check wiring
35	Motor overtemperature	Motor PTC has been triggered	Overload of the motor (e.g. high torque at low speed)/ambient temperature too high
36	Interruption in mains supply	Interruption of the adjacent mains voltage	One phase missing/mains voltage supply is interrupted
38	Overtemperature IGBT module	Overtemperature IGBT module	Insufficient cooling, low speed and high torque, clock frequency too high
39	Overcurrent	Maximum output current of the drive controller exceeded	Motor blocked/check motor connection/incorrect setting of the speed controller/check motor parameter/ramp times too small/ brake not opened
40	Drive controller over-temperature	Internal temperature too high	Cooling insufficient/low speed and high torque/clock frequency too high/continuous overload/reduce ambient temperature/check fan
42	I <sup>2</sup> T motor protection switch-off	The internal I <sup>2</sup> T motor protection (parametrisable) has been triggered	Continuous overload
43	Grounding	Grounding of a motor phase	Insulation fault
45	Motor connection interrupted	No motor current despite control by the drive controller	No motor connected or partially connected. Check phases or motor connections; or connect correctly. *
46	Motor parameter	Plausibility check of the motor parameters has failed	Parameter set not OK
47	Drive controller parameters	Plausibility check of the drive controller parameters has failed	Parameter set not OK, motor type 33,001 and control mode 34,010 not plausible

## 8 Error detection and elimination



No.	Error name	Error description	Possible cause/remedy
48	Type plate data	No motor data has been entered.	Enter motor data according to the rating plate
49	Limitation of power classes	Max. overload of the drive controller exceeded for more than 60 seconds.	Check application/reduce load/scale-up the drive controller size
53	Motor tilted	Lost field orientation only for synchronous motors	Load too big. Optimise control parameter.

\* In exceptional cases, the error in synchronous motors can be displayed incorrectly when idling (very low motor current).

If the phases or motor connections are connected correctly, set parameter 33,016 accordingly.

In this chapter, you will find

- a description of the disassembly of the drive controller
- Information on professional disposal

### 9.1 Disassembly of the drive controller



 **DANGER**

**Danger of electric shock!**

**Danger of electric shock and electric discharge of capacitors.**

- ① Switch off drive controller and secure from switching back on.  
✓ After switching off, wait two minutes (discharge time of capacitors).

1. Open cover of drive controller.
2. Loosen cable on the terminals.
3. Remove all lines.
4. Remove connection screws of drive controller/adapter plate.
5. Remove drive controller.

### 9.2 Information on professional disposal

Dispose of drive controllers, packaging and replaced parts according to the provisions of the country in which the drive controller was installed.

The drive controller may not be disposed with household waste.

10.1 General data

Technical data 400 V devices

Size	MA	MB				MC		MD			
Recommended motor power	1.5	2.2	3.0	4.0	5.5	7.5	11.0	15.0	18.5	22.0	
Ambient temperature	-25°C [-13°F] (non-condensing) up to +50°C [+122°F] (without derating) *										
Mains voltage[V]	3~ 400 -10% – 480 +10%										
Mains frequency [Hz]	47 – 63										
Line system configurations	TN/TT										
Mains current [A]	3.3	4.6	6.2	7.9	10.8	14.8	23.2	28.2	33.2	39.8	
Rated current, effective [IN at 8 kHz/400 V]	4.0	5.6	7.5	9.5	13.0	17.8	28.0	34.0	40.0	48.0	
Minimum braking resistance [Ω]	100	50			50		30				
Maximum overload	150% of rated current for 60 s									130%	
Switching frequency [kHz]	4, 8, 16 (factory setting 8)										
Cyclic frequency [Hz]	0 – 400										
Protection function	Over/undervoltage, I <sup>2</sup> t limitation, short circuit, motor inverter temperature, anti-tilt protection, anti-lock system										
Process control	Freely configurable PID controller										
Dimensions L x W x H [mm]	233 x 153 x 120	270 x 189 x 140			307x223x181		414 x 294 x 232				
Weight including adapter plate [kg]	3.9	5.0			8.7		21.0				
Protection class [IPxy]	65						55				
EMC	observed according to DIN EN 61800-3, class C2										

\*according to UL standard 508C, see UL Specification (English version) [→ 96].

Designation	Function
Digital inputs 1-4	- Switching level low < 5 V/high > 15 V - I <sub>max</sub> (at 24 V) = 3 mA - R <sub>in</sub> = 8.6 kOhm
Analogue inputs 1, 2	- In +/- 10 V or 0 - 20mA - In 2 - 10 V or 4 - 20 mA - resolution 10 bit - tolerance +/- 2% voltage input: - R <sub>in</sub> = 10 kOhm current input: - Output load = 500 Ohm
Digital outputs 1, 2	- Short-circuit-proof - I <sub>max</sub> = 20 mA
Relay 1, 2	1 changeover contact (NO/NC) Maximum switching power*: - for resistive load (cos j = 1): 5 A at ~230 V or 5 A at = 30 V - at inductive load (cos φ = 0.4 and L/R = 7 ms): 2 A at ~ 230 V or 2 A at = 30 V Maximum response time: 7 ms ± 0.5 ms Electric service life: 100,000 switching cycles



Designation	Function
Analogue output 1 (current)	- Short-circuit-proof - I <sub>out</sub> = 0..20 mA - output load = 500 Ohm - tolerance +/- 2%
Analogue output 1 (voltage)	- Short-circuit-proof - U <sub>out</sub> = 0..10 V - I <sub>max</sub> = 10 mA - tolerance +/- 2%
Voltage supply 24 V	- Auxiliary voltage U = 24 V DC - short-circuit-proof - I <sub>max</sub> = 100 mA - external 24 V supply possible
Voltage supply 10 V	- Auxiliary voltage U = 10 V DC - short-circuit-proof - I <sub>max</sub> = 30 mA

\*According to UL standard 508C, max. 2 A is permitted

## 10.2 Derating of output power


The drive controllers are equipped with two built-in PTC resistors (positive temperature coefficient thermistors) that monitor both the cooling element as well as the internal temperature. Once an allowable IGBT temperature of 95 °C or an allowable internal temperature of 85 °C is exceeded, the drive controller switches off.

Drive controllers in the power range 1.5 kW - 18.5 kW are designed for an overload of 150% for 60 s (every 10 minutes), the drive controller with rated power of 22 kW for an overload of 130% for 60 s (every 10 min.). For these conditions, reduction of the overload capacity or its time is to be taken into account:


- A clock frequency set permanently too high > 8 kHz (depending on load).
- A permanently increased cooling element temperature, caused by a blocked air flow or a thermal block (dirty cooling ribs).
- Depending on the installation type, permanently too high ambient temperature.

The respective max. output values can be defined, based on the following characteristic curves.


### 10.2.1 Derating through increased ambient temperature

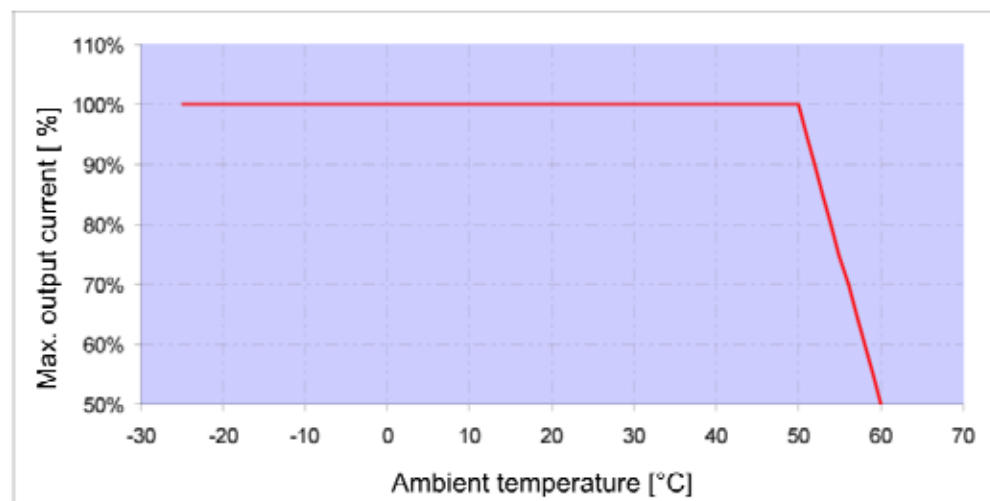

Derating for motor-mounted drive controllers (all sizes)

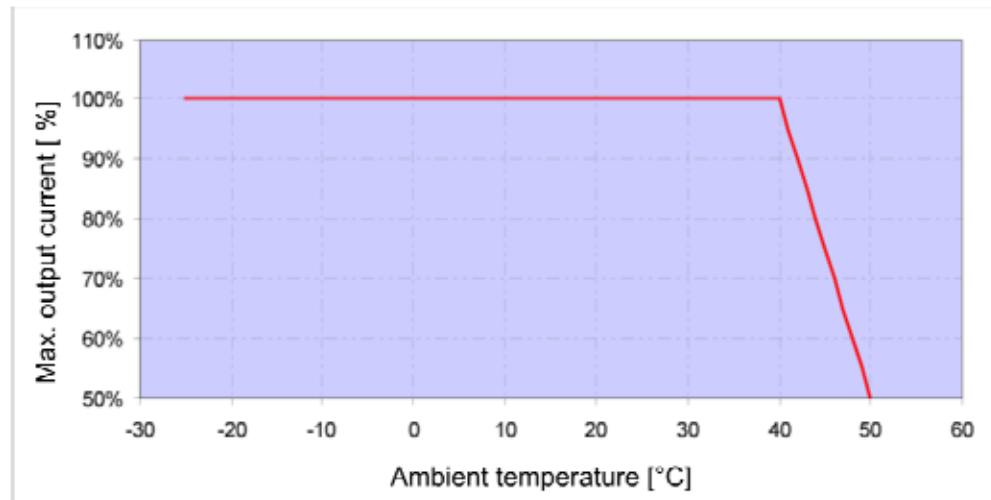

Derating for wall-mounted drive controllers (sizes A - C)

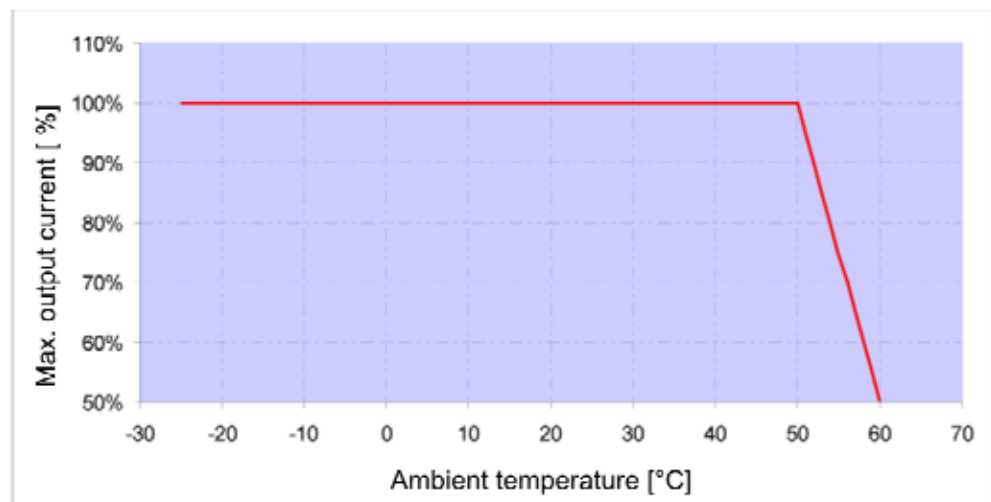

Derating for wall-mounted drive controllers (size C with optional fan and size D)

### 10.2.2 Derating due to installation altitude

The following applies to all drive controllers:


- In S1 mode, no power reduction is required up to 1,000 m above sea level.
- In the range from 1,000 m up to and including 2000 m, power reduction of 1% is required for every 100 m installation altitude. An overvoltage category 3 is observed!
- In the range from 2,000 m up to and including 4,000 m, the overvoltage category 2 must be observed due to the lower air pressure!

To comply with the overvoltage category:


- an external surge protector should be used in the mains supply line to the drive controller.
- the input voltage should be reduced.

Please contact the manufacturer.

The respective max. output values can be defined, based on the following characteristic curves.

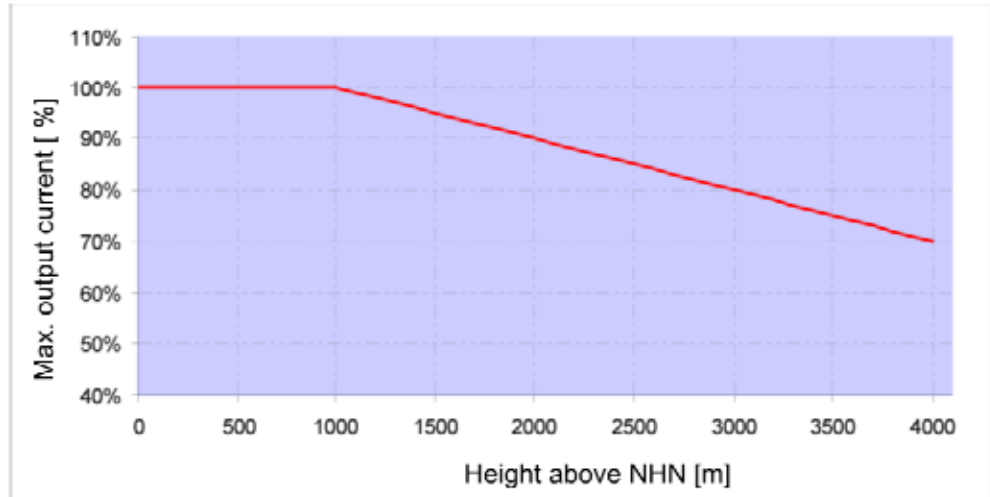

*Derating of the maximum output current due to the installation altitude*

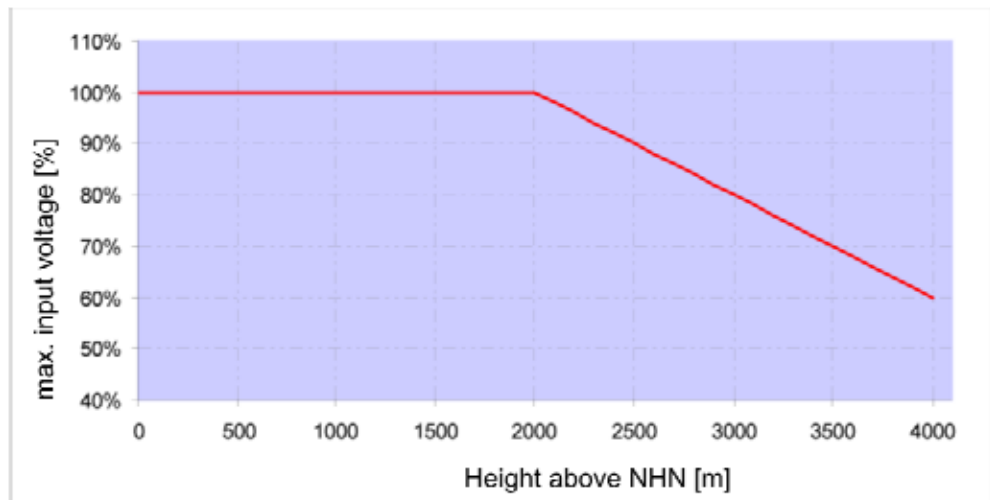


*Derating of the maximum input voltage due to the installation altitude*

### 10.2.3 Derating due to the clock frequency

The following illustration shows the output current as a function of the clock frequency. In order to limit the heat losses in the drive controller, the output current must be reduced.

Note: There is no automatic reduction of the clock frequency!

The max. output values can be defined, based on the following characteristic curve.

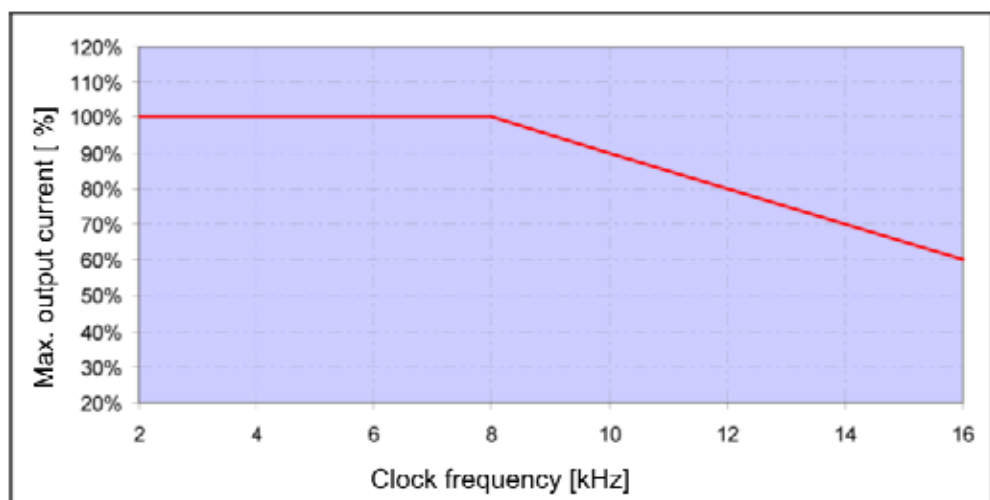

*Derating of the maximum output current due to the clock frequency*

In this section, you will find brief descriptions of the following optional accessories

- Adapter plates
- Hand-held unit MMI, including connection cable RJ9 to connector M12


## 11.1 Wall-mounted adapter plate

For each drive controller size, there is a standard wall-mounted adapter plate (with integrated adapter board for BG A to BG C).


Download of 3D files for drive controller and adapter plates under [www.gd-elmoietschle.com](http://www.gd-elmoietschle.com).

Four holes are already available for mounting the adapter plate, as well as an EMC cable gland.


Drive controller size	A	B	C	D
Power [kW]	1.5	2.2 – 4.0	5.5 – 7.5	11.0 – 22.0
Designation	2FX1619-0ER00	2FX1649-0ER00	2FX1669-0ER00	2FX1699-0ER00
Art. no.	1650001619	1650001649	1650001669	1650001699

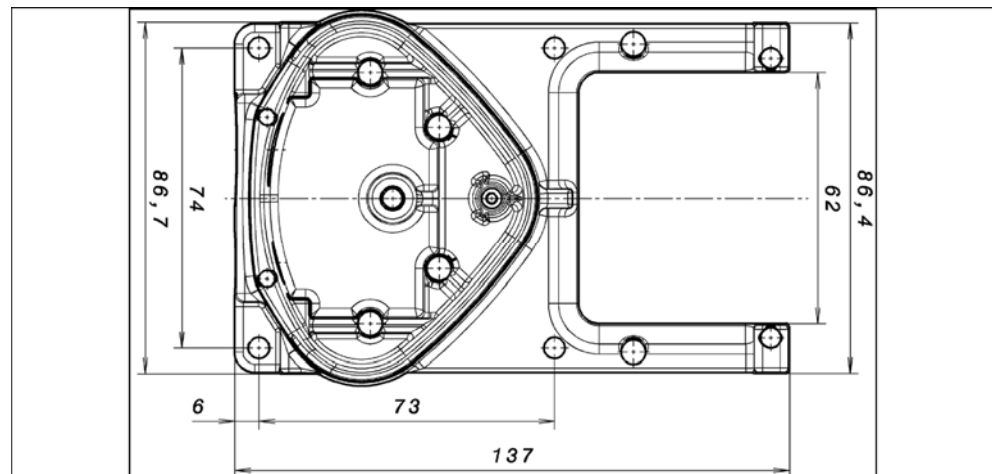


Drill pattern of standard wall-mounted adapter plate BG A

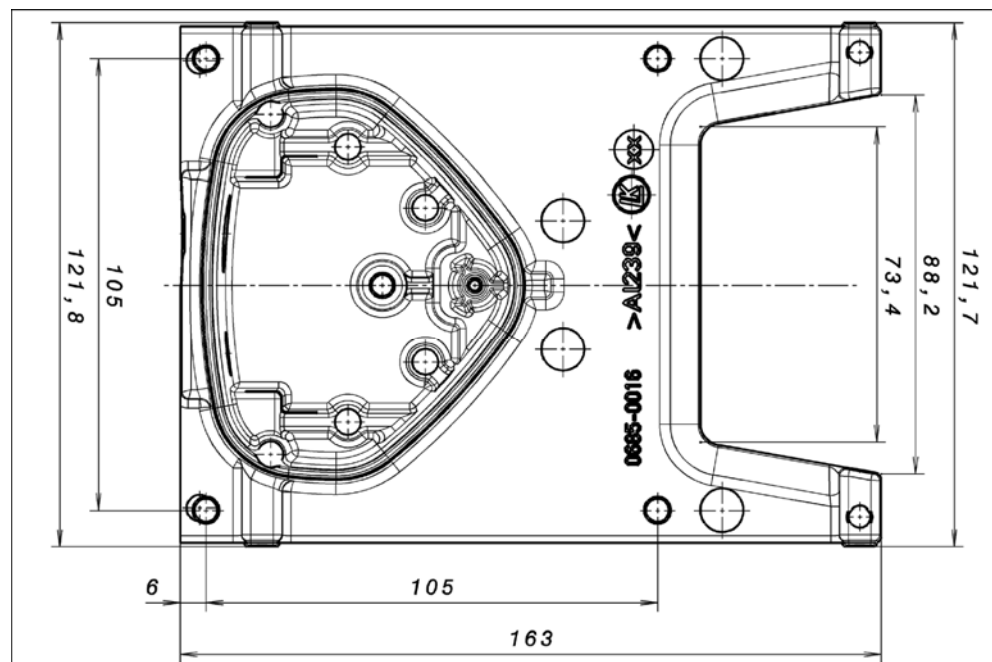

Drill pattern of standard wall-mounted adapter plate BG B

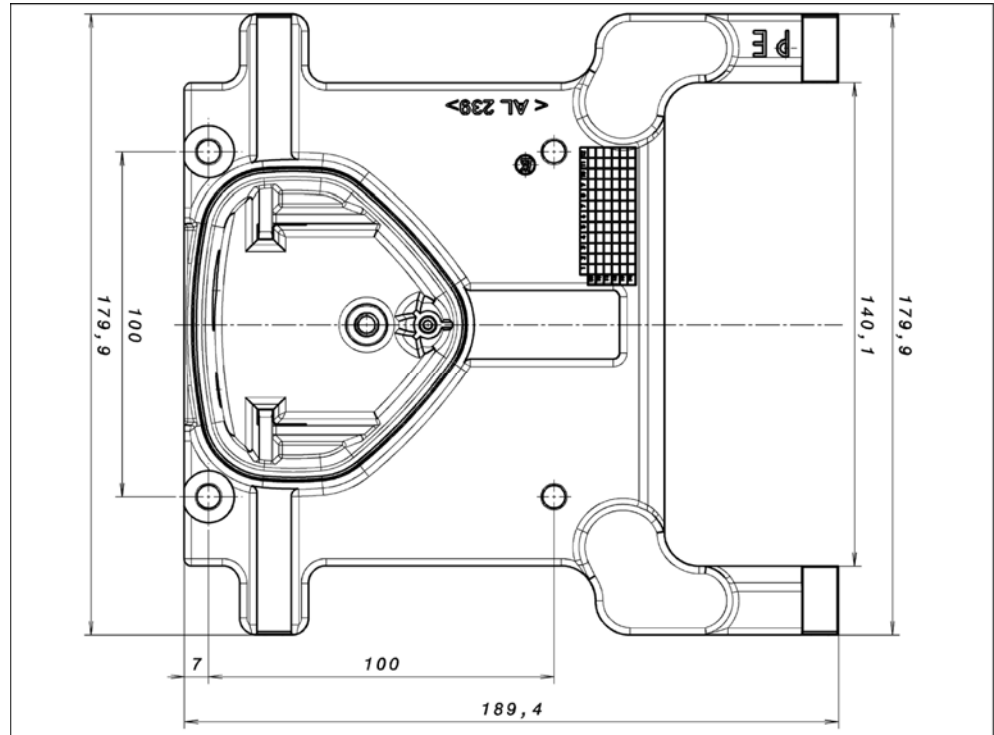

Drill pattern of standard wall-mounted adapter plate BG C

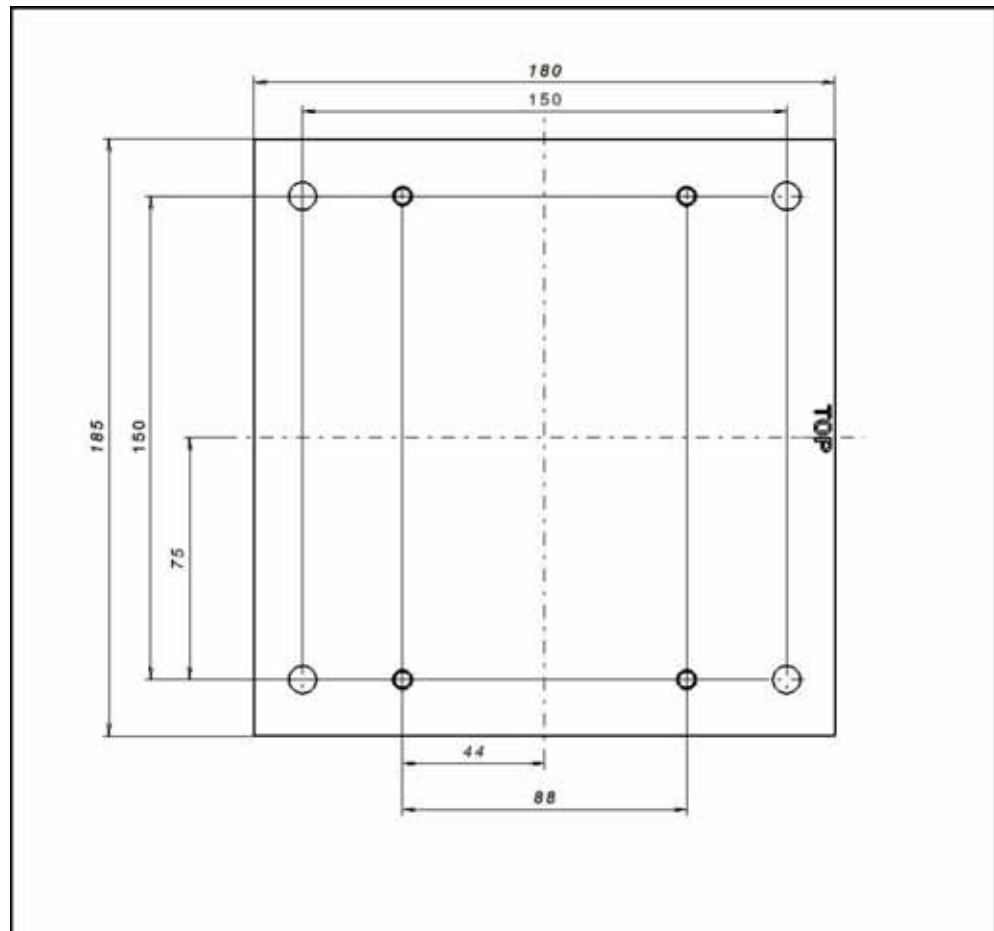

Drill pattern of standard wall-mounted adapter plate BG D

### 11.2 Hand-held unit MMI, including 3m connection cable RJ9 to connector M12

The hand-held unit MMI 2FX4520-0ER00 is a purely industrial product (accessory) which may only be used in conjunction with a drive controller! The hand held unit MMI is connected to the integrated M12 interface of the drive controller. By means of this control unit, the user is able to write (program) and/or display all parameters of the drive controller. Up to 8 complete records can be stored in a hand held unit MMI and copied to other drive controllers. As an alternative to free PC software, complete commissioning is possible, external signals are not necessary.

### 11.3 USB PC communication cable to connector M12/RS485 (integrated converted)

As an alternative to the MMI hand-held unit, a drive control can also be commissioned with the help of the PC adapter 2FX4521-0ER00 and the PC software. The PC software is available to you free of cost on the manufacturer homepage under [www.gd-elmorietschle.com](http://www.gd-elmorietschle.com).

This chapter contains information about electromagnetic compatibility (EMC), and guidelines, norms and standards.

For binding information about the relevant drive control approvals, please refer to the relevant type plate!

### 12.1 EMC limit classes

Please note that the EMC limit classes can only be achieved if the standard switching frequency of 8kHz is observed. In dependence of the installation material used and/or under extreme ambient conditions, it may be necessary to use additional braid breakers (ferrite rings). For possible wall mounting, the length of the shielded motor cable (applied on both sides across a large area) (max. 3m) may not exceed the permissible limits!

Furthermore, EMC screw connections should be used on both sides (drive controller and motor side) for EMC-compliant wiring.

#### **NOTICE**

**This product may cause high-frequency interference in a residential environment, which could require interference suppression measures.**

### 12.2 Classification acc. to IEC/EN 61800-3

The generic standard defines test procedures and severity levels for every environment in the drive control category; these have to be complied with.

#### **Definition of environment**

First environment (residential, commercial and industrial area):

All "areas" that are directly supplied by a public low-voltage connection, such as:

- Residential area, e.g. houses, apartments etc.
- Retail area, e.g. shops, supermarkets
- Public institutions, e.g. theatres, stations
- Outside areas, e.g. petrol stations and parking areas
- Light industry, e.g. workshops, laboratories, small businesses

Second environment (industry):

Industrial surroundings with their own supply network that is separated from the public low-voltage supply by a transformer.

### 12.3 Standards and guidelines

The following specifically apply:

- Directive on Electromagnetic Compatibility (Directive 2004/108/EC of the Council EN 61800-3:2004)
- Low Voltage Directive (Directive 2006/95/EC of the Council EN 61800-5-1:2003)
- Product standards list

## 12.4 Approval according to UL

### 12.4.1 UL Specification (English version)

#### Maximum Ambient Temperature (without models Suffix S10):

Electronic	Adapter	Ambient	Suffixe
INV MA 2 0.37	ADP MA WDM	45° C	-
INV MA 2 0.55	ADP MA WDM	45° C	-
INV MA 2 0.75	ADP MA WDM	45° C	-
INV MA 2 1.10	ADP MA WDM	40° C	-
INV MA 4 1.50	ADP MA WDM	40° C	-
INV MB 4 2.2	ADP MB WDM	45° C	-
INV MB 4 3.0	ADP MB WDM	40° C	-
INV MB 4 4.0	ADP MB WDM	35° C	-
INV MC 4 5.5	ADP MC WDM	40° C	Gx0
INV MC 4 7.5	ADP MC WDM	35° C	Gx0
INV MC 4 5.5	ADP MC WDM	55° C	Gx1
INV MC 4 7.5	ADP MC WDM	50° C	Gx1
INV MC 4 5.5	ADP MC WDM	50° C	Gx2
INV MC 4 7.5	ADP MC WDM	45° C	Gx2
INV MD 4 11.0	ADP MD WDM	55° C	-
INV MD 4 15.0	ADP MD WDM	50° C	-
INV MD 4 18.5	ADP MD WDM	40° C	-
INV MD 4 22.0	ADP MD WDM	35° C	-

#### Maximum Surrounding Temperature:

Electronic	Adapter	Ambient	Suffixe
INV MC 4 5.5	ADP MC WDM	40° C	S10
INV MC 4 7.5	ADP MC WDM	35° C	S10

#### Required Markings

Enclosure intended for use with field-installed conduit hubs, fittings or closure plates UL approved in accordance to UL514B and CSA certified in accordance to C22.2 No. 18, environmental Type 1 or higher.

The INVEOR INV MC 4 with suffix S10 is for use in Pollution Degree 2 only.

Internal Overload Protection Operates within 60 seconds when reaching 150 % of the Motor Full Load Current

Suitable for use on a circuit capable of delivering not more than 5 kA rms symmetrical amperes, 230 Volts for INV Mx 2 or 480 Volts for INV Mx 4, maximum when protected by fuses.

“Warning” – Use fuses rated 600 V/50 A for INV MA 2 only.

“Warning” – Use fuses rated 600 V/10 A for INV MA 4 only.

“Warning” – Use fuses rated 600 V/30 A for INV MB 4 only.

“Warning” – Use fuses rated 600 V/30 A for INV MC 4 only.

“Warning” – Use fuses rated 600 V/70 A for INV MD 4 only.

Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the Manufacturer Instructions, National Electrical Code and any additional local codes.



All wiring terminals marked to indicate proper connections for the power supply, load and control circuitry.

The tightening, torque to connect the motor terminals, is 26.55 lb/in (size A to C) and 5.31 lb/in to connect the PTC (in all sizes).

**Instruction for operator and servicing instructions on how to mount and connect the products using the intended motor connection adapter, please see Installing the drive controller integrated in the motor [→ 25] and Adapter plates [→ 92] in the operating manual.**

Use 75° C copper wires only.

Drives do not provide over temperature sensing.

For Mx 4 used in Canada: TRANSIENT SURGE SUPPRESSION SHALL BE INSTALLED ON THE LINE SIDE OF THIS EQUIPMENT AND SHALL BE RATED 277 V (PHASE TO GROUND), 480 V (PHASE TO PHASE), SUITABLE FOR OVER-VOLTAGE CATEGORY III, AND SHALL PROVIDE PROTECTION FOR A RATED IMPULSE WITHSTAND VOLTAGE PEAK OF 2.5 kV

### Maximum Surrounding Temperature (sandwich version):

Electronic	Overall heatsink dimensions	Surrounding	Suffix
INV MA 2 0.37	(150x27x210) mm	50° C	Gx3
INV MA 2 0.55	(150x27x210) mm	50° C	Gx3
INV MA 2 0.75	(150x27x210) mm	50° C	Gx3
INV MA 2 1.10	(150x27x210) mm	50° C	Gx3
INV MA 4 0.55	(150x27x210) mm	65° C	Gx3
INV MA 4 0.75	(150x27x210) mm	65° C	Gx3
INV MA 4 1.10	(150x27x210) mm	65° C	Gx3
INV MA 4 1.50	(150x27x210) mm	65° C	Gx3
INV MB 4 2.2	(200x40x250) mm	60° C	Gx3
INV MB 4 3.0	(200x40x250) mm	60° C	Gx3
INV MB 4 4.0	(200x40x250) mm	60° C	Gx3
INV MC 4 5.5	(216x83x300) mm	65° C	Gx3
INV MC 4 7.5	(216x83x300) mm	65° C	Gx3
INV MD 4 11.0	to be defined	to be defined	Gx3
INV MD 4 15.0	to be defined	to be defined	Gx3
INV MD 4 18.5	to be defined	to be defined	Gx3
INV MD 4 22.0	to be defined	to be defined	Gx3

### CONDITIONS OF ACCEPTABILITY:

**Use** - For use only in complete equipment where the acceptability of the combination is determined by Underwriters Laboratories Inc.

1. These drives are incomplete in construction and have to be attached to an external heatsink in the end-use. Unless operated with the heatsink as noted in item 2 of the conditions of acceptability below, temperature test shall be conducted in the end-use.
2. Temperature test was conducted with drive installed on aluminum heatsink, overall dimensions and ribs shape as outlined below:
3. Suitability of grounding for the combination of drive and heatsink needs to be verified in accordance with the end-use standard.
4. Temperature test was not conducted on models INV MD 4. Suitability of drive - heatsink combination shall be determined by subjecting to temperature test in the end-use.

### Required Markings

Internal Overload Protection Operates within 60 seconds when reaching 150 % of the Motor Full Load Current.

Suitable for use on a circuit capable of delivering not more than 5 kA rms symmetrical amperes, 230 Volts for INV Mx 2 or 480 Volts for INV Mx 4, maximum when protected by fuses.

“Warning” – Use fuses rated 600 V/50 A for INV MA 2 only.

“Warning” – Use fuses rated 600 V/10 A for INV MA 4 only.

“Warning” – Use fuses rated 600 V/30 A for INV MB 4 only.

“Warning” – Use fuses rated 600 V/30 A for INV MC 4 only.

“Warning” – Use fuses rated 600 V/70 A for INV MD 4 only.

Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the Manufacturer Instructions, National Electrical Code and any additional local codes.

All wiring terminals marked to indicate proper connections for the power supply, load and control circuitry.

**Instruction for operator and servicing instructions on how to mount and connect the products using the intended motor connection adapter, please see Installing the drive controller integrated in the motor [→ 25] and Adapter plates [→ 92] in the operating manual.**

Use 75° C copper wires only.

Drives do not provide over temperature sensing.

For use in Pollution degree 2 only.

For Mx 4 used in Canada: TRANSIENT SURGE SUPPRESSION SHALL BE INSTALLED ON THE LINE SIDE OF THIS EQUIPMENT AND SHALL BE RATED 277 V (PHASE TO GROUND), 480 V (PHASE TO PHASE), SUITABLE FOR OVER-VOLTAGE CATEGORY III, AND SHALL PROVIDE PROTECTION FOR A RATED IMPULSE WITHSTAND VOLTAGE PEAK OF 2.5 kV

## 12.4.2 Homologation CL (Version en française)

### Température ambiante maximale (sans modèles suffixe S10):

Électronique	Adaptateur	Ambiante	Suffixe
INV MA 2 0.37	ADP MA WDM	45° C	-
INV MA 2 0.55	ADP MA WDM	45° C	-
INV MA 2 0.75	ADP MA WDM	45° C	-
INV MA 2 1.10	ADP MA WDM	40° C	-
INV MA 4 1.50	ADP MA WDM	40° C	-
INV MB 4 2.2	ADP MB WDM	45° C	-
INV MB 4 3.0	ADP MB WDM	40° C	-
INV MB 4 4.0	ADP MB WDM	35° C	-
INV MC 4 5.5	ADP MC WDM	40° C	Gx0
INV MC 4 7.5	ADP MC WDM	35° C	Gx0
INV MC 4 5.5	ADP MC WDM	55° C	Gx1
INV MC 4 7.5	ADP MC WDM	50° C	Gx1
INV MC 4 5.5	ADP MC WDM	50° C	Gx2
INV MC 4 7.5	ADP MC WDM	45° C	Gx2
INV MD 4 11.0	ADP MD WDM	55° C	-
INV MD 4 15.0	ADP MD WDM	50° C	-
INV MD 4 18.5	ADP MD WDM	40° C	-
INV MD 4 22.0	ADP MD WDM	35° C	-

### Température environnante maximale :

Électronique	Adaptateur	Ambiante	Suffixe
INV MC 4 5.5	ADP MC WDM	40° C	S10
INV MC 4 7.5	ADP MC WDM	35° C	S10

### Mentions requises

Boîtier prévu pour une utilisation avec entrées de conduit fileté installées sur le terrain, raccords ou plaques d'obturation approuvées UL conformément à UL514B et certifiées CSA conformément à C22.2 No. 18, étiquetage environnemental de type 1 ou plus.

Le variateur INVEOR INV MC 4 avec le suffixe S10 est exclusivement conçu pour une utilisation en environnement de degré de pollution 2.

La protection interne contre les surcharges se met en marche en l'espace de 60 secondes une fois 150 % du courant nominal du moteur atteints

Convient pour une utilisation sur un circuit capable de livrer pas plus de 5 kA ampères symétriques rms, 230 volts pour INV Mx 2 ou 480 volts pour INV Mx 4 maximum en cas de protection par fusibles.

« Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/50 A pour INV MA 2 uniquement.

« Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/10 A pour INV MA 4 uniquement.

« Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/30 A pour INV MB 4 uniquement.

« Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/30 A pour INV MC 4 uniquement.

« Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/70 A pour INV MD 4 uniquement.

La protection intégrée contre les courts-circuits à semi-conducteur n'assure pas la protection du circuit de dérivation. Le circuit de dérivation doit être protégé conformément aux instructions du fabricant, au code national d'électricité et à tout autre code local additionnel.

Toutes les bornes de câblage avec repères pour les connexions correctes pour l'alimentation électrique, la charge et les circuits de commande.

Le couple de serrage pour la connexion des bornes du moteur est de 26,55 lb/in (taille A à C) et de 5,31 lb/in pour la connexion CTP (toutes les tailles).

**Pour les instructions destinées à l'opérateur et les instructions de service relatives au montage et à la connexion des produits à l'aide de l'adaptateur de connexion du moteur prévu à cet effet, voir les** Installation du régulateur d'entraînement intégré au moteur [→ 25] **et** Plaques adaptatrices [→ 92] **contenus dans le Manuel d'utilisation.**

Utiliser uniquement des câbles en cuivre 75° C.

Les entraînements ne permettent pas la détection de surtempérature.

Concernant le Mx 4 utilisé au Canada : LA SUPPRESSION DE TENSION TRANSITOIRE DOIT ÊTRE INSTALLÉE CÔTÉ LIGNE DE CET ÉQUIPEMENT ET AVOIR UNE VALEUR NOMINALE DE 277 V (PHASE-TERRE), 480 V (PHASE-PHASE), EN COMPATIBILITÉ AVEC LA CATÉGORIE DE SURTENSION III, ET DOIT OFFRIR UNE PROTECTION CONTRE UN PIC DE TENSION ASSIGNÉE DE TENUE AUX CHOCS DE 2,5 kV

### Température environnante maximale (version sandwich):

Électronique	Dimensions hors tout du dissipateur	Environnante	Suffixe
INV MA 2 0.37	(150x27x210) mm	50° C	Gx3
INV MA 2 0.55	(150x27x210) mm	50° C	Gx3
INV MA 2 0.75	(150x27x210) mm	50° C	Gx3
INV MA 2 1.10	(150x27x210) mm	50° C	Gx3
INV MA 4 0.55	(150x27x210) mm	65° C	Gx3
INV MA 4 0.75	(150x27x210) mm	65° C	Gx3
INV MA 4 1.10	(150x27x210) mm	65° C	Gx3
INV MA 4 1.50	(150x27x210) mm	65° C	Gx3
INV MB 4 2.2	(200x40x250) mm	60° C	Gx3
INV MB 4 3.0	(200x40x250) mm	60° C	Gx3
INV MB 4 4.0	(200x40x250) mm	60° C	Gx3
INV MC 4 5.5	(216x83x300) mm	65° C	Gx3
INV MC 4 7.5	(216x83x300) mm	65° C	Gx3
INV MD 4 11.0	to be defined	to be defined	Gx3
INV MD 4 15.0	to be defined	to be defined	Gx3
INV MD 4 18.5	to be defined	to be defined	Gx3
INV MD 4 22.0	to be defined	to be defined	Gx3

**CONDITIONS D'ACCEPTABILITÉ :**

**Utilisation** - Réserve à une utilisation dans un équipement complet pour lequel l'acceptabilité de la combinaison est déterminée par Underwriters Laboratories Inc.

1. Ces entraînements sont incomplets et doivent être raccordés à un dissipateur externe en utilisation finale. Sauf en cas d'utilisation avec dissipateur comme mentionné au point 2 des conditions d'acceptabilité ci-dessous, il est conseillé d'effectuer un test de température en utilisation finale.
2. Le test de température a été effectué avec un entraînement installé sur un dissipateur en aluminium, dimensions hors tout et forme d'ailettes comme indiqué ci-dessous :
3. La possibilité de mise à la terre de la combinaison entraînement et dissipateur doit être vérifiée conformément à la norme d'utilisation finale.
4. Le test de température n'a pas été conduit sur les modèles INV MD 4. Déterminer si la combinaison entraînement - dissipateur est appropriée à l'aide d'un test de température en utilisation finale.

**Mentions requises**

La protection interne contre les surcharges se met en marche en l'espace de 60 secondes une fois 150 % du courant nominal du moteur atteints.

Convient pour une utilisation sur un circuit capable de livrer pas plus de 5 kA ampères symétriques rms, 230 volts pour INV Mx 2 ou 480 volts pour INV Mx 4 maximum en cas de protection par fusibles.

« Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/50 A pour INV MA 2 uniquement.

« Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/10 A pour INV MA 4 uniquement.

« Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/30 A pour INV MB 4 uniquement.

« Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/30 A pour INV MC 4 uniquement.

« Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/70 A pour INV MD 4 uniquement.

La protection intégrée contre les courts-circuits à semi-conducteur n'assure pas la protection du circuit de dérivation. Le circuit de dérivation doit être protégé conformément aux instructions du fabricant, au code national d'électricité et à tout autre code local additionnel.

Toutes les bornes de câblage avec repères pour les connexions correctes pour l'alimentation électrique, la charge et les circuits de commande.

**Pour les instructions destinées à l'opérateur et les instructions de service relatives au montage et à la connexion des produits à l'aide de l'adaptateur de connexion du moteur prévu à cet effet, voir les** Installation du régulateur d'entraînement intégré au moteur [→ 25] **et** Plaques adaptatrices [→ 92] **contenus dans le Manuel d'utilisation.**

Utiliser uniquement des câbles en cuivre 75° C.

Les entraînements ne permettent pas la détection de surtempérature.

Réserve exclusivement à une utilisation en environnement de pollution de degré 2.

Concernant le Mx 4 utilisé au Canada: LA SUPPRESSION DE TENSION TRANSITOIRE DOIT ÊTRE INSTALLÉE CÔTÉ LIGNE DE CET ÉQUIPEMENT ET AVOIR UNE VALEUR NOMINALE DE 277 V (PHASE-TERRE), 480 V (PHASE-PHASE), EN COMPATIBILITÉ AVEC LA CATÉGORIE DE SURTENSION III, ET DOIT OFFRIR UNE PROTECTION CONTRE UN PIC DE TENSION ASSIGNÉE DE TENUE AUX CHOCS DE 2,5 kV



[www.gd-elmorietschle.de](http://www.gd-elmorietschle.de)  
[er.de@gardnerdenver.com](mailto:er.de@gardnerdenver.com)

**Gardner Denver  
Deutschland GmbH**  
Industriestraße 26  
97616 Bad Neustadt · Deutschland  
Tel. +49 9771 6888-0  
Fax +49 9771 6888-4000

**Gardner Denver  
Schopfheim GmbH**  
Roggenbachstraße 58  
79650 Schopfheim · Deutschland  
Tel. +49 7622 392-0  
Fax +49 7622 392-300

Elmo Rietschle is a brand of Gardner Denver

**Gardner  
Denver**

Your Ultimate Source for Vacuum and Pressure